

# **SL120 User Manual For Android**

**Version 1.0**

**April 18, 2014**

**StrongLink**

This picture show How to operate SL120 to read a tag (Note: the antenna on the behind of SL120 reader)



## 1: Start SL120 Reader App

Click the SL120 Reader label and will on the SL120 Reader operate software



Mobile RFID Reader



Copyright © 2013 All rights reserved.

## 2: Connect SL120 Reader

Insert the SL120 Reader into Radio connector and will realize the SL120 Reader, if success and will print the only SN code in the window



序号	EPC数据	次数
----	-------	----



设备已识别!

标签数 : 0

清空

>>>>开始<<<<

Copyright © 2013 All rights reserved.



序号	EPC数据	次数
----	-------	----

标签数 : 0

清空

>>>>开始<<<<

Copyright © 2013 All rights reserved.

## 3: Count the quantity of tags

Click the start button and move the IVF-RU01 over tags, read tags continually and will show the tags' EPC data and the number of read; Next Click the stop button will stop the process of

Counting quantity of tags; Click the clear button will clean the EPC data and the count number;



## 4: Operate the needed tag

After Counted quantity of tags, Click the tag 'we needed operate in the list of tags' EPC code, will enter the window of operating the tag.



Read /write the needed tag



Lock the needed tag



destroy the needed tag



## 5.Set the parameter

5.1 After counting quantity of tags,click the  in the main window will enter a other window as the



Copyright © 2013 All rights reserved.

5.2Click the Get button and get the quantity of electricity



5.3 Click the Get button and on/off the buzzer



5.4 Click the Read button to read tag and get the EPC+TID ID code



5.5 Success to get the EPC+TID ID code

