

2I386EW

**Intel Bay Trail-I E3825 /
E3845 (Dual Core / Quad Core) CPU,
DDR3L SODIMM 1333 MT/s,
2 x LAN / LVDS / Touch Screen / USB / COM**

**All-In-One eIO extension SBC
Intel Bay Trail-I E3825 / E3845 CPU, 2 x Intel GbE LAN,
2 x mini PCIe, VGA, Audio, SATA, USB, COM,
LVDS, Touch Screen, eIO, Wide Range DC-IN**

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS**

NO. 2I386EW

Release date: Feb. 26 2018

Contents

2I386EW	
Warning!.....	1
Hardware Notice Guide	2
CHAPTER 1 GENERAL INFORMATION	4
1-1 MAJOR FEATURE.....	5
1-2 SPECIFICATION	6
1-3 INSTALLING THE SO-DIMM	7
1-3-1 REMOVING THE SO-DIMM	9
1-4 DIRECTIONS FOR INSTALLING THE MINI CARD	10
1-5 PACKING LIST	11
CHAPTER 2 HARDWARE INSTALLATION	12
2-1 UNPACKING PRECAUTION	12
2-2 UNPACKING CHECKUP	13
2-3 DIMENSION-2I386EW	14
2-4 LAYOUT-2I386EW-CONNECTOR AND JUMPER	15
2-4-1 LAYOUT-2I386EW-CONNECTOR AND JUMPER BOTTOM	16
2-4-2 LAYOUT-2I386EW-FUNCTION MAP	17
2-4-3 LAYOUT-2I386EW-FUNCTION MAP BOTTOM	18
2-5 DIAGRAM-2I386EW	19
2-5-1 DIAGRAM-2I386EW	20
2-5-2 FUNCTION MAP-2I386EW	21
2-6 LIST OF JUMPERS	22
2-7 JUMPER SETTING DESCRIPTION	22
2-8 JSB1: CMOS DATA CLEAR	23
2-9 JVL1: LCD PANEL POWER SELECT	24
2-10 JVC1: COM1 PIN9 RI / +12V / +5V SELEC	24
CHAPTER 3 CONNECTION	25
3-1 LIST OF CONNECTORS.....	25
3-2 CMOS BATTERY CONNECTOR	26
3-3 AUDIO INTERFACE	27
3-4 AUDIO AMPLIFIER	27
3-5 COM INTERFACE	28
3-6 FRONT PANEL PIN HEADER.....	31
3-7 VGA DISPLAY INTERFACE.....	31
3-8 DIGITAL INPUT/OUTPUT/WATCH DOG TIME.....	32
3-8-1 IO DEVICE: F75111 UNDER DOS.....	33
3-8-2 IO DEVICE: F75111 UNDER WINDOWS.....	35
3-8-3 IO DEVICE: F75111 VB6 UNDER WINDOWS.....	41
3-8-4 IO DEVICE: F75111 UNDER LINUX.....	45

3-9 LAN INTERFACE.....	50
3-10 I ² BUS INTERFACE	51
3-11 DC POWER INPUT	51
3-12 PANEL INVERTER POWER INTERFACE	52
3-13 DC +12V / +5 VOLTAGE POWER OUTPUT	52
3-14 TOUCH SCREEN (2x5 PIN 2.0MM WAFER) USB INTERFACE	53
3-15 USB INTERFACE	54
3-16 LVDS1: LVDS INTERFACE (2x15 PIN 1.25MM WAFER)	55
3-17 SATA INTERFACE	56
3-18 PCI EXPRESS MINI CARD	57
3-19 LEX eIO CONNECTOR	58
3-20 CONNEXTOR WAFER OF COMPATIBLE BRAND AND PART NUMBER LIST	59
CHAPTER 4 INTRODUCTION OF BIOS	60
4-1 ENTER SETUP	60
4-2 BIOS MENU SCREEN & FUNCTION KEYS	61
4-3 GETTING HELP	62
4-4 MENU BARS	62
4-5 MAIN	63
4-6 ADVANCED	64
4-6-1 BOOT CONFIGURATION	65
4-6-2 PCI EXPRESS CONFIGURATION	66
4-6-2-1 PCI EXPRESS ROOT PORT 1/2/3/4	67
4-6-3 VIDEO CONFIGURATION	68
4-6-4 THERMAL CONFIGURATION	69
4-6-5 SATA CONFIGURATION	70
4-6-6 CONSOLE REDIRECTION	71
4-6-7 ACPI TABLE/FEATURES CONTROL	72
4-7 SECURITY	73
4-8 POWER	74
4-9 BOOT	75
4-9-1 LEGACY	76
4-9-2 BOOT TYPE ORDER	77
4-10 EXIT	78
4-11 DEVICE MANAGER	79
4-11-1 SIO FINTEK81216D/DG	80
CHAPTER 5 DRIVER INSTALLATION	82
5-1 INF INSTALL INTEL BAYTRAIL CHIPSET DRIVER (EXAMPLE FOR WIN8 64BIT)	85
5-2 VGA INSTALL INTEL BAYTRAIL VGA DRIVER (EXAMPLE FOR WIN8 64BIT)	87
5-3 SERIAL IO INSTALL DRIVER BAYTRAIL SERIAL IO DRIVER (FOR WINDOWS 7 ONLY)	89
5-4 XHCI INSTALL INTEL USB 3.0 XHCI DRIVER (FOR WINDOWS 7 ONLY)	91
5-5 HD AUDIO INSTALL HIGH DEFINITION AUDIO DRIVER	93

5-6 MBI INSTALL INTEL MBI DRIVER (FOR WIN 8/8.1 ONLY)	94
5-7 TXE INSTALL INTEL TXE DRIVER	96
5-7-1 TXE INSTALL FOR WIN8/WIN8.1	96
5-7-2 TXE INSTALL FOR WIN7	98
5-8 HOW TO UPDATE INSYDE BIOS	100
APPENDIX A:POWER CONSUMPTION TEST	101
APPENDIX B:RESOLUTION LIST	102

Copyright

This manual is copyrighted and all rights are reserved. It does not allow any non authorization in copied, photocopied, translated or reproduced to any electronic or machine readable form in whole or in part without prior written consent from the manufacturer.

In general, the manufacturer will not be liable for any direct, indirect, special, incidental or consequential damages arising from the use of inability to use the product or documentation, even if advised of the possibility of such damages.

The manufacturer keeps the rights in the subject to change the contents of this manual without prior notices in order to improve the function design, performance, quality, and reliability. The author assumes no responsibility for any errors or omissions, which may appear in this manual, nor does it make a commitment to update the information contained herein.

Trademarks

Intel is a registered trademark of Intel Corporation.

Award is a registered trademark of Award Software, Inc.

All other trademarks, products and or product's name mentioned here are for identification purposes only, and may be trademarks and/or registered trademarks of their respective companies or owners.

© Copyright 2018

All Rights Reserved.

User Manual edition 0.1, Feb. 26. 2018

Warning !

1. Battery
Batteries on board are consumables.
The life time of them are not guaranteed.
2. Fanless solution with HDD
The specification & limitation of HDD should be considered carefully when the fanless solution is implemented.
3. We will not give further notification in case of changes of product information and manual.
4. SATA interface does not support Hot SWAP function.
5. There might be a 20% inaccuracy of WDT at room temperature.
6. Please make sure the voltage specification meets the requirement of equipment before plugging in.
7. There are two types of SSD, commercial grade and industrial grade, which provide different read/write speed performance, operation temperature and life cycle. Please contact sales for further information before making orders.
8. Caution! Please notice that the heat dissipation problem could cause the MB system unstable. Please deal with heat dissipation properly when buying single MB set.
9. Please avoid approaching the heat sink area to prevent users from being scalded with fanless products.
10. If users repair, modify or destroy any component of product unauthorizedly, We will not take responsibility or provide warranty anymore.
11. DO NOT apply any other material which may reduce cooling performance onto the thermal pad.
12. It is important to install a system fan toward the CPU to decrease the possibility of overheating / system hanging up issues, or customer is suggested to have a fine cooling system to dissipate heat from CPU.

* Hardware Notice Guide


1. Before linking power supply with the motherboard, please attach DC-in adapter to the motherboard first. Then plug the adapter power to AC outlet.
Always shut down the computer normally before you move the system unit or remove the power supply from the motherboard. Please unplug the DC-in adapter first and then unplug the adapter from the AC outlet.
Please refer photo 1 as standard procedures.
2. In case of using DIRECT DC-in (without adapter), please check the allowed range for voltage & current of cables. And make sure you have the safety protection for outer issues such as short/broken circuit, overvoltage, surge, lightning strike.
3. In case of using DC-out to an external device, please make sure its voltage and current comply with the motherboard specification.
4. The total power consumption is determined by various conditions (CPU/motherboard type, device, application, etc.). Be cautious to the power cable you use for the system, one with UL standard will be highly recommended.
5. It's highly possible to burn out the CPU if you change / modify any parts of the CPU cooler.
6. Please wear wrist strap and attach it to a metal part of the system unit before handling a component. You can also touch an object which is ground connected or attached with metal surface if you don't have wrist strap.
7. Please be careful to handle & don't touch the sharp-pointed components on the bottom of PCBA.
8. Remove or change any components form the motherboard will VOID the warranty of the motherboard.
9. Before you install / remove any components or even make any jumper setting on the motherboard, please make sure to disconnect the power supply first. (follow the aforementioned instruction guide)
10. "POWERON after PWR-Fail" function must be used carefully as below:
When the DC power adaptor runs out of power, unplug it from the DC current;
Once power returns, plug it back after 5 seconds.
If there is a power outage, unplug it from the AC current, once power returns, plug it back after 30 seconds. Otherwise it will cause system locked or made a severe damage.

Remark 1:


Always insert / unplug the DC-in horizontally & directly to / from the motherboard.
DO NOT twist, it is designed to fit snugly.
Moreover, erratic pull / push action might cause an unpredictable damage to the component & system unit.

Photo 1

Insert

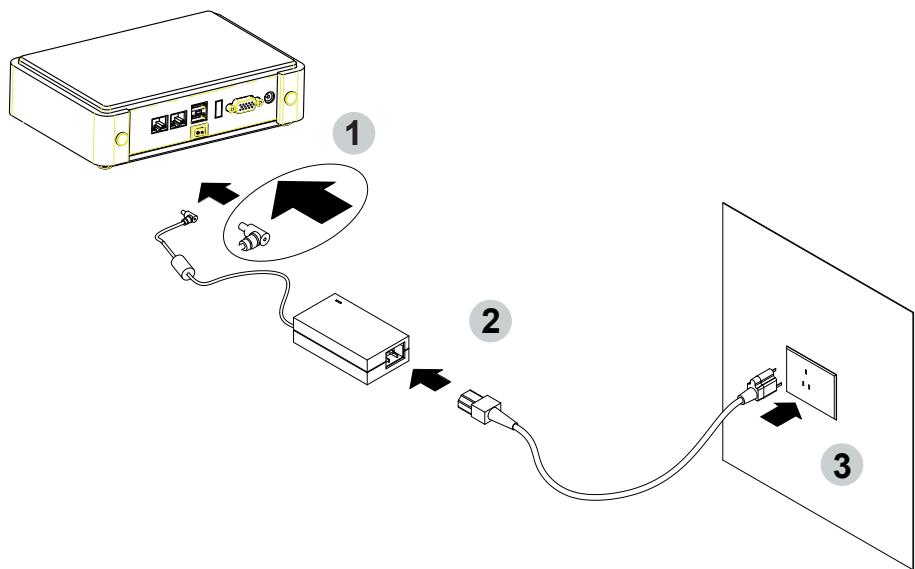

Unplug

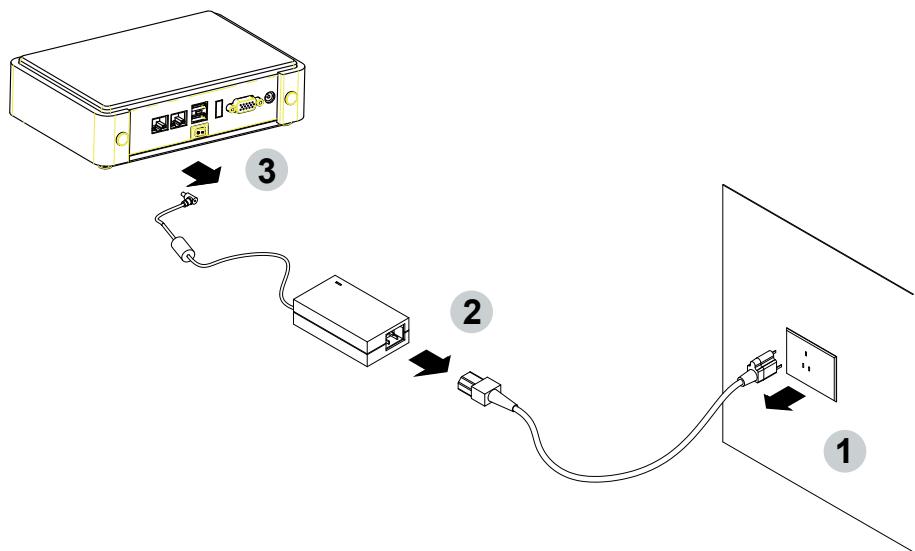

Chapter-1

General Information

The 2I386EW is a 2.5 inches form factor All-In-One Board. The board design combines all necessary input and output interfaces, which makes itself an ideal all-in-one control board for POS, Digital Signage and Automation application. Due to its compact size, 2I386EW is also the perfect platform for a whole range of small form factor and low-power devices, such as mobile PC or small panel PC

The 2I386EW All-In-One motherboard is with Intel Bay Trail-I E3845 1.91GHz / E3825 1.33GHz (Quad / Dual core processor), Intel Bay Trail E3825 / E3845 Bay Trail-I chipset and Integrated Graphics chipset. This integrated platform offers superb performance and PC specification in the industry. Despite the limited space of 2I386EW, it supports 4 COM ports and 1 USB3.0 & 3 ports of Hi-Speed USB 2.0 to enhance the host controller interface which will ensure the high performance level and flexible expansion. Especially 2I386EW with an eIO (1 x PCIe +USB) expansion function that offer the ideal platforms for high performance applications in Digital Signage, medical devices, POS/Kiosk, gaming machines, automation, military & industrial facilities.

The 2I386EW supports two LAN ports of 10 / 100 / 1G Ethernet for various and seamless broadband connectivity. With Wake-On LAN function and the PXE function in BIOS, these are perfect control boards for networking devices. The built-in LAN is Intel I210IT or I211AT LAN chipset for PCIe x 1 V2.1 interface, integrated 10 / 100 / 1000 transceiver.

The expandable interfaces include one full size PCIe Mini card for mSATA and USB interface, one full size PCIe Mini card for PCIe and USB interface. One eIO with 1 USB and 1 PCIe x 1 signal to add-on eIO cards.

The All-In-One motherboard 2I386EW is fully compatible with industrial standards, plus technical enhancements and thousands of software applications developed for IBM PC/AT compatible computers. These control logic provides high-speed performance for the most advanced multi user and multitasking applications available today

Please kindly contact LEX (info@lex.com.tw) if you have any further query or want to get the detail information.

1-1 Major Feature


1. Intel Bay Trail-I E3845 1.91GHz SOC (Quad core), E3825 1.33GHz (Dual Core)
2. Intel Bay Trail-I Integrated Graphics chipset, E3845 542 MHz / E3825 533 MHz render clock frequency
3. DDR3L SODIMM Socket x 1, up to 8GB
4. Support 2 x 10 / 100 / 1000 Mbps Intel LAN ports
5. Support 4 x COM ports and 1 USB 3.0, 3 x USB 2.0
6. Support extended 2 x Mini PCIe card (full size) and one eIO with 1 USB and 1 PCIe x 1 signal.
7. Support one SATA connector with independent DMA operation supported
8. Hardware digital Input & Output, 4 x DI / 4 x DO Hardware Watch Dog Timer, 0~255 sec programmable
9. On board DC +9~48V
10. PCB Dimension: 102 x 83 mm (2.5 inch)

1-2 Specification

1. **SOC:** Intel Bay Trail-I E3845 1.91GHz / E3825 1.33 GHz (Quad / Dual Core)
2. **Memory:** DDR3L SODIMM Socket x 1, up to 8GB
3. **Graphics:** Intel Bay Trail-I / Bay Trail-D Integrated Graphics chipset, E3845 542 MHz / E3825 533MHz render clock frequency
4. **SATA:** One SATA connector with independent DMA operation supported, signal shared with mSATA
5. **LAN:** 2 x INTEL 210-IT PCIe LAN of 10 / 100 / 1000 Mbps
6. **Serial Port:** External x 1 (RS232 or 422 or 485) ; internal x 1(RS232 or 422 or 485) switch by BIOS, internal x 2 (RS232 only)
7. **USB:** 1 USB 3.0/2.0, 3 x USB 2.0 (2 external + 2 internal)
8. **WDT/DIO:** Hardware digital Input & Output, 4 x DI / 4 x DO Hardware Watch Dog Timer, 0~255 sec programmable.
9. **Expansion interface:** one full size PCIe Mini card for PCIe and USB interface, one full size PCIe Mini card for mSATA and USB interface. One eIO connector for 1 USB and 1 PCIe x1 for eIO cards.
10. **BIOS:** Insyde UEFI BIOS
11. **Dimension:** 102 x 83 mm (2.5 inch)
12. **Power:** On board DC +9~48V

1-3 Installing the SO-DIMM

1. Align the SO-DIMM with the connector at a 45 degree angle.

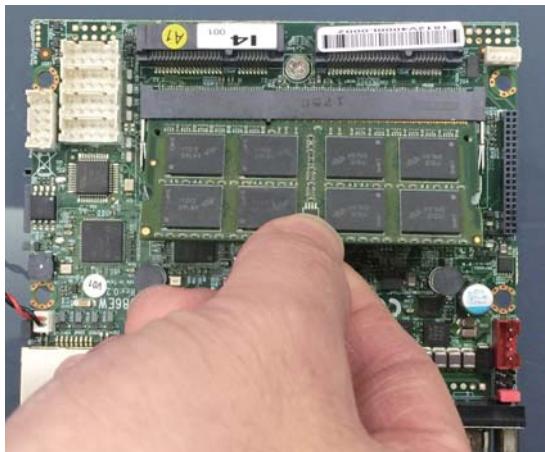


2. Press the SO-DIMM into the connector until you hear a click.




Notices:

- 1.The connectors are designed to ensure the correct insertion. If you feel resistance, check the connectors & golden finger direction, and realign the card.

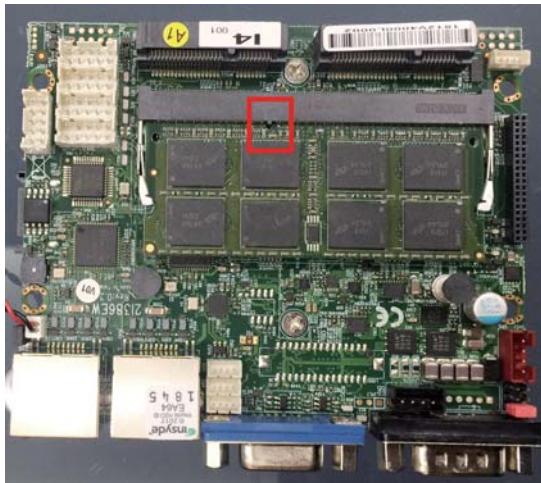

2. Make sure the retaining clips (on two sides of the slot) lock onto the notches of the card firmly.

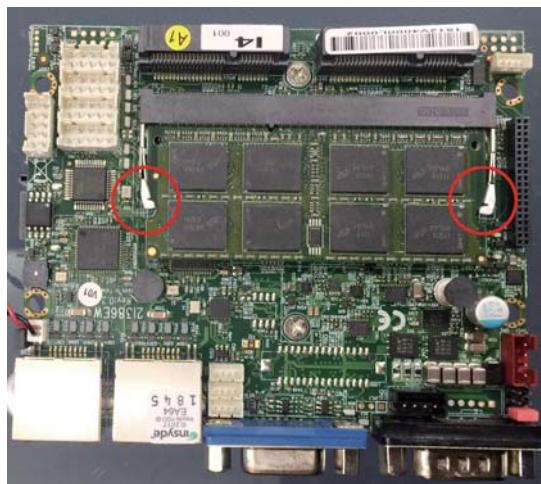

1-3-1-1 Removing the SO-DIMM

1. Release the SO-DIMM by pulling outward the two retaining clips and the SO-DIMM pops up slightly.




2. Lift the SO-DIMM out of its connector carefully.




1-4 Directions for installing the Mini Card


1. Unscrew the screw on the board

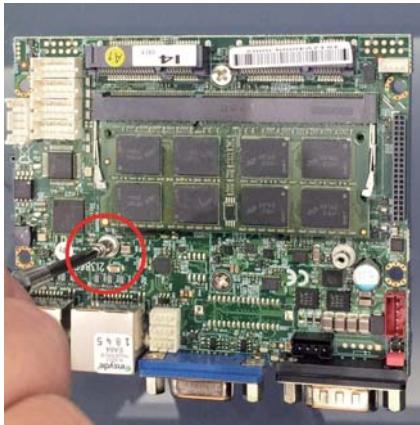


2. Plug in the Mini Card in a 45 angle

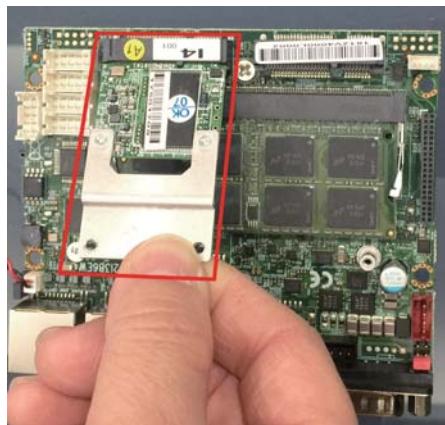

3. Gently push down the Mini Card and screw the screw back.

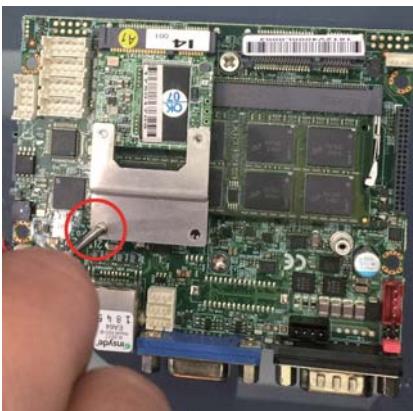

1-5 Packing List

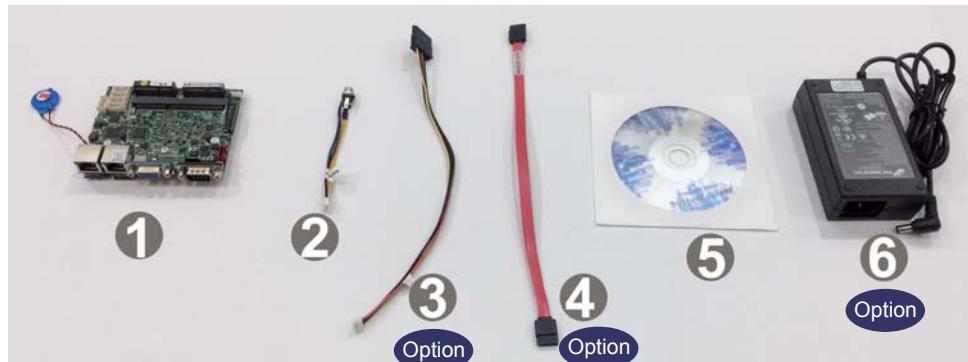

	Material Code	Description	Detail Specification	Quantity
1	7G1901-1710001-0	MB-2I386EW-I4-001	LF,2I386EW-I4,Rev.:001	1
2	6G6003-7330-0100	Power Cable	LF,L=9cm,2.0 1*4/DC JK	1
3	6G6003-1009-0100	SATA Power Cable	LF,L=25cm,1*4/2.0 to 180° SATA 15p	1(Option)
4	6G6001-2203-0100	SATA DATA Cable (Red)	LF,L=25cm	1(Option)
5	6G8006-2349-0100	LEX Product Driver DVD	LF,support Intel Baytrail Driver,Windows 7/8.1 32/64	1
6	6G5212-0620-0100	■60W Power Adapter,12V/5A,2.5Ø	LF,L Type,FSP060-DIBAN2,FSP	1(Option)

**Optional accessories (items in addition to motherboard)
are not included in the standard packing.**

Please contact your dealer to purchase the optional accessories.

Chapter-2

Hardware Installation

2-1 Unpacking Precaution

This chapter provides the information how to install the hardware of 2I386EW. Please follow section 1-5, 2-1 and 2-2 to check the delivery package and unpack carefully. Please follow the jumper setting procedure.

NOTE!

1. Do not touch the board or any other sensitive components without all necessary anti-static protection.
2. Please pay attention to the voltage limitation of DC-IN12V 5%. Overuse of DC-IN voltage limitation or change to another power adapter (not provided with this system) will VOID warranty.

You should follow these steps to protect the board from the static electric discharge whenever you handle the board:


1. Ground yourself by a grounded wrist strap at all times when you handle the 2I386EW.
Well secure the ALLIGATOR clip of the strap to the end of the shielded wire lead from a grounded object. Please put on and connect the strap before handling the 2I386EW for harmlessly discharge any static electricity through the strap.
2. Please use anti-static pad to put any components, parts, or tools on the pad whenever you work on them outside the computer. You may also use the anti-static bag instead of the pad. Please ask your local supplier for necessary parts on anti-static requirement.
3. Do not plug any connector or set any jumper when the power is on.

2-2 Unpacking checkup

First of all, please follow all necessary steps of section 2-1 to protect 2I386EW from electricity discharge. With reference to section 1-5 please check the delivery package again with following steps:


1. Unpack the 2I386EW board and keep all packing material, manual and driver disc etc, do not dispose !
2. Is there any components lose or drops from the board?
DO NOT CONTINUE TO INSTALL THIS BOARD!
CONTACT THE DEALER YOU PURCHASED
THIS BOARD FROM, IMMEDIATELY.
3. Is there any visible damage on the board?
DO NOT CONTINUE TO INSTALL THIS BOARD!CONTACT
THE DEALER YOU PURCHASED THIS BOARD FROM, IMMEDIATELY.
4. Check your optional parts (i.e. DDR, CF etc.), all necessary jumpers setting to jumper pin-set, and CMOS setup correctly.
Please also refer to all information of jumper settings in this manual.
5. Check your external devices (i.e. Add-On-Card, Driver Type etc.) for complete add-in or connection and CMOS setup correctly.
Please also refer to all information of connector connection in this manual.
6. Please keep all necessary manual and driver disc in a good condition for future re-installation if you change your Operating System.

2-3 Dimension-2I386EW

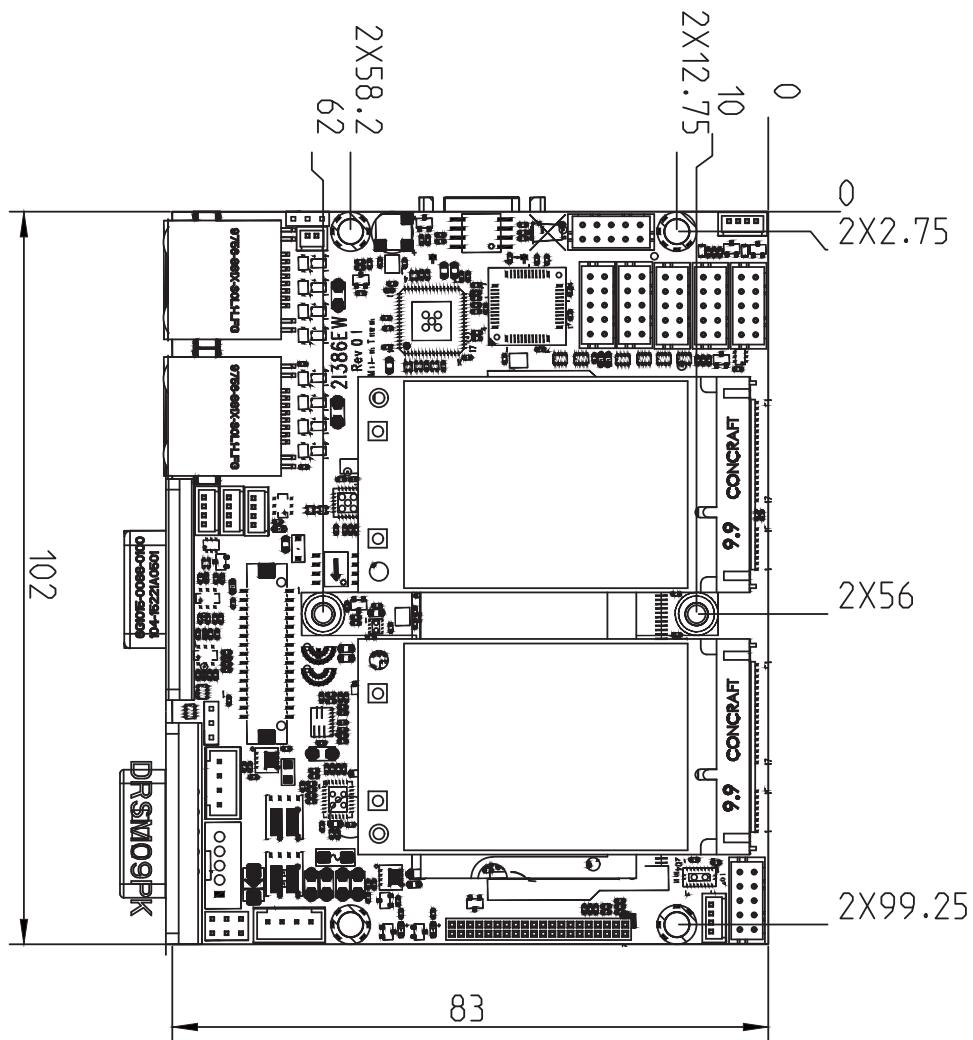


2-4 Layout-2I386EW-Connector and Jumper

TOP

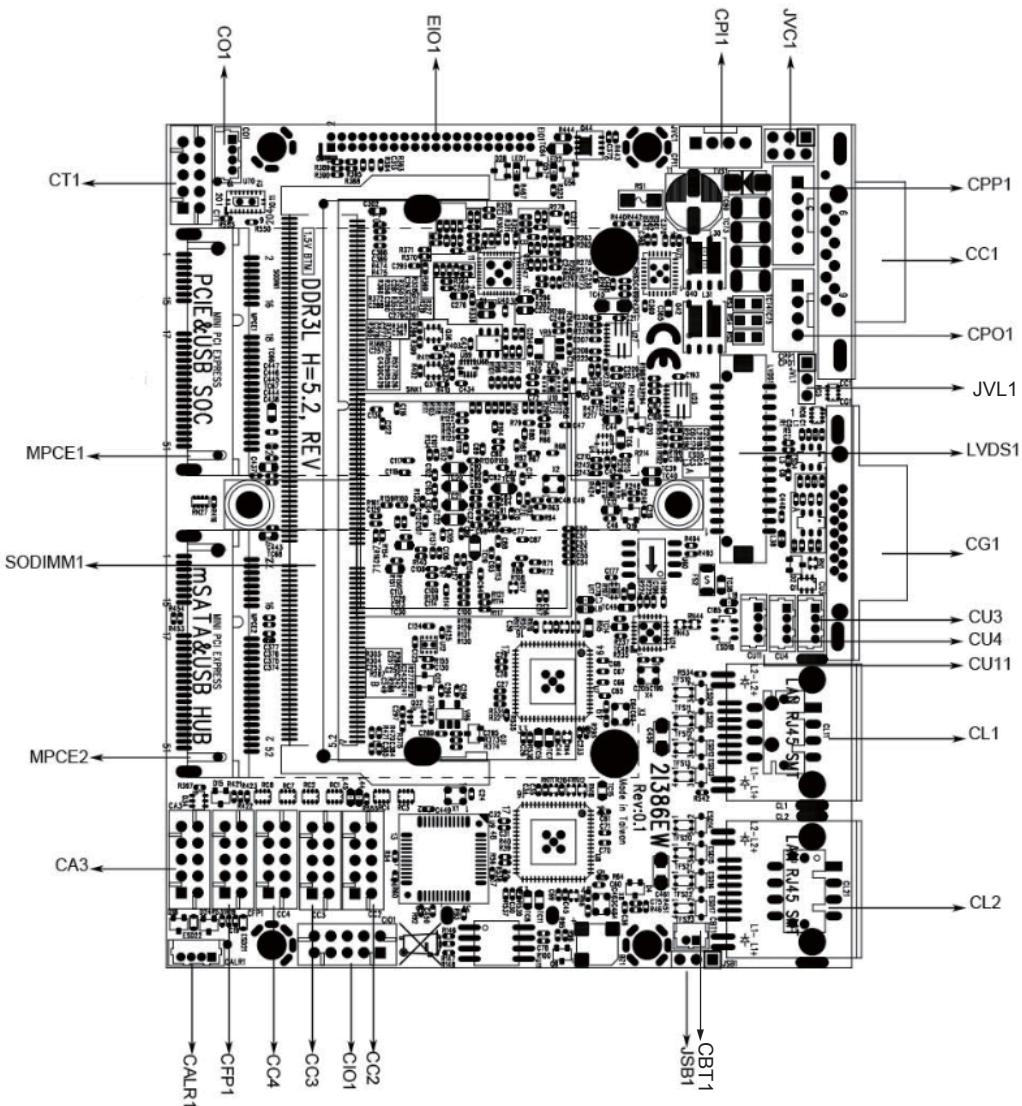


2-4-1 Layout-2I386EW-Connector and Jumper Bottom BOT

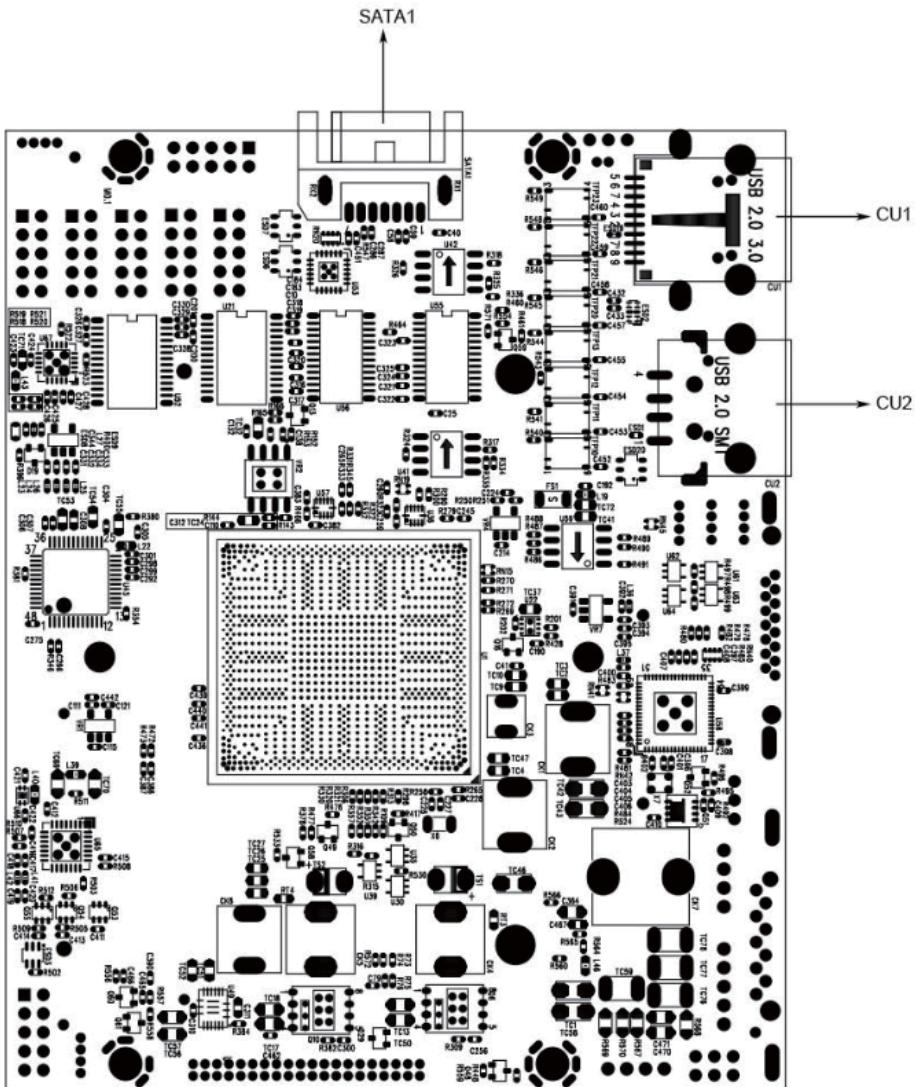


2-4-2 Layout-2I386EW-Function MAP

TOP

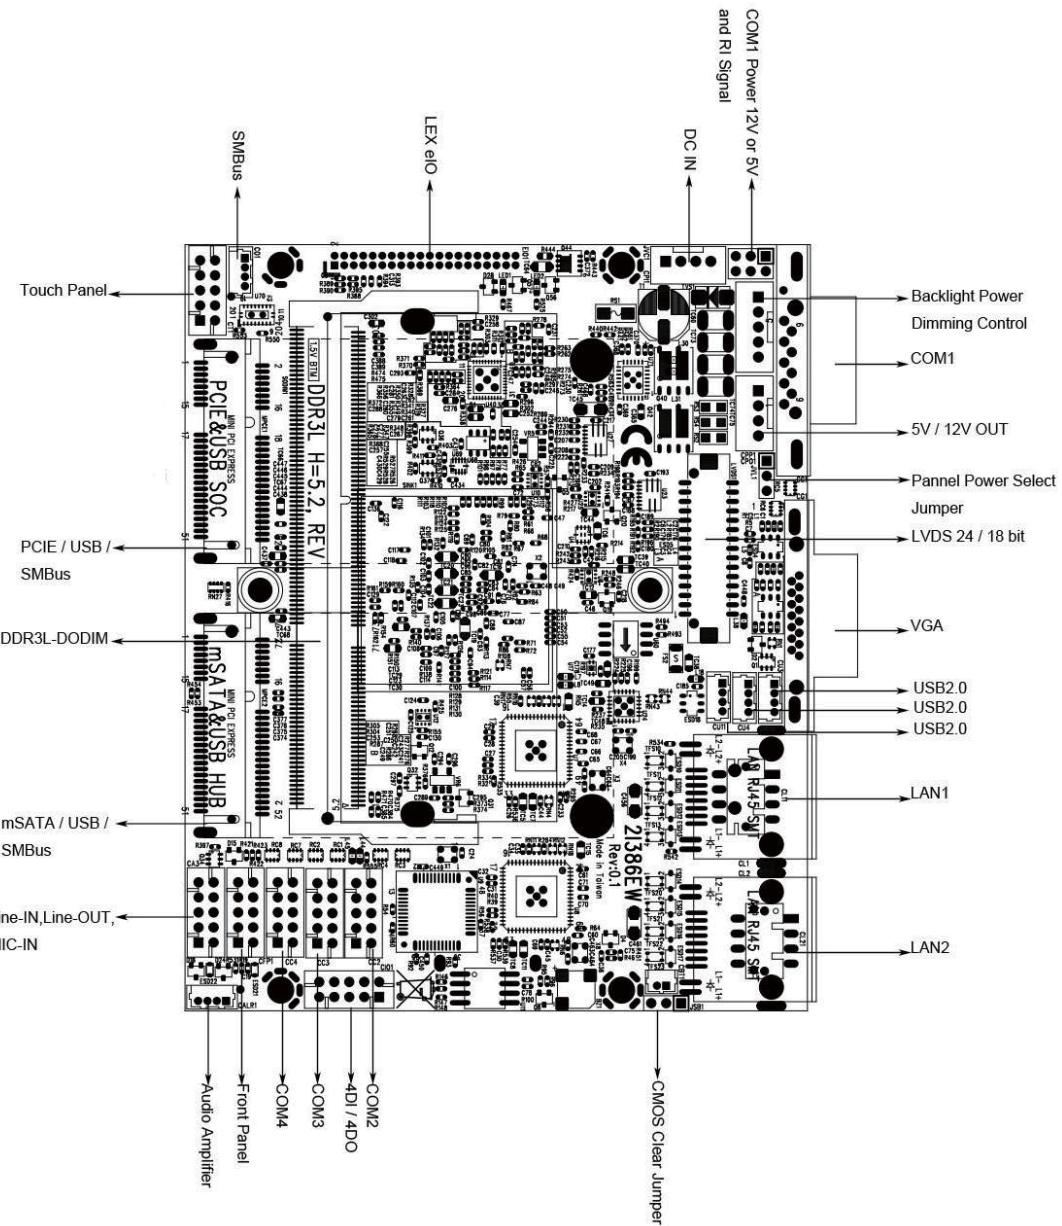


2-4-3 Layout-2I386EW-Function MAP Bottom

BOT

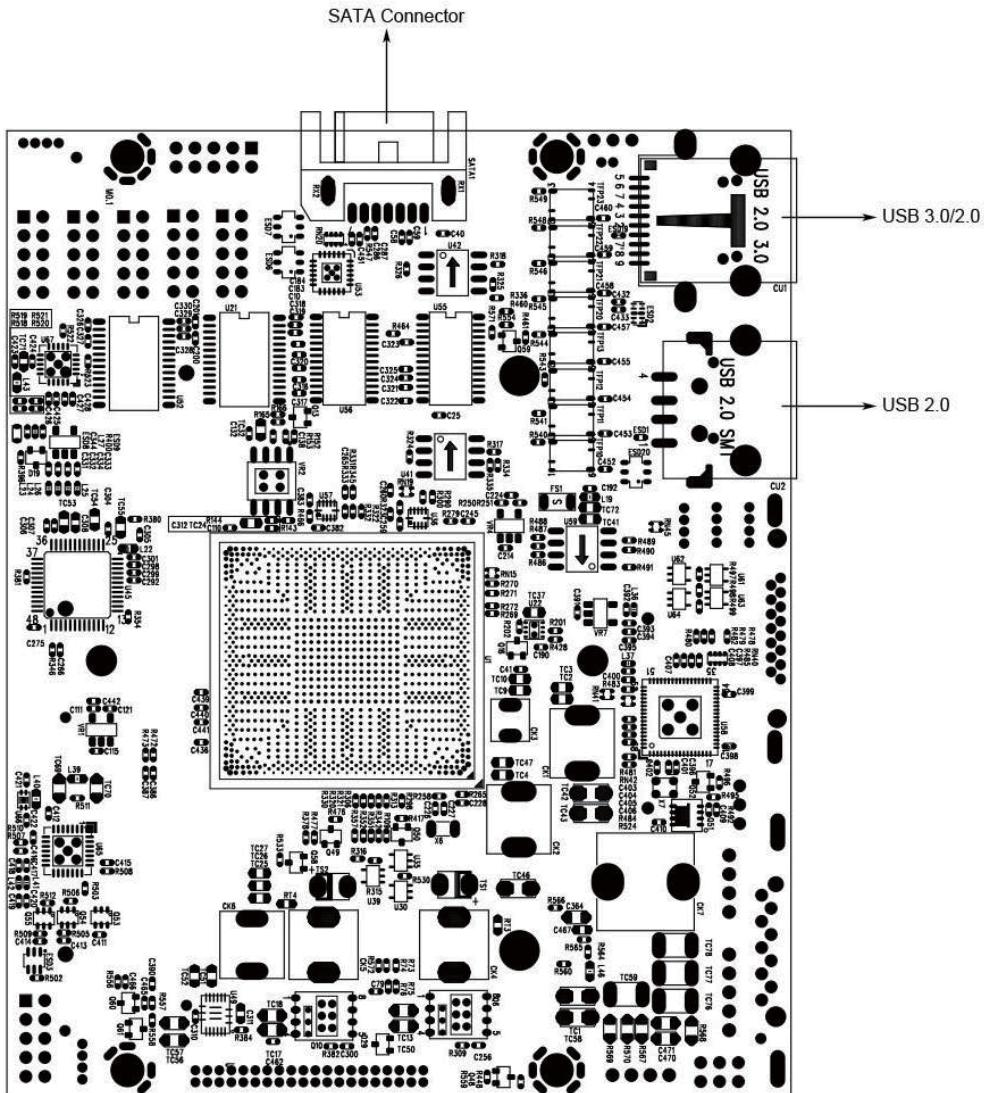


2-5 Diagram- 2I386EW

TOP

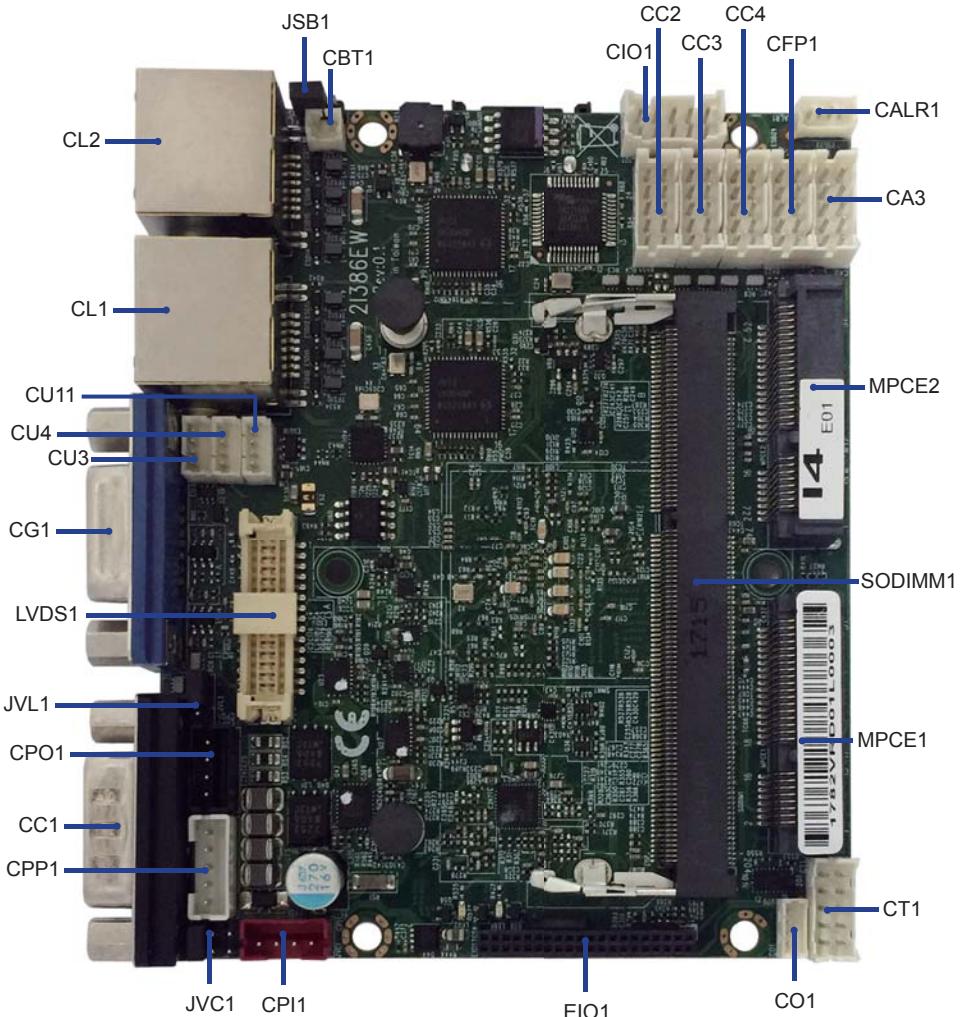


2-5-1 Diagram- 2I386EW

BOT

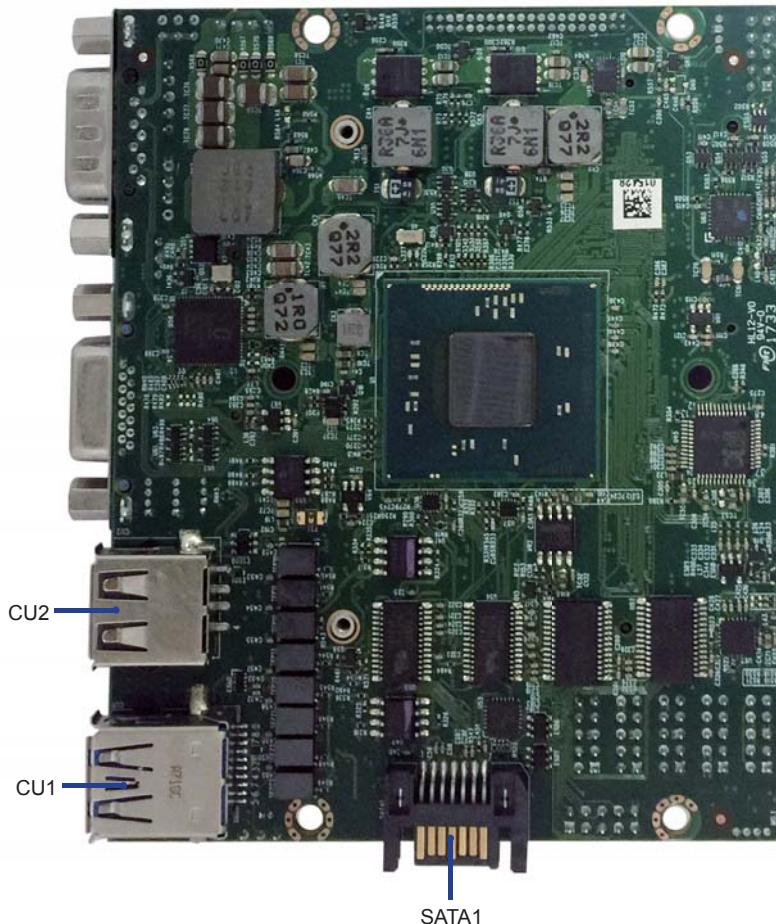

2-5-2 Function MAP- 2I386EW

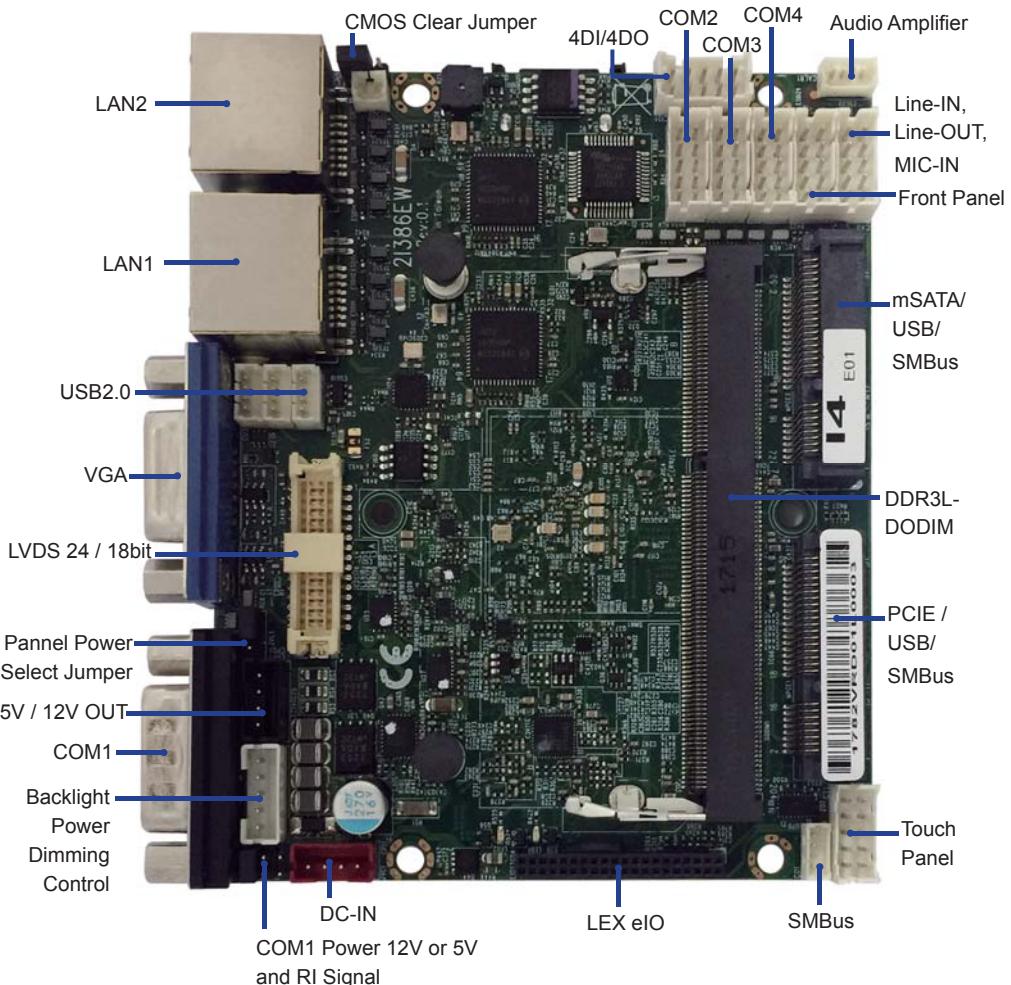

BACK Panel



2-6 List of Jumpers

JSB1: CMOS DATA clear

JVL1: LCD panel power select

JVC1: COM1 PIN9 RI / +12V / +5V Selec

2-7 Jumper Setting Description

A jumper is ON as a closed circuit with a plastic cap covering two pins. A jumper is OFF as an open circuit without the plastic cap. Some jumpers have three pins, labeled 1, 2, and 3. You could connect either pin 1 and 2 or 2 and 3.

The below figure 2.2 shows the examples of different jumper settings in this manual.

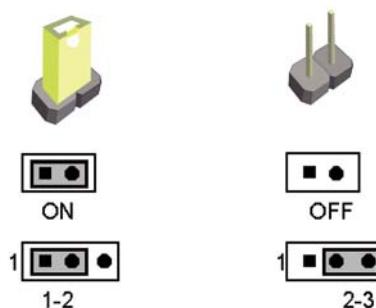


Figure 2.2

All jumpers already have its default setting with the plastic cap inserted as ON, or without the plastic cap as OFF. The default setting may be referred in this manual with a " * " symbol .

2-8 JSB1: CMOS DATA Clear

A battery must be used to retain the motherboard configuration in CMOS RAM.
Close Pin1 and pin 2 of JSB1 to store the CMOS data.

To clear the CMOS, follow the procedures below:


1. Turn off the system and unplug the AC power
2. Remove DC IN power cable from DC IN power connector
3. Locate JSB1 and close pin 1-2 for few seconds
4. Return to default setting by Close pin 1-2
5. Connect DC IN power cable back to DC IN Power connector

JSB1	DESCRIPTION
*1-2	Normal set
2-3	CMOS data clear

Note: Normal work is open jumper

Note: Do not clear CMOS unless


- 1. Troubleshooting**
- 2. Forget password**
- 3. You fail over-clocking system**

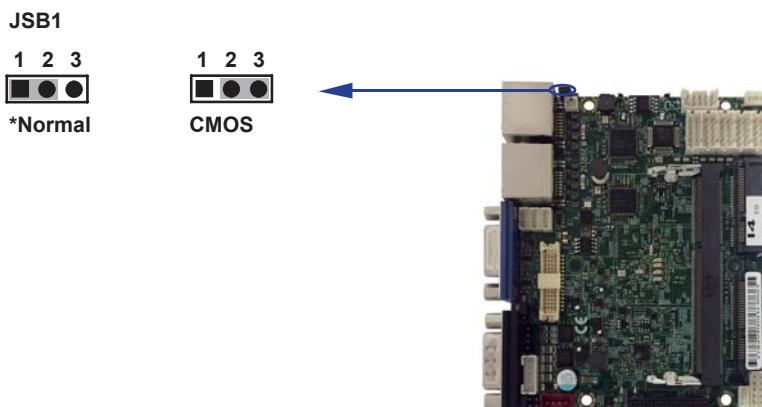

2-9 JVL1: LCD panel power select (OEM)


JVL1	DESCRIPION
1-2	+5V
*2-3	+3.3V

Note: Attention! Check Panel Power in spec

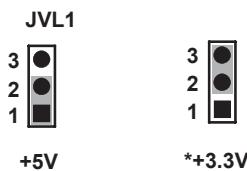

2-10 JVC1: COM1 PIN9 RI / +12V / +5V Select

JVC1	DESCRIPION
*1-2	COM port pin9 use RI signal
3-4	COM port pin9 use +5V voltage
5-6	COM port pin9 use +12V voltage

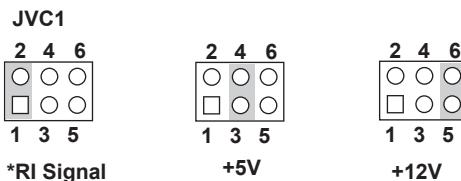

Chapter-3

Connection

This chapter provides all necessary information of the peripheral's connections, switches and indicators. Always power off the board before you install the peripherals.

3-1 List of Connectors

CBT1:	CMOS battery 1x2 pin (1.25mm) wafer
CA3:	Line-out / Line-in / Mic-in 2x5 pin (2.0mm) Wafer (OEM)
CALR1:	Amplifier Line-out Right / Left channel 4pin (1.25mm) wafer (OEM)
CC1 :	COM1 DB9 Connector
CC2 :	COM 2x5pin (2.0mm) wafer
CC3 :	COM 2x5pin (2.0mm) wafer
CC4 :	COM 2x5pin (2.0mm) wafer
CFP1:	Front Panel connector 2x5pin (2.0mm) wafer
CG1:	VGA DB15 Connector
CIO1:	4DI / 4DO 2x5 pin (2.0mm) Wafer
CL1 :	LAN port 1 RJ45 Connector
CL2 :	LAN port 2 RJ45 Connector
CL11 :	LAN port 1 RJ45 2x4 pin (2.0mm) wafer (OEM)
CL21 :	LAN port 2 RJ45 2x4 pin (2.0mm) wafer (OEM)
CO1:	I2C Bus 4pin (1.25mm) Wafer
CPI1:	DC 12V-IN 1x4 pin (2.0mm) Red wafer connector
CPP1:	Panel inverter power connector 1x5 pin (2.0mm) wafer
CPO1:	+12V / +5V power output 4 pin (2.0mm) Black wafer connector
CT1:	Touch screen device 2x5 pin (2.0mm) Wafer (OEM)
CU1:	USB3.0 / 2.0 Dual port Type A connector
CU2:	USB2.0 Dual port Type A connector
CU3:	USB 2.0 port 4pin (1.25mm) Wafer
CU4:	USB 2.0 port 4pin (1.25mm) Wafer
CU11:	USB 2.0 port 4pin (1.25mm) Wafer
LVDS1:	LVDS 2x15 pin (1.25mm) connector (OEM)
SATA1:	One SATA connector 7pin

MPCE1 : Full size mini card port 1 sockets 52pin
MPCE2 : Full size mini card port 2 sockets 52pin
EIO1: eIO port 2x20 pin (1.27mm) Wafer
SODIMM1: DDR3L-SODIMM sockets 204pin


3-2 CMOS battery connector

- CBT1: CMOS Battery 1x2pin (1.25mm) Wafer

PIN NO.	DESCRIPTION
1	GND
2	+3V

Note:


- 1.When board without Adaptor plug in, this board power RTC consumption 2.7uA
- 2.If adaptor always plug in RTC power consumption 0.1uA

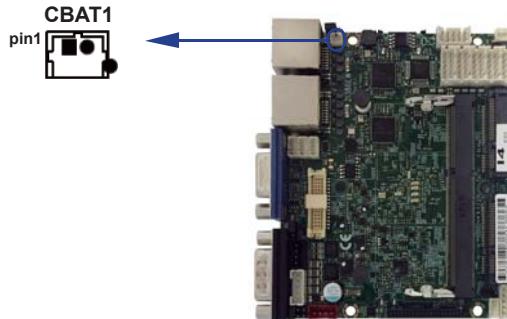

3-3 Audio interface (OEM)

- CA3: Line-out / Line-in / Mic-in 2x5 pin (2.0mm) Wafer


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Line-out-R	2	MIC-IN
3	Line-in-R	4	GND
5	GND	6	GND
7	Line-in-L	8	+5V
9	Line-out-L	10	MIC-IN

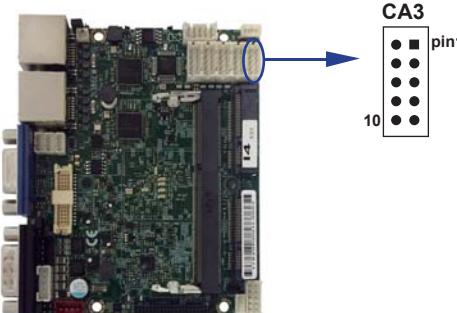

3-4 Audio Amplifier (OEM)

- CALR1: Amplifier Line-out Right / Left channel 1x4pin (1.25mm) wafer

PIN NO.	Description
1	Left+
2	Left-
3	Right-
4	Right+

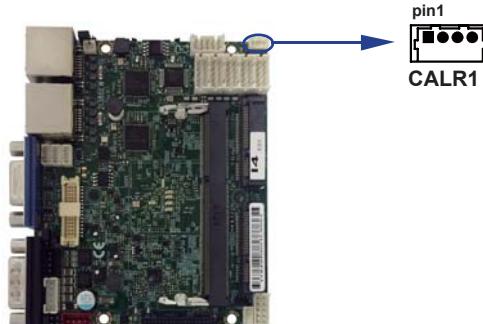

3-5 COM interface

• CC1: COM1 DB9 Connector (RS232 Mode)

PIN NO.	Description	PIN NO.	Description
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI / Voltage
5	GND		

Note: Pin 9 RI and Voltage setting only for COM 1 ports, JVC1 for COM1. Default is RI signal.

• CC1: COM1 DB9 Connector (RS485 Mode)

PIN NO.	Description	PIN NO.	Description
1	RS485 Data-	6	NC
2	RS485 Data+	7	NC
3	NC	8	NC
4	NC	9	NC
5	GND		

Note: BIOS need setting to RS485 mode.

• CC1: COM1 DB9 Connector (RS422 Mode)

PIN NO.	Description	PIN NO.	Description
1	RS422 TX-	6	NC
2	RS422 TX+	7	NC
3	RS422 RX+	8	NC
4	RS422 RX-	9	NC
5	GND		

Note: BIOS need setting to RS422 mode.



• CC2: COM2 wafer connector (2x5pin 2.0mm) (RS232 Mode)

PIN NO.	Description	PIN NO.	Description
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI/Voltage	10	+5V

Note: The pin9 RI can be modify to Power to supply device. The power voltage can be set +12V or +5V. The RI change Voltage function is OEM need change BOM. Default is RI signal.

• CC2: COM2 wafer connector (2x5pin 2.0mm) (RS485 Mode)


PIN NO.	Description	PIN NO.	Description
1	RS485 Data-	2	RS485 Data+
3	NC	4	NC
5	GND	6	NC
7	NC	8	NC
9	NC	10	+5V

Note: BIOS need setting to RS485 mode

• CC2: COM2 wafer connector (2x5pin 2.0mm) (RS422 Mode)


PIN NO.	Description	PIN NO.	Description
1	RS422 TX-	2	RS422 TX+
3	RS422 RX+	4	RS422 RX-
5	GND	6	NC
7	NC	8	NC
9	NC	10	+5V

Note: BIOS need setting to RS422 mode

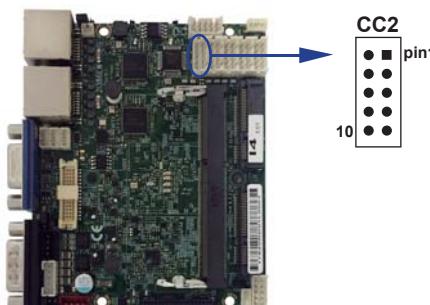

• CC3 / CC4: COM3 / COM4 2x5pin (2.0mm) wafer (RS232 Mode)


PIN NO.	Description	PIN NO.	Description
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	+5V

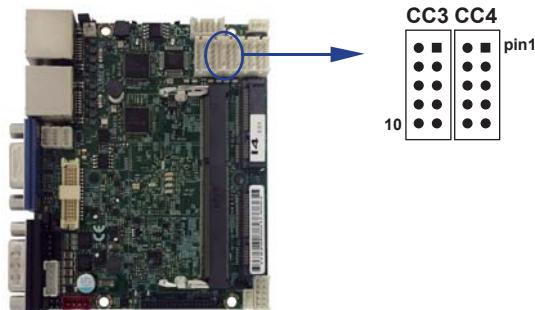

3-6 Front Panel Pin Header

- CFP1: Front Panel connector 2x5pin (2.0mm) wafer


PIN NO.	Description	PIN NO.	Description
1	Power button pin	2	Power button GND
3	Reset pin	4	Reset GND
5	Power LED	6	Power LED+
7	HDD LED-	8	HDD LED+
9	LAN LED-	10	LAN LED+

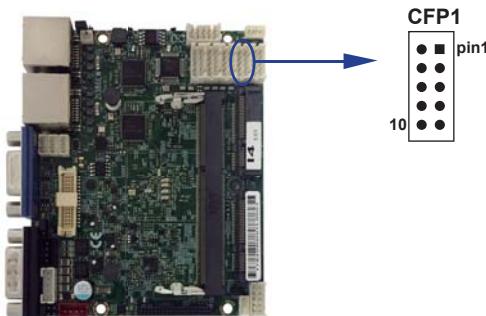

3-7 VGA Display interface

- CG1: VGA Connector (DB15 pin)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RED	6	GND	11	NC
2	GREEN	7	GND	12	DDC DATA
3	BLUE	8	GND	13	H-SYNC
4	NC	9	NC	14	V-SYNC
5	GND	10	GND	15	DDC CLOCK

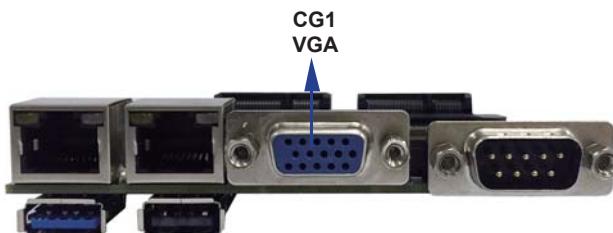


3-8 Digital Input / Output / Watch Dog Time

- CIO1: DIO 0—3 2x5pin (2.0mm) wafer

PIN NO.	Description	PIN NO.	Description
1	DI-0	2	DO-3
3	DI-1	4	DO-2
5	DI-2	6	DO-1
7	DI-3	8	DO-0
9	GND	10	+5V

Note: 1. DI pin default pull up 10KΩ to +5V
2. If use need isolate circuit to control external device
3. F75111N-1 I²C bus address 0x9c

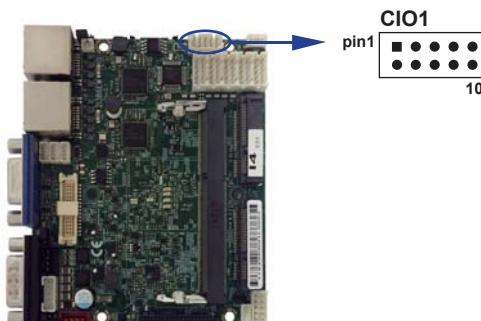

• WDT For F75111N I²C watch dog timer device:

DC spec :

Input low Voltage (VIL):+0.8 Max ,

Input High Voltage(VIH) : +2V Min

Output low Current (IOL):10mA (Min) VOL=0.4V

Output High Current (IOH):-10mA (Min) VOH=2.4V

Watch Dog Time value 0~255 sec

The system will be issued reset. When WDT is enable the hardware start down counter to zero.

The reset timer have 10~20% tolerance upon the Temperature.

Note: If want to SDK support. Please contact to sales window.

Please refer to page 33 for APPENDIX C: F75111N I²C DIO DECICE

3-8-1 IO Device: F75111 under DOS

The Sample code source you can download from


Source file: F75111_Dos_Src.rar http://tprd.info/lexwiki/index.php/IO_Device:F75111_under_DOS

Binary file: F75111_Dos_Bin.rar


USERNAME & PASSWORD: sf

How to use this Demo Application

- 1.Boot Ms-Dos Operating System
- 2.execute "75WDT.EXE" binary file
- 3.Input 1 to Enable WDT timer or input 0 to Disable it.
- 4.input numbers of second for chip countdown and Reset Computer

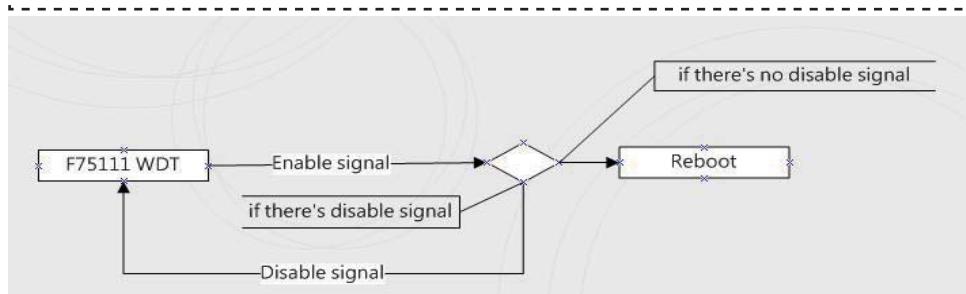

F75111 Layout Picture

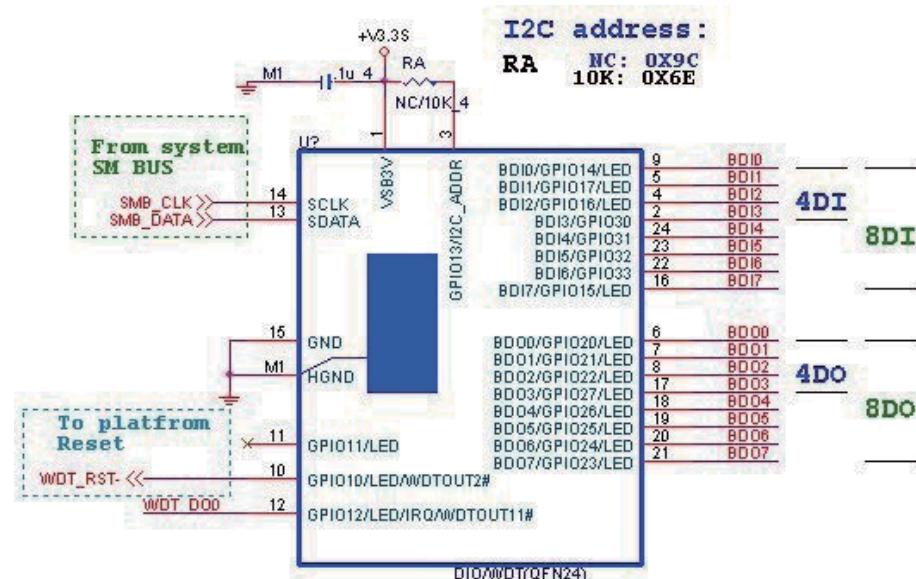

Introduction

How to use this Demo Application

```
Writel2CByte(I2CADDR, CONFIG, 0x03); //Set Watch Dog Timer function  
Writel2CByte(I2CADDR, WDT_TIMER, timer); //Set Watch Dog Timer range from 0-255.  
Writel2CByte(I2CADDR, WDT_TIMER_CTL, 0x73); //Enable Watch Dog Timer in second and pulse mode
```

How to use this Demo Application

```
Writel2CByte(I2CADDR, WDT_TIMER_CTL, 0x00);
```

How to use this Demo Application

```
void pause(int time)  
{  
    asm mov ah,0h; //Ah = 00 Read System Time Counter  
    asm int 1ah; //read time from Time Counter and store it in DX register  
    asm add dx,time;  
    asm mov bx,dx;  
    label:  
    asm int 1ah;  
    asm cmp bx,dx;  
    asm jne label;  
}
```

3-8-2 IO Device: F75111 under Windows


The Sample code source you can download from

Source file: F75111_DIO_Src_v2.8W(32bit).zip http://tprd.info/lexwiki/index.php/IO_Device:F75111

Binary file: F75111_DIO_Bin_v2.8W(32bit).zip


USERNAME & PASSWORD: sf

We do the demo test with a test tool which Dlx connect to DOx with Relay.

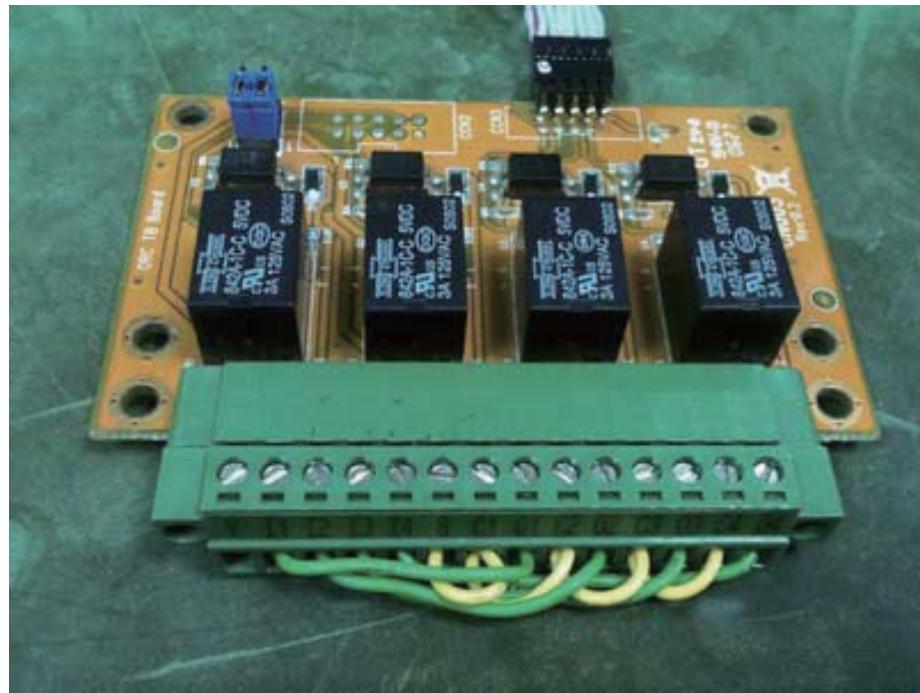


How to use this Demo Application

one F75111

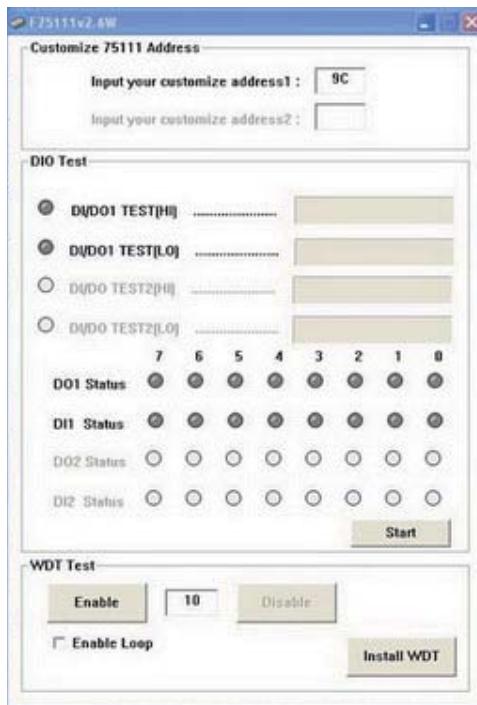


two F75111

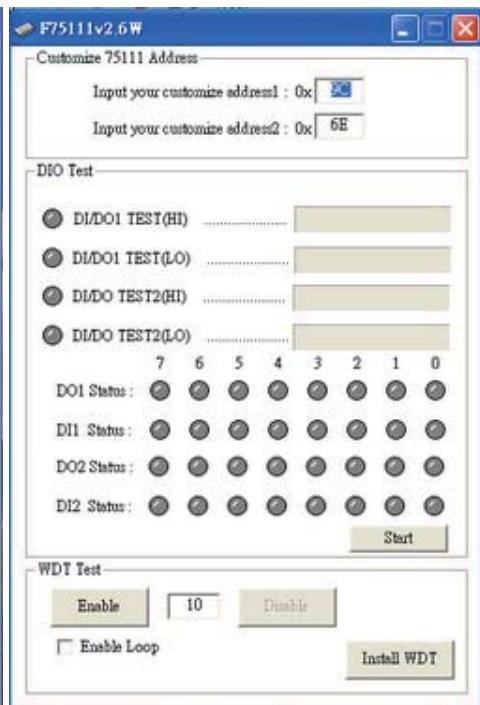

Attention Please: You must be install vcredist_x86.exe when first time you run the F75111_DIO.exe DEMO AP, The vcredist_x86.exe include all required DLL file.

WARNING: win7 system architecture, use the system administrator to open DIO utility


1. Press the "Start" button to test DIO function
2. Press the "Enable" button to test WDT function
3. Press the "Disable" button to disable WDT
4. Check the "Enable Loop" box and press "Enable" to do WDT loop test
5. Press "Install WDT" to set the system to autorun this application when booting, press again to remove this application when booting.
6. If WDT enable, system icon will be . if disable, system icon will be

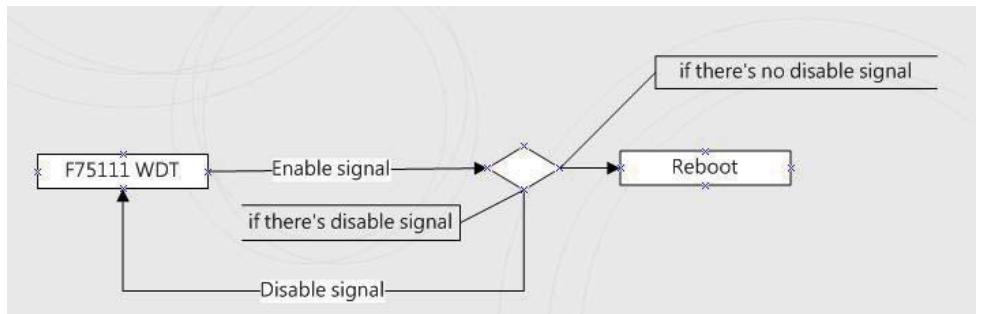

p.s.

f75111 send "F75111_SetWDTEnable(BYTE byteTimer)" including a parameter "timer",
if there's no disable signal (F75111_SetWDTDisable()) to stop it before timer countdown to 0, System will reboot.
if there's disable signal received, resent Enable WDT signal, for a loop to prevent from reboot

F75111 Layout Picture

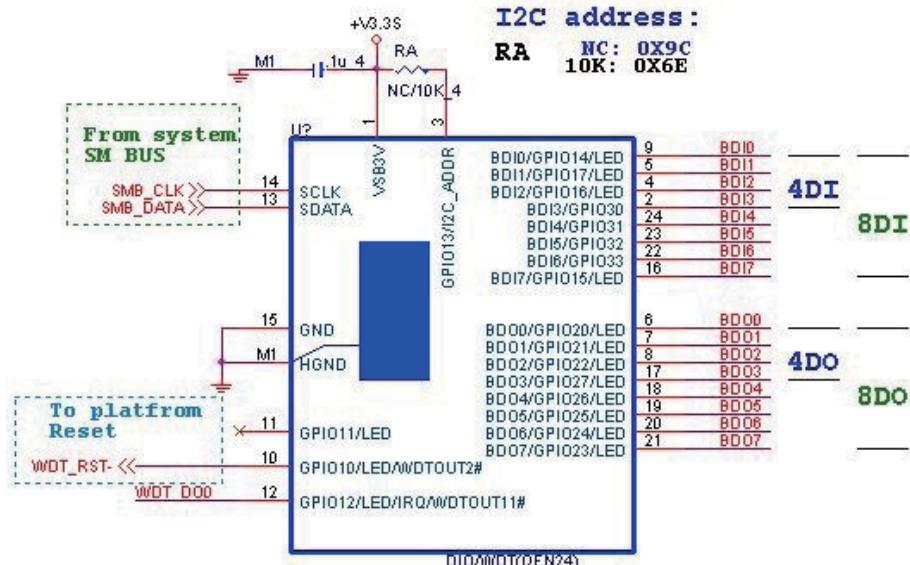

Introduction

Initial Internal F75111 port address (0x9c)

define GPIO1X, GPIO2X, GPIO3X to input or output
and Enable WDT function pin

Set F75111 DI/DO (sample code as below Get Input value/Set output value)

DO: InterDigitalOutput(BYTE byteValue)
DI: InterDigitalInput()

Enable/Disable WDT

```
Enable : F75111_SetWDTEnable (BYTE byteTimer)  
Disable: F75111_SetWDTDDisable ()
```

PULSE mode

Sample to setting GP33, 32, 31, 30 output 1mS low pulse signal.

```
{  
    this->Write_Byte(F75111_INTERNAL_ADDR, GPIO3X_PULSE_CONTROL, 0x00); //This is setting low pulse output  
    this->Write_Byte(F75111_INTERNAL_ADDR, GPIO3X_PULSE_WIDTH_CONTROL, 0x01); //This selects the pulse width to 1mS  
    this->Write_Byte(F75111_INTERNAL_ADDR, GPIO3X_CONTROL_MODE, 0x0F); //This is setting the GP33, 32, 31, 30 to output function.  
    this->Write_Byte(F75111_INTERNAL_ADDR, GPIO3X_Output_Data, 0x0F); //This is setting the GP33, 32, 31, 30 output data.  
}
```

Initial internal F75111

```
void F75111::InitInternalF75111()  
{  
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO1X_CONTROL_MODE ,0x00); //set GPIO1X to Input function  
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO3X_CONTROL_MODE ,0x00); //set GPIO3X to Input function  
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO2X_CONTROL_MODE ,0xFF); //set GPIO2X to Output function  
  
    this->Write_Byte(F75111_INTERNAL_ADDR,F75111_CONFIGURATION, 0x03); //Enable WDT OUT function  
}
```

Set output value

```
void F75111::InterDigitalOutput(BYTE byteValue)  
{  
    BYTE byteData = 0;  
    byteData = (byteData & 0x01 )? byteValue + 0x01 : byteValue;  
    byteData = (byteData & 0x02 )? byteValue + 0x02 : byteValue;  
    byteData = (byteData & 0x04 )? byteValue + 0x04 : byteValue;  
    byteData = (byteData & 0x80 )? byteValue + 0x08 : byteValue;  
    byteData = (byteData & 0x40 )? byteValue + 0x10 : byteValue;  
    byteData = (byteData & 0x20 )? byteValue + 0x20 : byteValue;  
    byteData = (byteData & 0x10 )? byteValue + 0x40 : byteValue;  
    byteData = (byteData & 0x08 )? byteValue + 0x80 : byteValue; // get value bit by bit  
  
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO2X_OUTPUT_DATA,byteData); // write byteData value via GPIO2X output pin  
}
```

Get Input value

```
BYTE F75111::InterDigitalInput()
{
    BYTE byteGPIO1X = 0;
    BYTE byteGPIO3X = 0;
    BYTE byteData    = 0;

    this->Read_Byte(F75111_INTERNAL_ADDR,GPIO1X_INPUT_DATA,&byteGPIO1X); // Get value from GPIO1X
    this->Read_Byte(F75111_INTERNAL_ADDR,GPIO3X_INPUT_DATA,&byteGPIO3X); // Get value from GPIO3X

    byteGPIO1X = byteGPIO1X & 0xF0;                                     // Mask unuseful value
    byteGPIO3X = byteGPIO3X & 0x0F;                                     // Mask unuseful value

    byteData = ( byteGPIO1X & 0x10 )? byteData + 0x01 : byteData;
    byteData = ( byteGPIO1X & 0x80 )? byteData + 0x02 : byteData;
    byteData = ( byteGPIO1X & 0x40 )? byteData + 0x04 : byteData;
    byteData = ( byteGPIO3X & 0x01 )? byteData + 0x08 : byteData;

    byteData = ( byteGPIO3X & 0x02 )? byteData + 0x10 : byteData;
    byteData = ( byteGPIO3X & 0x04 )? byteData + 0x20 : byteData;
    byteData = ( byteGPIO3X & 0x08 )? byteData + 0x40 : byteData;
    byteData = ( byteGPIO1X & 0x20 )? byteData + 0x80 : byteData;           // Get correct DI value from GPIO1X & GPIO3X

    return byteData;
}
```

Enable WatchDog

```
void F75111_SetWDTEnable (BYTE byteTimer)
{
    WriteByte(F75111_INTERNAL_ADDR,WDT_TIMER_RANGE ,byteTimer);          // set WatchDog range and timer
    WriteByte(F75111_INTERNAL_ADDR,WDT_CONFIGURATION,WDT_TIMEOUT_FLAG | WDT_ENABLE | WDT_PULSE | WDT_PSWIDTH_100MS); // Enable WatchDog, Setting WatchDog configure
}
```

Disable WatchDog

```
void F75111_SetWDTDisable ()
{
    WriteByte(F75111_INTERNAL_ADDR,WDT_CONFIGURATION,0x00);                // Disable WatchDog
}
```

define F75111 pin in F75111.h

```
//------------------------------------------------------------------------------
#define F75111_INTERNAL_ADDR          0x9C // OnBoard F75111 Chipset
#define F75111_EXTERNAL_ADDR         0x6E // External F75111 Chipset
//------------------------------------------------------------------------------

#define F75111_CONFIGURATION        0x03 // Configure GPIO13 to WDT2 Function
//------------------------------------------------------------------------------

#define GPIO1X_CONTROL_MODE         0x10 // Select Output Mode or Input Mode
#define GPIO2X_CONTROL_MODE         0x20 // Select GPIO2X Output Mode or Input Mode
#define GPIO3X_CONTROL_MODE         0x40 // Select GPIO3X Output Mode or Input Mode
```

```

//-----
#define GPIO1X_INPUT_DATA 0x12 // GPIO1X Input
#define GPIO3X_INPUT_DATA 0x42 // GPIO3X Input
//-----

#define GPIO2X_OUTPUT_DATA 0x21 // GPIO2X Output

//-----

#define GPIO1X_PULSE_CONTROL 0x13 // GPIO1x Level/Pulse Control Register
// 0:Level Mode
// 1:Pulse Mode
#define GPIO1X_PULSE_WIDTH_CONTROL 0x14 // GPIO1x Pulse Width Control Register
#define GP1_PSWIDTH_500US 0x00 // When select Pulse mode: 500 us.
#define GP1_PSWIDTH_1MS 0x01 // When select Pulse mode: 1 ms.
#define GP1_PSWIDTH_20MS 0x02 // When select Pulse mode: 20 ms.
#define GP1_PSWIDTH_100MS 0x03 // When select Pulse mode: 100 ms.
//-----

#define GPIO2X_PULSE_CONTROL 0x23 // GPIO2x Level/Pulse Control Register
// 0:Level Mode
// 1:Pulse Mode
#define GPIO2X_PULSE_WIDTH_CONTROL 0x24 // GPIO2x Pulse Width Control Register
#define GP2_PSWIDTH_500US 0x00 // When select Pulse mode: 500 us.
#define GP2_PSWIDTH_1MS 0x01 // When select Pulse mode: 1 ms.
#define GP2_PSWIDTH_20MS 0x02 // When select Pulse mode: 20 ms.
#define GP2_PSWIDTH_100MS 0x03 // When select Pulse mode: 100 ms.
//-----

#define GPIO3X_PULSE_CONTROL 0x43 // GPIO3x Level/Pulse Control Register
// 0:Level Mode
// 1:Pulse Mode
#define GPIO3X_Output_Data 0x41 // GPIO3x Output Data Register
#define GPIO3X_PULSE_WIDTH_CONTROL 0x44 // GPIO3x Pulse Width Control Register
#define GP3_PSWIDTH_500US 0x00 // When select Pulse mode: 500 us.
#define GP3_PSWIDTH_1MS 0x01 // When select Pulse mode: 1 ms.
#define GP3_PSWIDTH_20MS 0x02 // When select Pulse mode: 20 ms.
#define GP3_PSWIDTH_100MS 0x03 // When select Pulse mode: 100 ms.
//-----

#define WDT_TIMER_RANGE 0x37 // 0-255 (secord or minute program by WDT_UNIT)
#define WDT_CONFIGURATION 0x36 // Configure WDT Function
#define WDT_TIMEOUT_FLAG 0x40 // When watchdog timeout.this bit will be set to 1.
#define WDT_ENABLE 0x20 // Enable watchdog timer
#define WDT_PULSE 0x10 // Configure WDT output mode
// 0:Level Mode
// 1:Pulse Mode

#define WDT_UNIT 0x08 // Watchdog unit select.
// 0:Select second.
// 1:Select minute.

#define WDT_LEVEL 0x04 // When select level output mode:
// 0:Level low
// 1:Level high

#define WDT_PSWIDTH_1MS 0x00 // When select Pulse mode: 1 ms.
#define WDT_PSWIDTH_20MS 0x01 // When select Pulse mode: 20 ms.
#define WDT_PSWIDTH_100MS 0x02 // When select Pulse mode: 100 ms.
#define WDT_PSWIDTH_4000MS 0x03 // When select Pulse mode: 4 s.

```

3-8-3 IO Device: F75111 VB6 under Windows


The Sample code source you can download from

Source file: 75111_VB_v1.2.rar http://tprd.info/lexwiki/index.php/IO_Device:F75111_VB6

Binary file: 75111_VB_Src1.2.rar


USERNAME & PASSWORD: sf

How to use this Demo Application

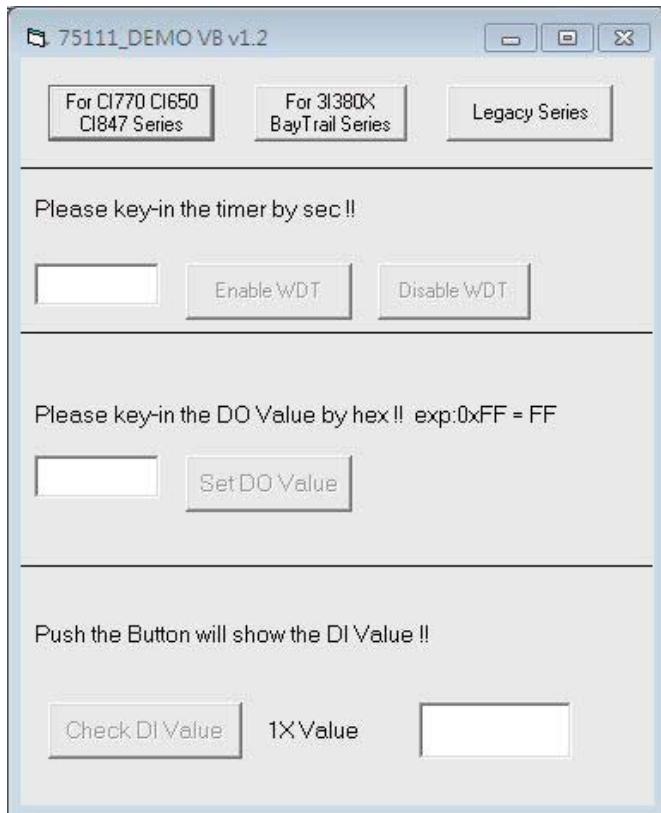

- A Function - Choose your motherboard model
- B Function - Enable WDT timer ,Key-in the value by seconds then system will reboot after value which you key-in in left text box !!
- C Function - Disable WDT timer ,Push down the button then WDT timer value will be clear !!
- D Function - Set DO Value ,Key-in the DO value by hex then push the button !!
- E Function - Check DI Value ,The right side two text box will display DI 1X & 2X Value when you push down the button!!

F75111 Layout Picture

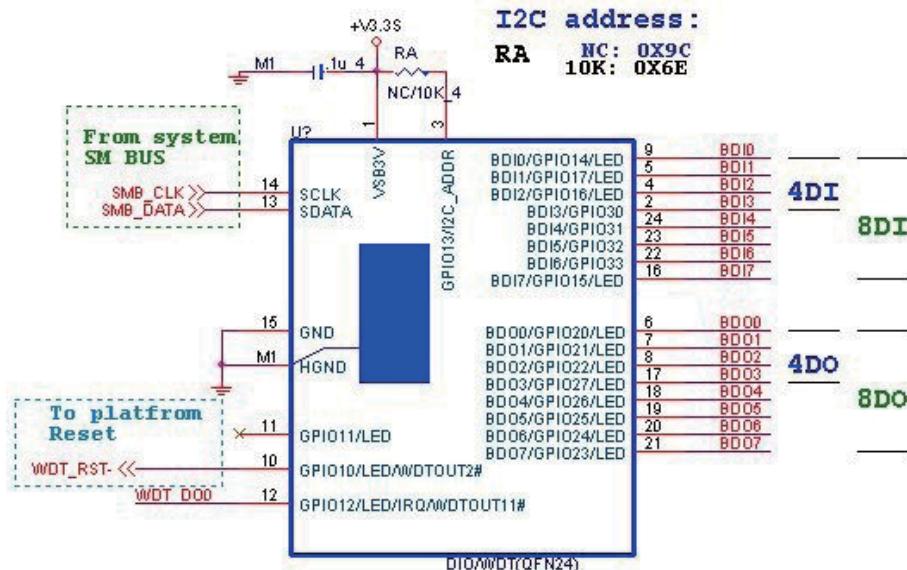

SDK Function Introduction

Function EnableWDT

```
Function EnableWDT(timer As Integer)
```

```
Call WriteI2CByte(&H3, &H3)
Call WriteI2CByte(&H37, timer)
Call WriteI2CByte(&H36, &H73)
```

```
End Function
```

Function DisableWDT

```
Function DisableWDT()
```

```
Call WriteI2CByte(&H36, &H0)
```

```
End Function
```

Function SetDOValue

```
Function SetDOValue(dovalue As Integer)
```

```
Dim Data As Integer
```

```
Dim Value As Integer
```

```
Data = 0
```

```
Value = dovalue
```

```
If (Value And &H1) <> 0 Then
```

```
    Data = Data + &H1
```

```
End If
```

```
If (Value And &H2) <> 0 Then
```

```
    Data = Data + &H2
```

```
End If
```

```
If (Value And &H4) <> 0 Then
```

```
    Data = Data + &H4
```

```
End If
```

```
If (Value And &H80) <> 0 Then
```

```
    Data = Data + &H8
```

```
End If
```

```
If (Value And &H40) <> 0 Then
```

```
    Data = Data + &H10
```

```
End If
```

```
If (Value And &H20) <> 0 Then
```

```
    Data = Data + &H20
```

```
End If
```

```
If (Value And &H10) <> 0 Then
```

```
    Data = Data + &H40
```

```
End If
```

```
If (Value And &H8) <> 0 Then
```

```
    Data = Data + &H80
```

```
End If
```

```
Call Writel2CByte(&H23, &H0)
```

```
Call Writel2CByte(&H20, &HFF)
```

```
Call Writel2CByte(&H2B, &HFF)
```

```
Call Writel2CByte(&H21, Data)
```

```
End Function
```

Function CheckD1Value

```
Function CheckD1Value()
Dim GPIO1X As Integer
Dim GPIO3X As Integer
Dim D11Xhex As String
Dim D13Xhex As String

Dim Data As Long

Data = 0

Call ReadI2CByte(&H12, GPIO1X)
Call ReadI2CByte(&H42, GPIO3X)

GPIO1X = GPIO1X And &HF0
GPIO3X = GPIO3X And &HF

If (GPIO1X And &H10) <> 0 Then
    Data = Data + &H1
End If

If (GPIO1X And &H80) <> 0 Then
    Data = Data + &H2
End If

If (GPIO1X And &H40) <> 0 Then
    Data = Data + &H4
End If

If (GPIO3X And &H1) <> 0 Then
    Data = Data + &H8
End If

If (GPIO3X And &H2) <> 0 Then
    Data = Data + &H10
End If

If (GPIO3X And &H4) <> 0 Then
    Data = Data + &H20
End If

If (GPIO3X And &H8) <> 0 Then
    Data = Data + &H40
End If

If (GPIO1X And &H20) <> 0 Then
    Data = Data + &H80
End If

D11Xhex = Hex(Data)

Text3.Text = "0x" + D11Xhex

End Function
```

3-8-4 IO Device: F75111 under linux

The Sample code source you can download from

Source file: F75111v2.4L_SRC.tar.gz http://tprd.info/lexwiki/index.php/IO_Device:F75111_under_linux

Binary file: F75111v2.4L_BIN.tar.gz

USERNAME & PASSWORD: sf

How to compile source code

1. Compile source code with Code::Blocks

download and install the Code::Block with command "apt-get install codeblocks"

Open an exist project(F75111.cbp) in Code::Blocks, click the compile button

(add an option 'pkg-config --libs gtk+-2.0 gthread-2.0' in "Project->Build Options->Linker Setting->Other linker option")

2. Compile source code with "make"

1. cd F75111


1. make

1. src/f75111 // execute the binary file

How to use this Demo Application




1. Press the "Start" button to test DIO function
2. Press the "Enable" button to test WDT function
3. Press the "Disable" button to disable WDT
4. Check the "Enable Loop" box and press "Enable" to do WDT loop test
5. Press "Install" to set the system to autorun this application when booting, press "Uninstall" to remove this application when booting.
6. If WDT enable, system icon will be blinking.

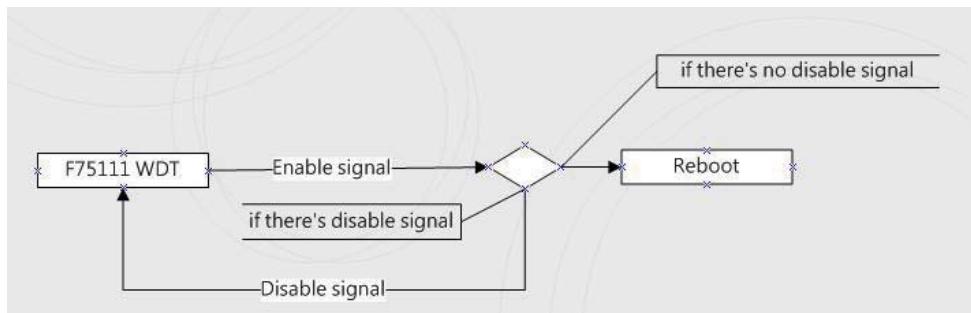

p.s.

f75111 send "F75111_SetWDTEnable(BYTE byteTimer)" including a parameter "timer", if there's no disable signal (F75111_SetWDTDisable()) to stop it before timer countdown to 0, System will reboot. if there's disable signal received, resent Enable WDT signal, for a loop to prevent from reboot p.s.

F75111 Layout Picture

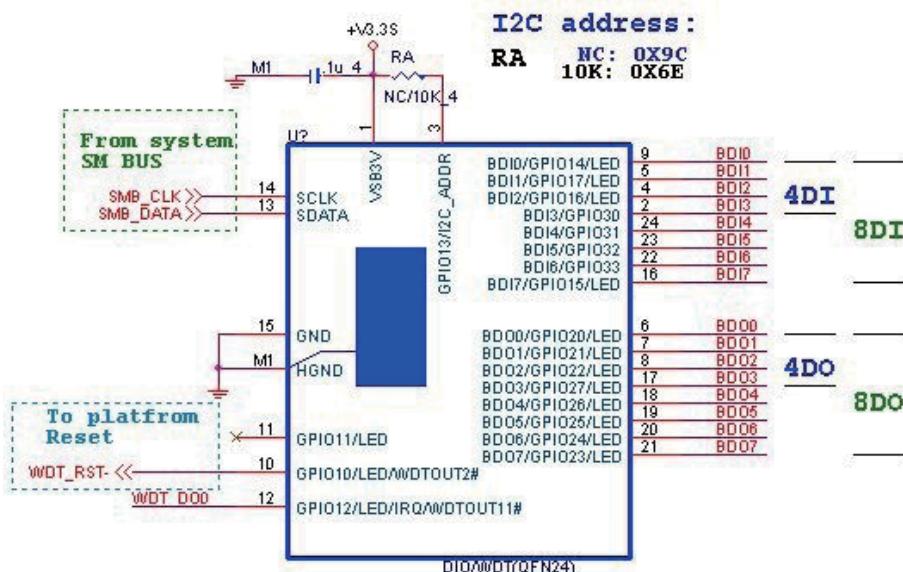

Introduction

IO function In file SMBus.c

```
void SMBusIoWrite(BYTE byteOffset,BYTE byteData)
{
    outb( byteData , m_SMBusMapIoAddr + byteOffset);
}

BYTE SMBusIoRead(BYTE byteOffset)
{
    DWORD dwAddrVal;

    dwAddrVal = inb(m_SMBusMapIoAddr + byteOffset);
    return (BYTE)(dwAddrVal & 0xFF);
}
```

Initial internal F75111

```
void F75111::InitInternalF75111()
{
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO1X_CONTROL_MODE ,0x00);      //set GPIO1X to Input function
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO3X_CONTROL_MODE ,0x00);      //set GPIO3X to Input function
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO2X_CONTROL_MODE ,0xFF);     //set GPIO2X to Output function

    this->Write_Byte(F75111_INTERNAL_ADDR,F75111_CONFIGURATION, 0x03);      //Enable WDT OUT function
}
```

Set output value

```
void F75111::InitDigitalOutput(BYTE byteValue)
{
    BYTE byteData = 0;
    byteData = (byteData & 0x01 )? byteValue + 0x01 : byteValue;
    byteData = (byteData & 0x02 )? byteValue + 0x02 : byteValue;
    byteData = (byteData & 0x04 )? byteValue + 0x04 : byteValue;
    byteData = (byteData & 0x80 )? byteValue + 0x08 : byteValue;
    byteData = (byteData & 0x40 )? byteValue + 0x10 : byteValue;
    byteData = (byteData & 0x20 )? byteValue + 0x20 : byteValue;
    byteData = (byteData & 0x10 )? byteValue + 0x40 : byteValue;
    byteData = (byteData & 0x08 )? byteValue + 0x80 : byteValue;                // get value bit by bit

    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO2X_OUTPUT_DATA,byteData); // write byteData value via GPIO2X output pin
}
```

Get Input value

```
BYTE F75111::InterDigitalInput()
{
    BYTE byteGPIO1X = 0;
    BYTE byteGPIO3X = 0;
    BYTE byteData = 0;

    this->Read_Byte(F75111_INTERNAL_ADDR,GPIO1X_INPUT_DATA,&byteGPIO1X); // Get value from GPIO1X
    this->Read_Byte(F75111_INTERNAL_ADDR,GPIO3X_INPUT_DATA,&byteGPIO3X); // Get value from GPIO3X

    byteGPIO1X = byteGPIO1X & 0xF0;                                     // Mask unuseful value
    byteGPIO3X = byteGPIO3X & 0x0F;                                     // Mask unuseful value

    byteData = ( byteGPIO1X & 0x10 )? byteData + 0x01 : byteData;
    byteData = ( byteGPIO1X & 0x80 )? byteData + 0x02 : byteData;
    byteData = ( byteGPIO1X & 0x40 )? byteData + 0x04 : byteData;
    byteData = ( byteGPIO3X & 0x01 )? byteData + 0x08 : byteData;

    byteData = ( byteGPIO3X & 0x02 )? byteData + 0x10 : byteData;
    byteData = ( byteGPIO3X & 0x04 )? byteData + 0x20 : byteData;
    byteData = ( byteGPIO3X & 0x08 )? byteData + 0x40 : byteData;
    byteData = ( byteGPIO1X & 0x20 )? byteData + 0x80 : byteData;           // Get correct DI value from GPIO1X & GPIO3X

    return byteData;
}
```

Enable WatchDog

```
void F75111_SetWDTEnable (BYTE byteTimer)
{
    WriteByte(F75111_INTERNAL_ADDR,WDT_TIMER_RANGE ,byteTimer);          // set WatchDog range and timer
    WriteByte(F75111_INTERNAL_ADDR,WDT_CONFIGURATION,WDT_TIMEOUT_FLAG | WDT_ENABLE | WDT_PULSE | WDT_PSWIDTH_100MS); // Enable WatchDog, Setting WatchDog configure
}
```

Disable WatchDog

```
void F75111_SetWDTDisable ()
{
    WriteByte(F75111_INTERNAL_ADDR,WDT_CONFIGURATION,0x00);                // Disable WatchDog
}
```

```

//-----
#define F75111_INTERNAL_ADDR          0x9C // OnBoard F75111 Chipset
#define F75111_EXTERNAL_ADDR          0x6E // External F75111 Chipset
//-----
#define F75111_CONFIGURATION          0x03 // Configure GPIO13 to WDT2 Function
//-----
#define GPIO1X_CONTROL_MODE           0x10 // Select Output Mode or Input Mode
#define GPIO2X_CONTROL_MODE           0x20 // Select GPIO2X Output Mode or Input Mode
#define GPIO3X_CONTROL_MODE           0x40 // Select GPIO3X Output Mode or Input Mode
//-----
#define GPIO1X_INPUT_DATA             0x12 // GPIO1X Input
#define GPIO3X_INPUT_DATA             0x42 // GPIO3X Input
//-----
#define GPIO2X_OUTPUT_DATA            0x21 // GPIO2X Output
//-----
#define GPIO2X_OUTPUT_DRIVING          0x2B // Select GPIO2X Output Mode or Input Mode
//-----
#define WDT_TIMER_RANGE                0x37 // 0-255 (secord or minute program by WDT_UNIT)
//-----
#define WDT_CONFIGURATION              0x36 // Configure WDT Function
#define WDT_TIMEOUT_FLAG               0x40 // When watchdog timeout.this bit will be set to 1.
#define WDT_ENABLE                     0x20 // Enable watchdog timer
#define WDT_PULSE                      0x10 // Configure WDT output mode
                                         // 0:Level Mode
                                         // 1:Pulse Mode
#define WDT_UNIT                       0x08 // Watchdog unit select.
                                         // 0:Select second.
                                         // 1:Select minute.
#define WDT_LEVEL                      0x04 // When select level output mode:
                                         // 0:Level low
                                         // 1:Level high
#define WDT_PSWIDTH_1MS                0x00 // When select Pulse mode: 1 ms.
#define WDT_PSWIDTH_20MS                0x01 // When select Pulse mode: 20 ms.
#define WDT_PSWIDTH_100MS               0x02 // When select Pulse mode: 100 ms.
#define WDT_PSWIDTH_4000MS              0x03 // When select Pulse mode: 4 s.
//-----
typedef struct F75111_Address
{
    BYTE bAddress;
}F75111_Address;
F75111_Address m_F75111;

bool      F75111_Init();
BYTE     F75111_GetDigitalInput ();
void     F75111_SetDigitalOutput(BYTE byteValue);

BYTE     F75111_GetWDTMode();
void     F75111_SetWDTMode(BYTE dwvalue);

void     F75111_SetWDTEnable (BYTE byteTimer);
void     F75111_SetWDTDisable ();

```

3-9 LAN Interface

- CL1 / CL2: RJ45 LAN port Giga / 100Mb (RJ45 Jack)

PIN NO.	Description	PIN NO.	Description
1	TR0-/TX+	5	TR2-/NC
2	TR0+/TX-	6	TR2+/RX-
3	TR1-/RX+	7	TR3-/NC
4	TR1+/NC	8	TR3+/NC

- CL11 / CL21: LAN port Giga / 100Mb 2x5pin (2.0mm) wafer (option)

PIN NO.	Description	PIN NO.	Description
1	TR0-/TX+	2	TR0+/TX-
3	TR2+/NC	4	TR1+/RX-
5	TR1-/RX+	6	TR2-/NC
7	TR3-/NC	8	TR3+/NC

- RJ45 LAN Connector---LED define Giga / 100 / 10MB Connector


SPEED		10 Mbps		100 Mbps		1000 Mbps				
Indicate	Side	Back		Front	Back		Front	Back		Front
	LED	Link	ACT	ACT	Link	ACT	ACT	Link	ACT	ACT
LAN Light			Orange	Orange	Green	Orange	Orange	Red	Orange	Orange



3-10 I²C Bus Interface

- CO1: I²C Bus 1x4pin (1.25mm) Wafer

PIN NO.	Description
1	+3.3V
2	GND
3	I ² C Clock
4	I ² C DATA

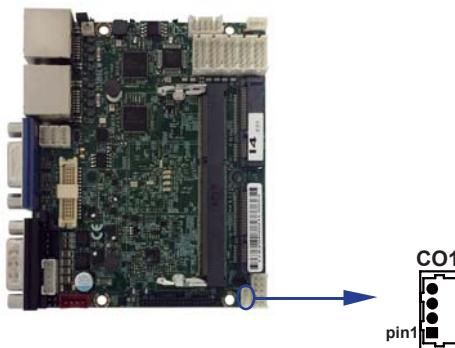


3-11 DC Power Input

- CPI1: DC-in 1x4 (2.0mm) Wafer Internal connector (Red)

PIN NO.	Description
2,3	DC-IN (12V, 24V)
1,4	GND


Note: Very important check DC-in Voltage type for 12V or 9~48V model spec

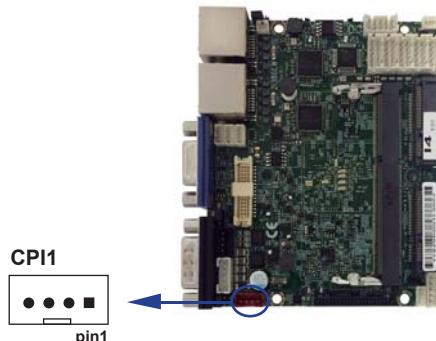

3-12 Panel Inverter Power Interface (OEM)

- CPP1: Panel POWER 1x5pin (2.0mm) Wafer

PIN NO.	Description
1	+12V
2	GND
3	PWM dimming
4	ENBKL (3.3V)
5	ENBKL (5V)

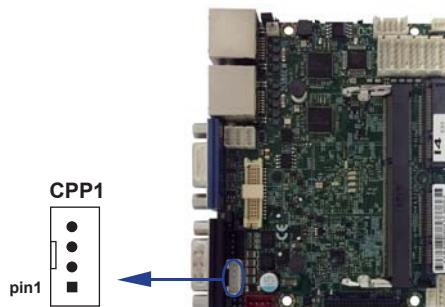


3-13 DC +12V / +5 Voltage Power Output

- CPO1: +12V / +5V DC voltage output 1x4pin (2.0mm) Wafer (Black)

PIN NO.	Description
1	+5V
2	GND
3	GND
4	+12V *

* Note: Attention! Check Device Power in spec

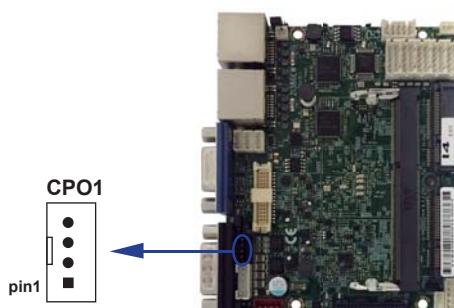

3-14 Touch screen (2x5pin 2.0mm wafer) USB interface (OEM)

• CT1: For 8-wire type pin define

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Bottom	2	Bottom Sense
3	Top Sense	4	Top
5	Right	6	Right Sense
7	Left	8	Left Sense
9	GND	10	NC

Note: For eight wire type cable Pin 3 and Pin4 need short


• CT1: For 4-wire type pin define

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Bottom	2	N/A
3	N/A	4	Top
5	Right	6	N/A
7	Left	8	N/A
9	GND	10	KEY

Note: 1. For four wire type cable Pin 3 and Pin4 need short.

• CT1: For 5-wire type pin define

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	UR(H)	2	N/A
3	Sense	4	UL(Y)
5	LR(X)	6	N/A
7	LL(L)	8	N/A
9	GND	10	KEY

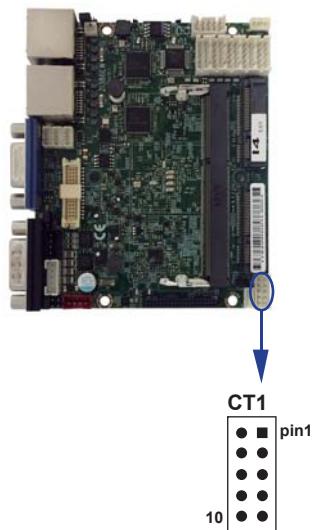

3-15 USB Interface


• CU1: USB3.0 Port Type A Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VBUS	6	USB3_RX+
2	USB2_D-	7	GND
3	USB2_D+	8	USB3_TX-
4	GND	9	USB3_TX+
5	USB3_RX-	10	GND

Note: CU1 USB2.0 Shared with CU11 signal


• CU2: USB2.0 Port Type A Connector

PIN NO.	DESCRIPTION
1	+5V
2	DATA-
3	DATA+
4	GND

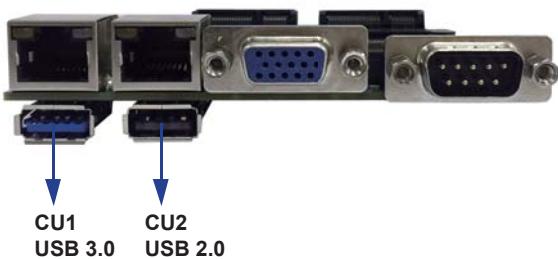

• CU3 / CU4 / CU11: USB2.0 port 1x4pin (1.25mm) Wafer


PIN NO.	Description
1	+5V
2	DATA -
3	DATA +
4	GND

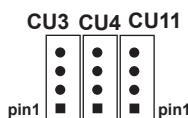

3-16 LVDS1: LVDS interface (2x15 pin 1.25mm wafer) (OEM)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	PWM dimming	2	+5V
3	+LCD(5V or 3.3V)	4	+LCD(5V or 3.3V)
5	Channel-1-DATA3+	6	Channel-0-DATA3+
7	Channel-1-DATA3-	8	Channel-0-DATA3-
9	Channel-0-DATA2+	10	Channel-0-CLK+
11	Channel-0-DATA2-	12	Channel-0-CLK-
13	GND	14	GND
15	Channel-0-DATA1+	16	Channel-0-DATA0+
17	Channel-0-DATA1-	18	Channel-0-DATA0-
19	GND	20	GND
21	+LCD(5V or 3.3V)	22	+LCD(5V or 3.3V)
23	Channel-1-DATA2+	24	Channel-1-CLK+
25	Channel-1-DATA2-	26	Channel-1-CLK-
27	Channel-1-DATA1+	28	Channel-1-DATA0+
29	Channel-1-DATA1-	30	Channel-1-DATA0-

- Note:
1. LVDS interface support 18 / 24bits two channel.
 2. JVL1: LVDS panel +5V / +3.3V (default) Voltage select.
 3. LVDS1 PIN 1 for panel backlight active.
 4. Pin 1 back light dimming control. Provided 200Hz / 275Hz / 380 Hz / 20KHz / 25KHz and adjust PWM duty cycle by software program.

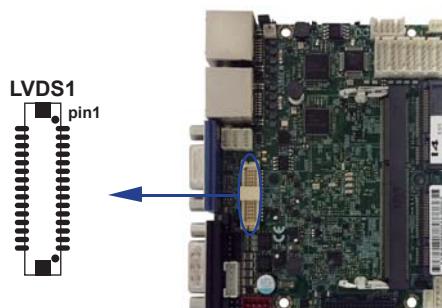


3-17 SATA Interface

- **SATA1: SATA Port 1x7pin connector**

PIN NO.	Description
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND

Note: 1. SATA1 support SATA 2.0 spec update 3Gb/sec.
2. CPO1 provide SATA HDD power +12V, GND, +5V.


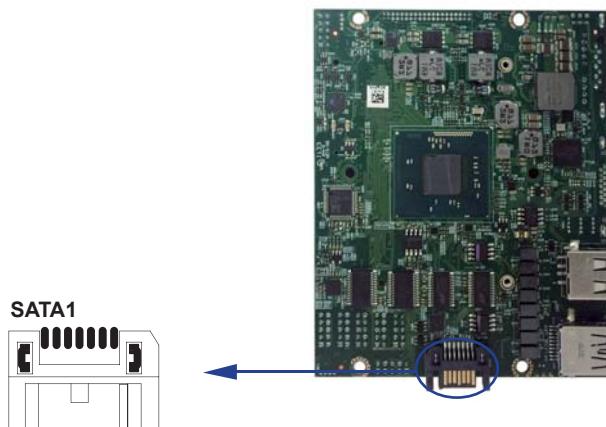


3-18 PCI Express Mini card

- MPCE1 / MPCE2: Support USB and PCIe and mSATA by one Interface
(Mini card socket 52pin)

MPCE1 / MPCE 2: Full size mini card

PIN NO.	Description	PIN NO.	Description
1	NC	2	+3.3V
3	NC	4	GND
5	NC	6	+1.5V
7	NC	8	NC
9	GND	10	NC
11	PCIe-CLK-/NC	12	NC
13	PCIe-CLK+/NC	14	NC
15	GND	16	NC
KEY			
17	NC	18	GND
19	NC	20	NC
21	GND	22	Reset
23	PCIe-RX-/mSATA-RX+	24	+3.3V
25	PCIe-RX+/mSATA-RX-	26	GND
27	GND	28	+1.5V
29	GND	30	SMB-CLK
31	PCIe-TX-/mSATA-TX-	32	SMB-DATA
33	PCIe-TX+/mSATA-TX+	34	GND
35	GND	36	USB-DATA-
37	GND	38	USB-DATA+
39	+3.3V	40	GND
41	+3.3V	42	NC
43	NC/GND	44	NC
45	NC	46	NC
47	NC	48	+1.5V
49	NC	50	GND
51	mSATA/PCIe detect	52	+3.3V

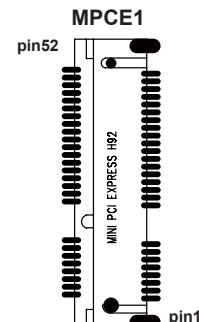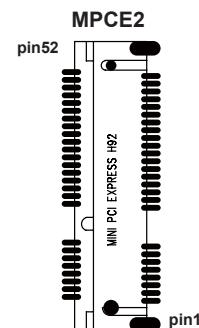


Note:

1. MPCE1 can select to PCIe signal (BIOS control),
the PCIe signal default support MPCE1.
2. MPCE2 can select to USB signal (BOM control),
the USB signal default support MPCE2.

3-19 LEX eIO connector.

PIN	Description	PIN	Description
1	+12V	2	+12V
3	GND	4	RESET
5	PCIe_TX0_P	6	RESERVED
7	PCIe_TX0_N	8	GND
9	GND	10	PCIe_P0_RX_N
11	PCIe_CLK0_P	12	PCIe_P0_RX_P
13	PCIe_CLK0_N	14	GND
15	GND	16	PCIe_P1_RX_N
17	PCIe_TX1_P	18	PCIe_P1_RX_P
19	PCIe_TX1_N	20	GND
21	GND	22	RESERVED
23	PCIe_CLK1_P	24	RESERVED
25	PCIe_CLK1_N	26	GND
27	GND	28	SMB_CLK
29	USB_P	30	SMB_DATA
31	USB_N	32	GND
33	GND	34	SLP_S3_N
35	+12V	36	RESERVED
37	+12V	38	GND
39	+12V	40	+12V

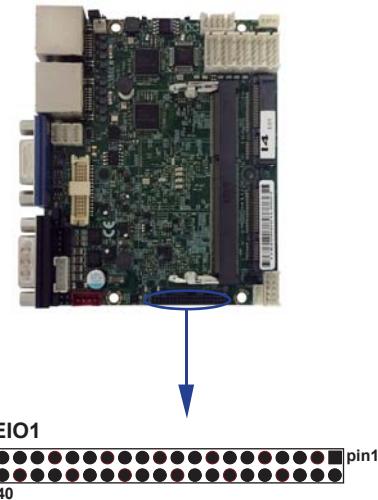

3-20 Connector wafer of Compatible Brand and part number list

Location	CKTS	PITCH	Brand Name	Mating connector	Cable housing
CA3	2x5 10Pin	2.0mm	JST	B10B-PHDSS	PHDR-10VS
CALR1	1x4 4Pin	1.25mm	MOLEX	53047-0410	51021-0400
CC2	2x5 10Pin	2.0mm	JST	B10B-PHDSS	PHDR-10VS
CC3	2x5 10Pin	2.0mm	JST	B10B-PHDSS	PHDR-10VS
CC4	2x5 10Pin	2.0mm	JST	B10B-PHDSS	PHDR-10VS
CFP1	2x5 10Pin	2.0mm	JST	B10B-PHDSS	PHDR-10VS
CIO1	2x5 10Pin	2.0mm	JST	B10B-PHDSS	PHDR-10VS
CL11	2x4 8Pin	2.0mm	JST	B8B-PHDSS	PHDR-08VS
CL21	2x4 8Pin	2.0mm	JST	B8B-PHDSS	PHDR-08VS
CO1	1x4 4Pin	1.25mm	MOLEX	53047-0410	51021-0400
CPI1	1x4 4Pin	2.0mm	JST	B4B-PH-KL	PHR-4
CPP1	1x5 5Pin	2.0mm	JST	B5B-PH-KL	PHR-5
CPO1	1x4 4Pin	2.0mm	JST	B4B-PH-KL	PHR-4
CU3	1x4 4Pin	1.25mm	MOLEX	53047-0410	51021-0400
CU4	1x4 4Pin	1.25mm	MOLEX	53047-0410	51021-0400
EIO1	2x20 40Pin	1.27mm			

Chapter-4

Introduction of BIOS

The BIOS is a program located in the Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program gains control. The BIOS first operates an auto-diagnostic test called POST (Power on Self Test) for all the necessary hardware, it detects the entire hardware devices and configures the parameters of the hardware synchronization. After these tasks are completed, BIOS will give control of the computer back to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate with, it is the key factor of system stability and of ensuring your system performance at best.

In the BIOS Setup main menu, you can see several options. We will explain these options in the following pages. First, let us see the function keys you may use here:

Press <Esc> to quit the BIOS Setup.

Press ↑←→(up, down, left, right) to choose the option you want to confirm or modify.

Press <F10> to save these parameters and to exit the BIOS Setup menu after you complete the setup of BIOS parameters. Press Page Up/Page Down or +/- keys to modify the BIOS parameters for the active option.

4-1 Enter Setup

Power on the computer and press key immediately to enter Setup.

If the message disappears before you respond but you still wish to enter Setup, restart the system by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart the system by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys.

4-2 BIOS Menu Screen & Function Keys


InsydeH2O Setup Utility				Rev. 5.0	
Main	Advanced	Security	Power	Boot	Exit
System Information				This is the help for the hour, minute, second field. Valid range is from 0 to 23, 0 to 59, 0 to 59. INCREASE/REDUCE : +/-.	
BIOS Version	2I386EW A1				
Build Date	02/12/2018				
Build Time	10:12:58				
Processor Type	Intel(R) Atom(TM) CPU E3845 @ 1.91GHz				
System Memory Speed	1333 MHz				
Cache RAM	2048 KB				
Total Memory	4096 MB				
System Time	[00:38:10]				
System Date	[01/01/2014]				
F1 Help	↑↓Select Item	F5/F6 Change Values		F9 Setup Defaults	
Esc Exit	←Select Menu	Enter Select ▶ SubMenu		F10 Save and Exit	

In the above BIOS Setup main menu of, you can see several options.

We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press ←→ (left, right) to select screen;
- Press ↑↓ (up, down) to choose, in the main menu, the option you want to confirm or to modify.
- Press <Enter> to select.
- Press <+>/<-> or <F5>/<F6> keys when you want to modify the BIOS parameters for the active option.
- [F1]: General help.
- [F9]: Optimized defaults.
- [F10]: Save & Exit.
- Press <Esc> to quit the BIOS Setup

4-3 Getting Help

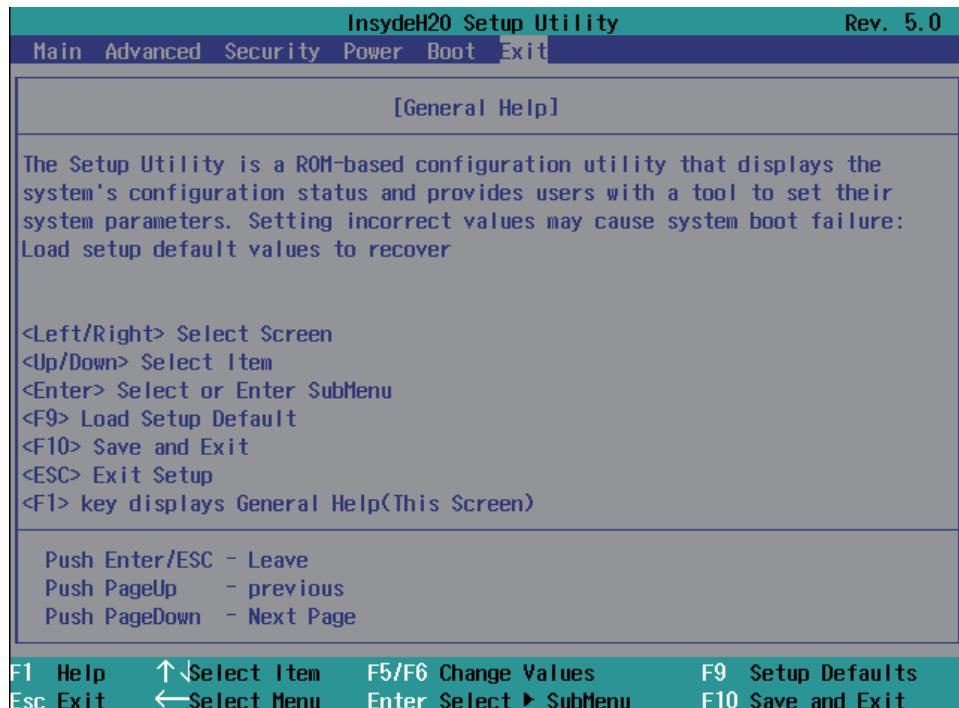

Status Page Setup Menu/ Option Page Setup Menu

Press F1 to pop up a help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

4-4 Menu Bars

There are six menu bars on top of BIOS screen:

Main To change system basic configuration

Advanced To change system advanced configuration

Security Password settings

Power PME & Power button settings

Boot Save setting, loading and exit options.

User can press the right or left arrow key on the keyboard to switch from menu bar.

The selected one is highlighted.

4-5 Main

InsydeH2O Setup Utility			Rev. 5.0		
Main	Advanced	Security	Power	Boot	Exit
BIOS Version	2I386EW A1				
Build Date	02/12/2018				
Build Time	10:12:58				
Processor Type	Intel(R) Atom(TM) CPU E3845 @ 1.91GHz				
System Memory Speed	1333 MHz				
Cache RAM	2048 KB				
Total Memory	4096 MB				
System Time	[00:38:10]				
System Date	[01/01/2014]				

F1 Help $\uparrow\downarrow$ Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit $\leftarrow\rightarrow$ Select Menu Enter Select ► SubMenu F10 Save and Exit

Main menu screen includes some basic system information. Highlight the item and then use the $<+>$ or $<->$ and numerical keyboard keys to select the value you want in each item.

System Date

Set the Date. Please use [Tab] to switch between data elements.

System Time

Set the Time. Please use [Tab] to switch between data elements.

4-6 Advanced

InsydeH2O Setup Utility		Rev. 5.0			
Main	Advanced	Security	Power	Boot	Exit
<ul style="list-style-type: none">▶ Boot Configuration▶ PCI Express Configuration▶ Video Configuration▶ Thermal Configuration▶ SATA Configuration▶ Console Redirection▶ ACPI Table/Features Control					Configures Boot Settings.
<p>F1 Help \uparrow Select Item F5/F6 Change Values F9 Setup Defaults Esc Exit \leftarrow Select Menu Enter Select \triangleright SubMenu F10 Save and Exit</p>					

Boot Configuration

Please refer section 4-6-1

PCI Express Configuration

Please refer section 4-6-2

Video Configuration

Please refer section 4-6-3

Thermal Configuration

Please refer section 4-6-4

SATA Configuration

Please refer section 4-6-5

Console Redirection

Please refer section 4-6-6

ACPI Table/Features Control

Please refer section 4-6-7

4-6-1 Boot Configuration

Rev. 5.0

Advanced

Boot Configuration		
Numlock	<On>	Selects Power-on state for Numlock

F1 Help \uparrow Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit \leftarrow Select Menu Enter Select ► SubMenu F10 Save and Exit

Numlock

Select Power-on state for Numlock, default is <ON>

4-6-2 PCI Express Configuration

InsydeH2O Setup Utility

Rev. 5.0

Advanced

PCI Express Configuration

- ▶PCI Express Root Port 1
- ▶PCI Express Root Port 2
- ▶PCI Express Root Port 3
- ▶PCI Express Root Port 4

Control the PCI Express Root Port.

F1 Help
Esc Exit

↑ Select Item
← Select Menu

F5/F6 Change Values
Enter Select ▶ SubMenu

F9 Setup Defaults
F10 Save and Exit

PCIe 1/2/3/4 configuration settings

4-6-2-1 ► PCI Express Root Port 1/2/3/4

Rev. 5.0

Advanced

PCI Express Root Port 1	Control the PCI Express Root Port.
PCI Express Root Port 1 <Enabled>	
PCIE Port 1 Speed <Gen1>	
PCIE Port 1 Option ROM <Disabled>	

F1 Help \uparrow Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit \leftarrow Select Menu Enter Select ▶ SubMenu F10 Save and Exit

Control the PCI Express Root Port.

The optional settings are: Enabled(default), Disabled.

Select PCI Express port speed.

The optional settings are: Gen1(default), Gen2

Select PCIE TXE ROM support

The optional settings are: Disabled(default), Enabled

4-6-3 Video Configuration

InsydeH20 Setup Utility Rev. 5.0

Advanced

Video Configuration		Select Hardware CRT configuration
Configure CRT as	<CRT>	
Configure DDI0 as	<LVDS>	
Configure LVDS Panel Number as	<1024 x 768 18bit>	
Aperture Size	<256MB>	
IGD - DVMT Pre-Allocated	<64M>	
IGD - DVMT Total Gfx Mem	<256M>	

F1 Help F5/F6 Change Values F9 Setup Defaults
Esc Exit ←Select Menu Enter Select ► SubMenu F10 Save and Exit

Configure LVDS Panel Number as (for OEM Model)

The Panel resolution supported are below:

640 x 480 18bit
800 x 600 18bit
1024 x 768 18bit (default)
800 x 480 18bit
1024 x 600 18bit
1280 x 800 18bit
1366 x 768 18bit
800 x 600 24bit
1024 x 768 24bit
1280 x 800 24bit
1366 x 768 24bit
1280 x 1024 48bit
1440 x 900 48bit
1600 x 1200 48bit
1920 x 1080 48bit

Aperture Size

The optional settings are: 128MB, 256MB(default), 512MB.

IGD - DVMT Pre-Allocated

Use this item to select DVMT 5.0 pre-allocated (fixed) graphics memory size used by the internal graphics device.

The optional settings are: 64(default)/96/128/160/192/224/256/288/320/352/384/416/448/480/512MB

IGD - DVMT Total Gfx Mem

Use this item to select DVMT 5.0 total graphics memory size used by the internal graphics device
The optional settings are:128M, 256M(default), MAX

4-6-4 Thermal Configuration

InsydeH20 Setup Utility		Rev. 5.0
Advanced		
Thermal Configuration Parameters		
Critical Trip Point	<110 °C>	This value controls the temperature of the ACPI Critical Trip Point – the point in which the OS will shut the system off.
Passive Trip Point	<105 °C>	NOTE: 100C is the Plan Of Record (POR) for all Intel mobile processors.

F1 Help $\uparrow\downarrow$ Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit $\leftarrow\rightarrow$ Select Menu Enter Select ► SubMenu F10 Save and Exit

Thermal Configuration Parameters

This Value controls the temperature of the ACPI Critical Trip Point, the point in which the OS will shutdown the system.

Critical Trip point is the shutdown temperature, the default value is 110°

The CPU frequency will auto reduce when cpu temperature arrived to passive Trip point.

The default of the passive trip point is 105°

4-6-5 SATA Configuration

InsydeH20 Setup Utility		Rev. 5.0
Advanced		
SATA Configuration		
SATA Controller	<Enabled>	DISABLED: Disables SATA Controller. ENABLED: Enables SATA Controller.
Chipset SATA Mode	<IDE>	
SATA Speed	<Gen1>	
IDE Mode	<Native IDE>	
SATA Port 0 Connected to an ODD	<Enabled>	
SATA Port 1 Connected to an ODD	<Enabled>	
►Serial ATA Port 0	[Not Installed]	
►Serial ATA Port 1	[Not Installed]	

F1 Help \uparrow Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit \leftarrow Select Menu Enter Select \triangleright SubMenu F10 Save and Exit

SATA Controller

Use this item to Enable or Disable SATA Device.

The optional settings are: Enabled(default) or Disabled

Chipset SATA Mode

Determine how SATA controller(s) operate.

The optional settings are: IDE Mode(default), AHCI Mode.

SATA Speed

Indicates the maximum speed the SATA controller can support.

The optional settings: Gen1, Gen2(default).

IDE Mode

Legacy IDE or Native IDE MODE,

The optional settings: Legacy IDE or Native IDE(default)

SATA Port 0 Connected to an ODD

Use this item to Enable or Disable SATA Port0 ODD function
The optional settings are: Enabled(default) or Disable

SATA Port 1 Connected to an ODD

Use this item to Enable or Disable SATA Port1 ODD function
The optional settings are: Enabled(default) or Disable

4-6-6 Console Redirection

InsydeH20 Setup Utility		Rev. 5.0
Advanced		
Console Redirection Setup		
Console Serial Redirect	<Enabled>	
Text Mode Resolution	<Force 80x24 (DEL LAST ROW)>	
Terminal Type	<VT_100>	
Baud Rate	<115200>	
Data Bits	<8 Bits>	
Parity	<None>	
Stop Bits	<1 Bit>	
Flow Control	<None>	

F1 Help \uparrow Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit \leftarrow Select Menu Enter Select \triangleright SubMenu F10 Save and Exit

Console Serial Redirect

Use this item to enable or disable Console Redirection.
The optional settings are: Enabled, Disabled(default).

Text Mode Resolution

The optional settings are: Force 80x25
Force 80x24(DEL FIRST ROW)
Force 80x24(DEL LAST ROW)

Baud Rate

The optional settings are: 115200(default) , 57600 , 38400 , 19200 , 9600 , 4800 , 2400 , 1200

Data Bits

The optional settings are: 8 Bits(default) , 7 Bits

Parity

The optional settings are: None(default) , Even , Odd

Stop Bits

The optional settings are: 1 Bit(default) , 2 Bits

Flow Control

The optional settings are: None(default) , RTS/CTS , XON/XOFF

4-6-7 ACPI Table/Features Control

InsydeH20 Setup Utility Rev. 5.0

Advanced

ACPI Table/Features Control		Enable/Disable ACPI S3 state	
DSDT - ACPI S3	<Disabled>		
F1 Help Esc Exit	↑↓Select Item ←→Select Menu	F5/F6 Change Values Enter Select ▶ SubMenu	F9 Setup Defaults F10 Save and Exit

ACPI Table/Features Control

Select ACPI sleep state the system will enter when the SUSPEND button is pressed.

The optional settings: DSDT - ACPI S3 (Suspend to RAM), Enabled or Disabled(default)

4-7 Security

InsydeH2O Setup Utility		Rev. 5.0			
Main	Advanced	Security	Power	Boot	Exit
Supervisor Password	Not Installed				Install or Change the password and the length of password must be greater than one character.

F1 Help $\uparrow\downarrow$ Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit $\leftarrow\rightarrow$ Select Menu Enter Select ► SubMenu F10 Save and Exit

Supervisor Password


To set up an Supervisor password

1. Select Supervisor Password.

The screen then pops up an Create New Password dialog.

2. Enter your desired password that is no less than 3 characters and no more than 10 characters.
3. Hit [Enter] key to submit.

4-8 Power

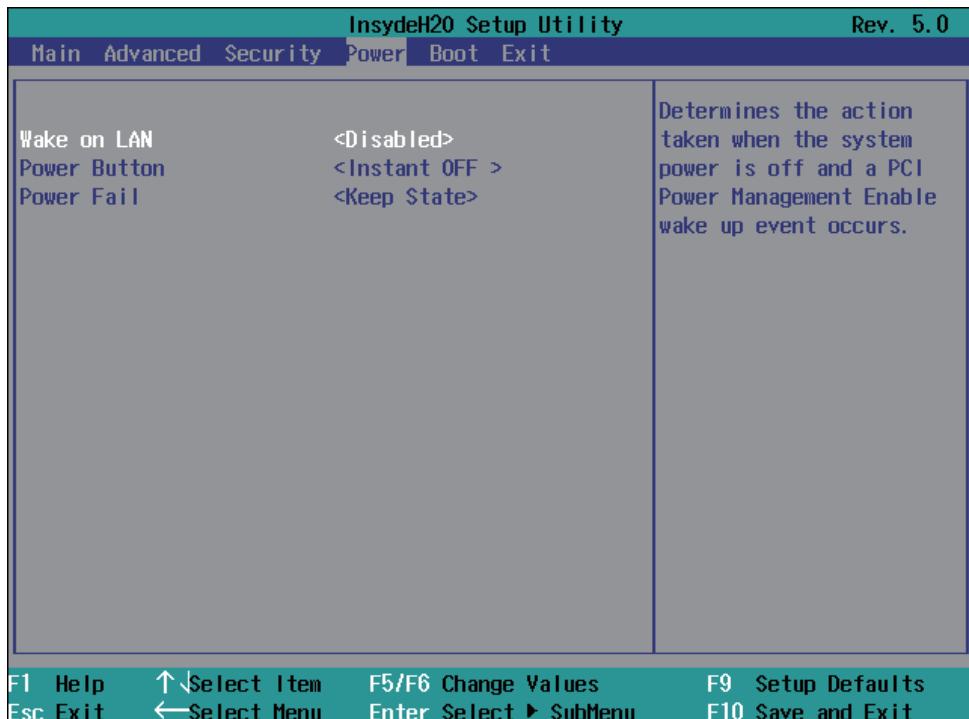

Wake on LAN

Determines the action taken when the system power is off and the PCI power management Enable wake up event occurs.

The optional settings: Enabled, Disabled(default)

Power Button

Instant OFF(default) : The system will be turn off directly when push the power button.

Delay 4 sec : The system will be turn off when push the power button for 4 sec.

Power Fail


This item specifies whether your system will reboot after a power failure or interrupt occurs.

[Keep state] Restores the system to the status before power failure or interrupt occurred.

[Always on] Leaves the computer in the power on state.

[Always off] Leaves the computer in the power off state.

4-9 Boot

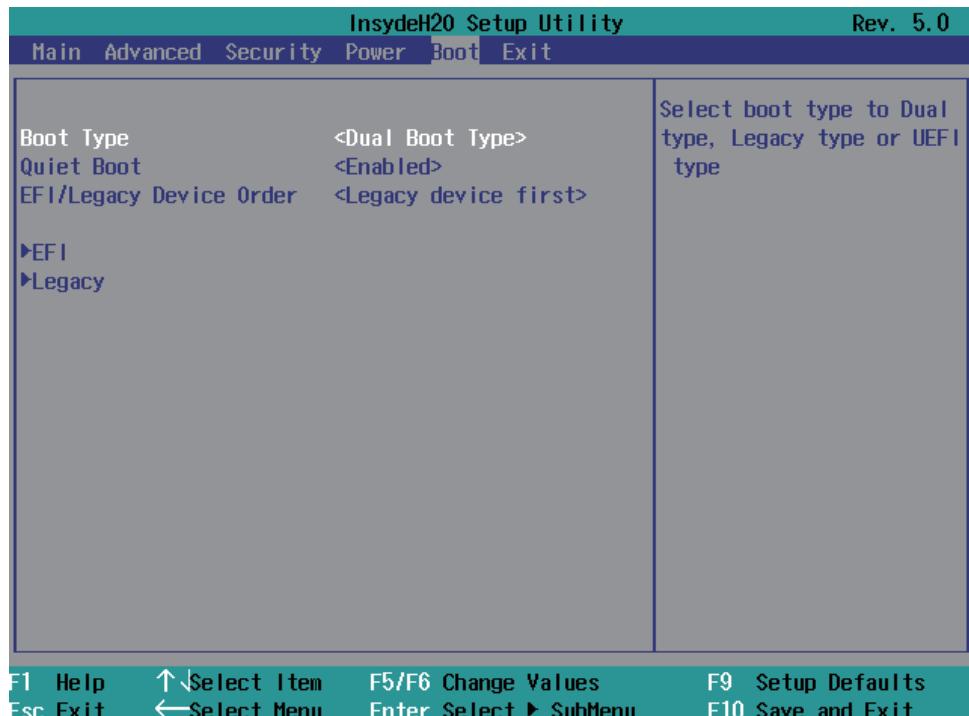

Boot type

Select boot type for Dual type ,Legacy boot type or UEFI boot type, default is Dual boot type

Quiet Boot


The optional settings are: Enabled(default), Disabled.

EFI/Legacy Device order

Determine EFI device first or legacy device first.

The optional settings: EFI device first, Legacy device first(default), smart mode

4-9-1 Legacy

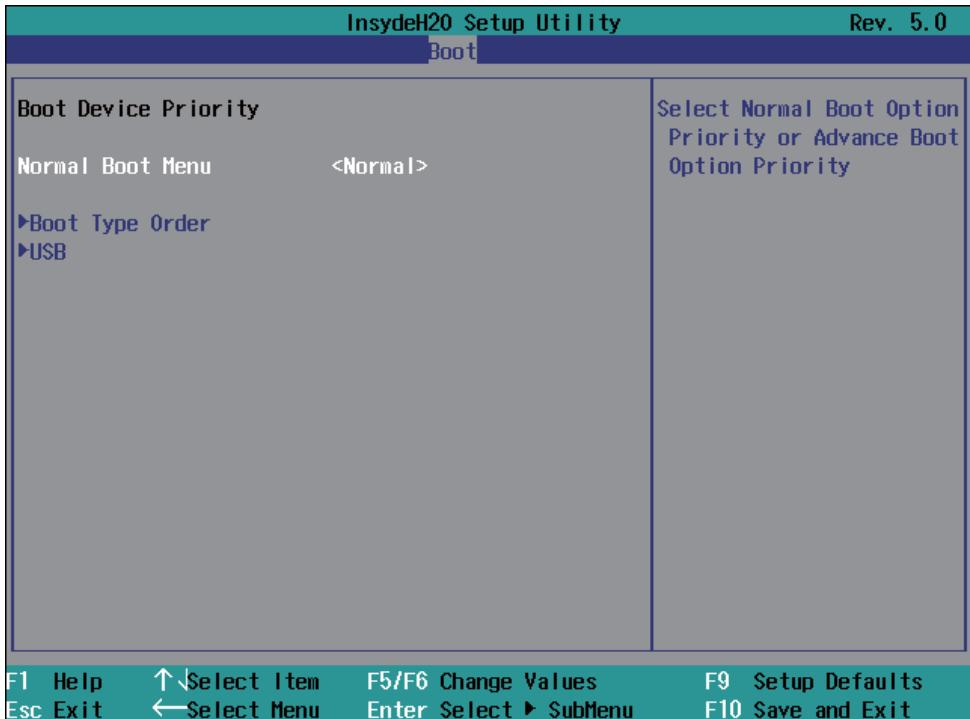


Normal Boot Menu

Select Normal Boot option priority or Advance Boot option priority.

The optional settings: Normal(default), Advance

4-9-2 Boot Type Order

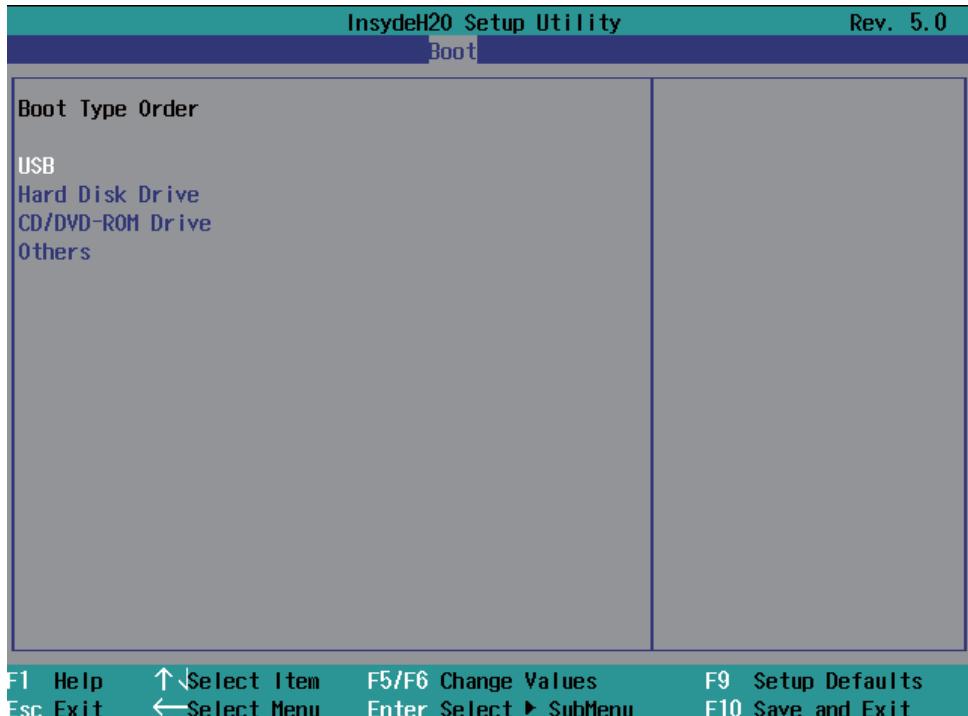


Boot Type Order

Setting the boot type priority.

The default settings is 1.USB drive 2.Hard Disk Drive 3.CD/DVD ROM drive 4.Others

4-10 EXIT

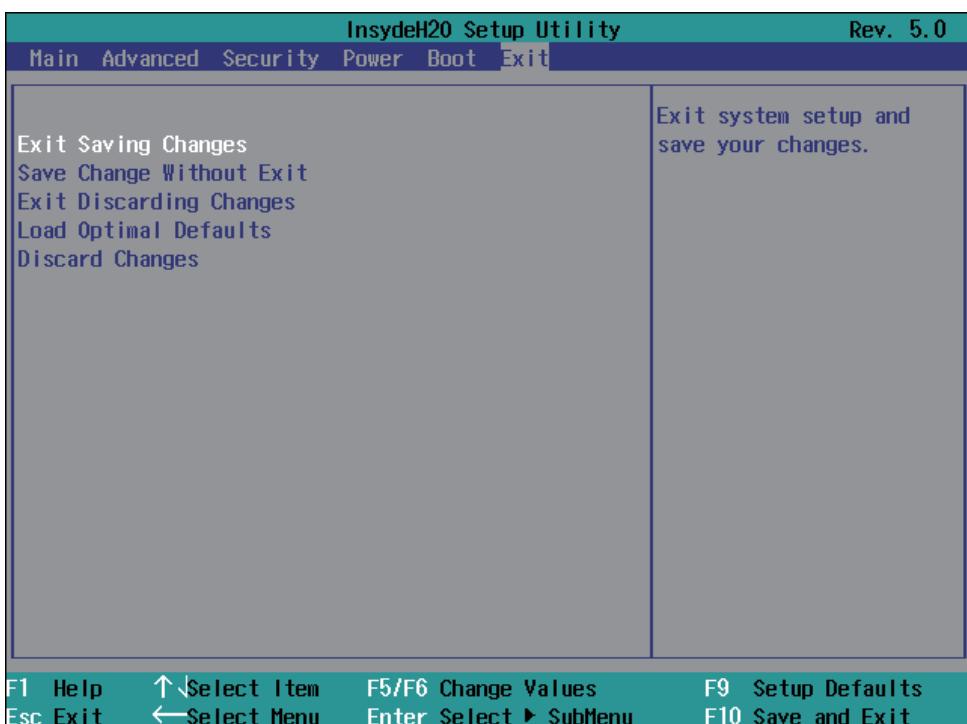

Exit Saving Changes

This item allows user to reset the system after saving the changes.

Save Change Without Exit

This item allows user to saving the changes but doesn't restart.

Exit Discard Changes

This item allows user restart the system but no saving the changes

Load Optimal Default

Use this item to restore the optimal default for all the setup options.

Discard Changes

Use this item to cancel all the setup options.

4-11 Device Manager

Please press the key F10 when boot up to go into the Device Manager menu



Serial Port 1/2/3/4 Configuration

Please refer section 4-11-1

4-11-1 SIO FINTEK81216D/DG

SIO FINTEK81216D/DG

Serial Port 1	<Enable>	Configure Serial port using options : [Disable] No Configuration [Enable] User Configuration [Auto] EFI/OS chooses configuration
Base I/O Address	<3F8>	
Interrupt	<IRQ4>	
Serial Mode	<RS232 driver>	
Sharing Mode	<PCI>	
Serial Port 2	<Enable>	
Base I/O Address	<2F8>	
Interrupt	<IRQ3>	
Serial Mode	<RS232 driver>	
Sharing Mode	<PCI>	
Serial Port 3	<Enable>	
Base I/O Address	<3E8>	
Interrupt	<IRQ10>	
Sharing Mode	<PCI>	
Serial Port 4	<Enable>	

↓

↑↓=Move Highlight

F9=Reset to Defaults
<Enter>=Select Entry

F10=Save
Esc=Discard Changes

Serial Port 1 / 2 / 3 / 4

Use this item to enable or disable serial port (COM1 or COM2).

The optional settings are: Enabled (default), Disabled.

Serial Port 1 Base IO Address / Interrupt / Serial Mode

Use this item to select an optimal setting for super IO device.

The optional settings are:

IO=3F8h; IRQ=4 (default)

IO=3E8h; IRQ=3,4

IO=2E8h; IRQ=3,4

IO=2F8h; IRQ=3,4

Serial Port 2 Base IO Address / Interrupt / Serial Mode

Use this item to select an optimal setting for super IO device.

The optional settings are:

IO=2F8h; IRQ=3(default)

IO=2E8h; IRQ=3,4

IO=3E8h; IRQ=3,4
IO=3F8h; IRQ=3,4

Serial Port 3 Base IO Address / Interrupt

Use this item to select an optimal setting for super IO device.

The optional settings are:

IO=3E8h; IRQ=10 (default)
IO=2F8h; IRQ=3,4,5,6,7,10,11
IO=2E8h; IRQ=3,4,5,6,7,10,11
IO=3F8h; IRQ=3,4,5,6,7,10,11
IO=4F8h; IRQ=3,4,5,6,7,10,11
IO=4E8h; IRQ=3,4,5,6,7,10,11

Serial Port 4 Base IO Address / Interrupt

Use this item to select an optimal setting for super IO device.

The optional settings are:

IO=2E8h; IRQ=10(default)
IO=2F8h; IRQ=3,4,5,6,7,10,11
IO=3F8h; IRQ=3,4,5,6,7,10,11
IO=3E8h; IRQ=3,4,5,6,7,10,11
IO=4F8h; IRQ=3,4,5,6,7,10,11
IO=4E8h; IRQ=3,4,5,6,7,10,11

Serial Mode

RS232 driver(default) : When hardware select to RS232 or RS422 mode, please enter to RS232 driver.

RS485 driver : When hardware select to RS485 mode, please enter to RS485 driver. It is the auto flow function for RS485.

Sharing Mode

This item is OS serial port with sharing mode issue.

If use Linux OS this item should be ISA mode

If use Windows OS this item should be PCI mode

Note: Windows don't set to ISA mode.

Chapter-5

DRIVER INSTALLATION

There is a system installation DVD in the package. This DVD does not only include all the drivers you need but also some other free application programs and utility programs. In addition, this DVD also includes an auto detect software telling you which hardware is installed and which driver is needed so that your system can function properly. We call this auto detect software SYSTEM INSTALL.

SYSTEM INSTALL Supports Windows 7(32bit/64bit) / Windows 8/8.1(32bit/64bit)

Insert the DVD into your DVD-ROM drive and the SYSTEM INSTALL menu should appear as below. If the menu does not appear, double-click MY COMPUTER and double-click DVD-ROM drive or click START, click RUN, and type X:\SETUP.EXE (assuming your DVD-ROM drive is X).



Make your selection from SYSTEM INSTALL menu:

1. Auto Detect Main board and OS to AUTOMATIC DRIVER INSTALLATION menu
2. Browse DVD to view the contents of the DVD
3. Exit to exit SYSTEM INSTALL menu

AUTOMATIC DRIVER INSTALLATION menu

Bay Trail for Windows 8.1 (x64)

- | | |
|-------------|--------|
| 1. INF | 4. LAN |
| 2. VGA | 5. TXE |
| 3. HD Audio | 6. MBI |

[Back to previous page](#)

Bay Trail for Windows 7 (x64)

- | | |
|--------------|--------------|
| 1. INF | 5. HD Audio |
| 2. VGA | 6. LAN |
| 3. Serial IO | 7. TXE Patch |
| 4. xHCI | 8. TXE |

[Back to previous page](#)

- | | |
|--------------|--|
| 1. INF | Install Intel Baytrail chipset driver |
| 2. VGA | Install onboard VGA driver |
| 3. Serial IO | Install Serial IO driver (FOR Win 7 only) |
| 4. xHCI | Install Intel USB 3.0 xHCI driver (FOR Win 7 only) |
| 5. HD Audio | Install HD Audio Codec driver |
| 6. MBI | Install MBI driver (FOR Win 8/8.1 only) |
| 7. LAN | To the LAN driver Readme file |
| 8. TXE Patch | Install Intel TXE patch (FOR Win 7 only) |
| 9. TXE | Install Intel TXE driver |

Each selection is illustrated below:

5-1 INF Install Intel Baytrail Chipset Driver (example for WIN8 64bit)



1. At the "AUTOMATIC DRIVER INSTALLATION menu" screen, click "INF".



2. At the "Intel® Chipset Device Software" screen, click "Next".



3. At the "License Agreement" screen, click "Yes"



4. At the "Readme File Information" screen, Click "Next".



5. Click "Next"



6. Click "Finish" & restart computer.

NOTE: SYSTEM INSTALL will auto detect file path

For Windows 7 64/32-bit,

X:\driver\INTEL\BAY\INF\WIN7\infinst_autol.exe


For Windows 8 / 8.1 32/64-bit

X:\driver\INTEL\BAY\INF\WIN_8_64\infinst_autol.exe

5-2 VGA Install Intel Baytrail VGA Driver (example for WIN8 64bit)




1. At the "AUTOMATIC DRIVER INSTALLATION menu" screen, click "VGA".

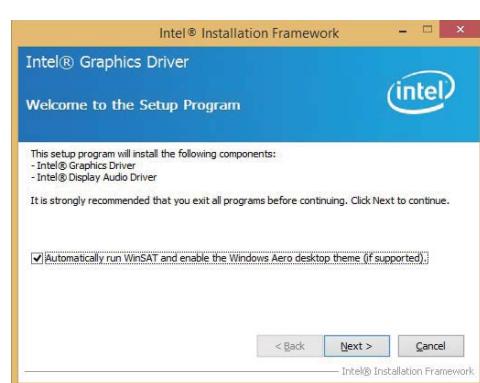


2. At the "Welcome to the Setup Program screen, Click "Next".



3. At the "License Agreement" screen, Click "Yes"

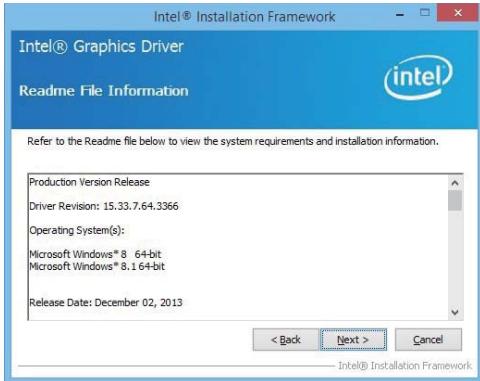


4. At the "Readme File Information" screen, Click "Next"

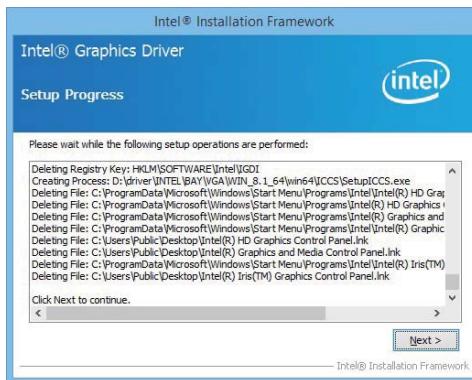

5. At the "Setup Progress" screen,

Click "Next".

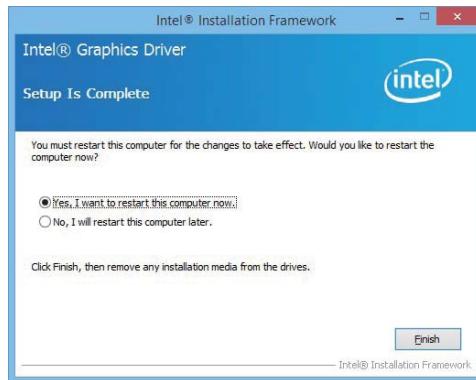

6. Click "Finish" to restart computer

NOTE: SYSTEM INSTALL will auto detect file path

For Windows 7 32-bit,

X:\driver\INTEL\BAY\VGA\WIN_7_32\Setup.exe

For Windows 7 64-bit

X:\driver\INTEL\BAY\VGA\WIN_7_64\Setup.exe

For Windows 8 / Windows 8.1 32-bit

X:\driver\INTEL\BAY\VGA\WIN_8_32\Setup.exe


For Windows 8 / Windows 8.1 64-bit

X:\driver\INTEL\BAY\VGA\WIN_8_64\Setup.exe

5-3 Serial IO Install Driver Baytrail Serial IO Driver (FOR Windows 7 only)




1. At the "AUTOMATIC DRIVER INSTALLATION menu" screen, click "Serial IO".

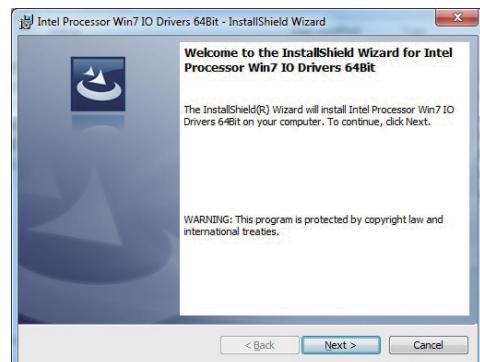


2. At the "Welcome to the Setup Programscreen, Click "Next".



3. At the "License Agreement" screen,
Click "Yes"

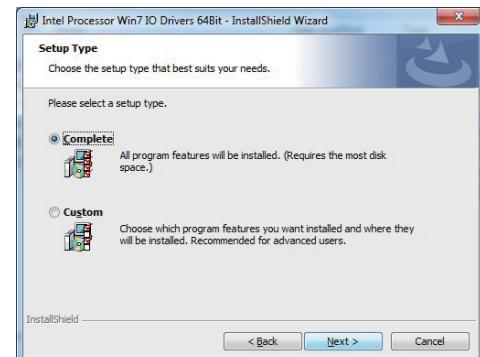

4. At the "Setup type" screen, select
"complete" and Click "Next".

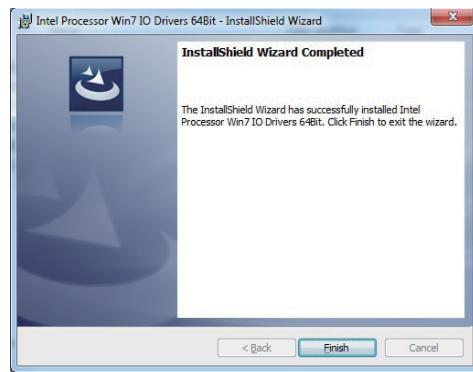

5. At the "Ready to install the program" screen,
Click "Install"

6. Click "Finish" and restart computer

NOTE: SYSTEM INSTALL will auto detect file path

For Windows 7 32-bit,

X:\driver\INTEL\BAY\SERIALIO\WIN7_32Bit.msi


For Windows 7 64-bit

X:\driver\INTEL\BAY\SERIALIO\Win7_64Bit.msi

5-4 xHCI Install Intel USB 3.0 xHCI Driver (FOR Windows 7 only)



1. At the "AUTOMATIC DRIVER INSTALLATION menu" screen, click "xHCI".

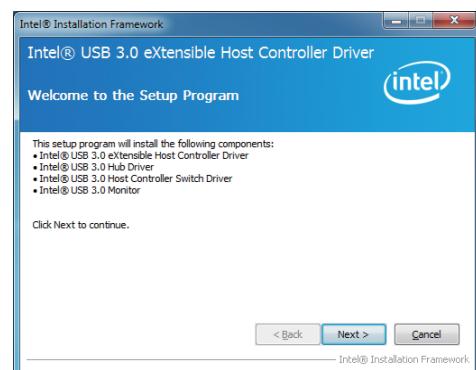


2. At the "Welcome to the Setup Programscreen, Click "Next".



3. At the "License Agreement" screen, Click "Yes".



4. At the "Readme File Information" screen, Click "Next".

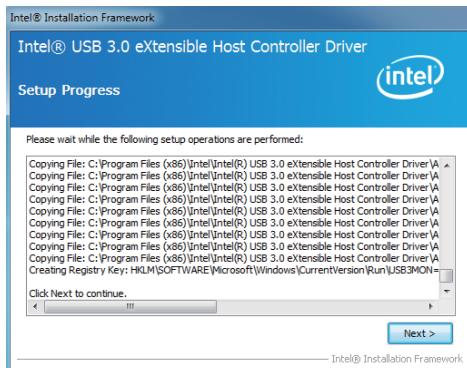

5. At the "Setup Progress" screen, Click "Next".


6. Click "Finish" to restart computer

NOTE: SYSTEM INSTALL will auto detect file path


For Windows 7 32 / 64-bit,

X:\driver\INTEL\BAY\XHCI\Driver_Installer\Setup.exe


5-5 HD Audio Install High Definition Audio Driver (example for WIN8 64bit)

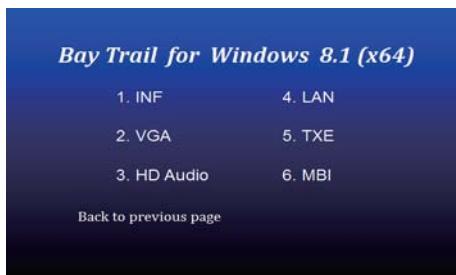

1. At the "AUTOMATIC DRIVER INSTALLATION menu", click "HD Audio"

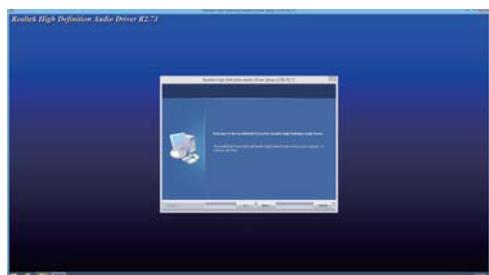

2. Click "Next".

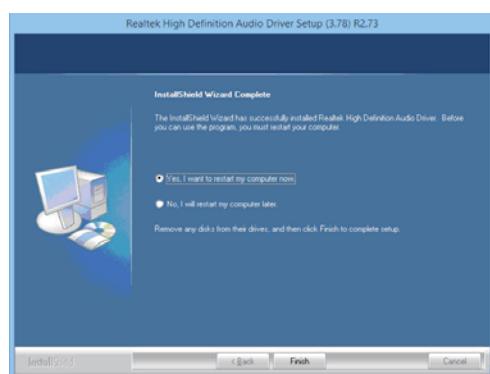


3. Click "Finish" to restart computer

NOTE: SYSTEM INSTALL will auto detect file path
For Windows 7 32 / 64-bit, Windows 8/8.1 32 / 64-bit
X:\driver\INTEL\BAY\SOUND\Win7_Win81_R273.exe


5-6 MBI Install Intel MBI Driver (FOR Win 8/8.1 only)




1. At the "AUTOMATIC DRIVER INSTALLATION menu", click "HD Audio"

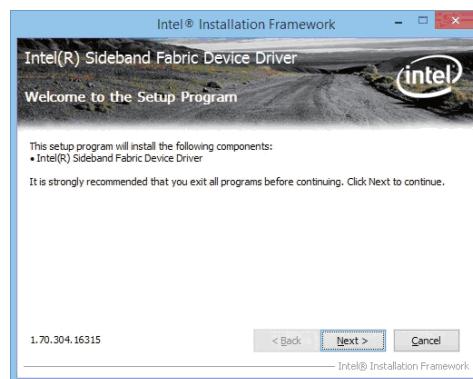


2. At the "Welcome to the Setup Program screen, Click "Next".

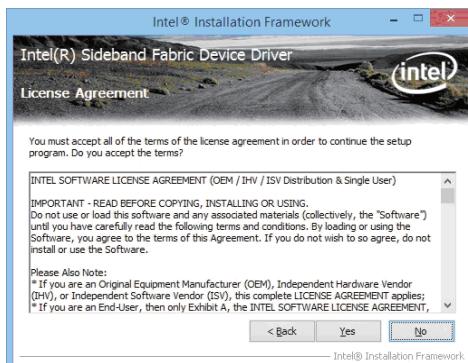

3. At the "License Agreement" screen, Click "Yes".

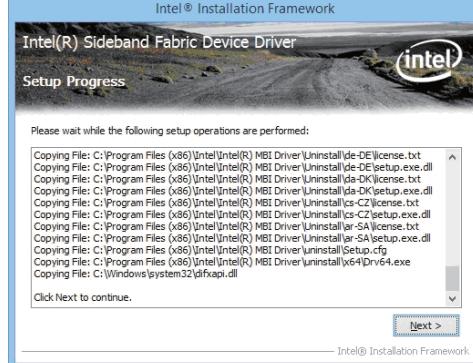

4. At the "Setup Progress" screen, Click "Next".

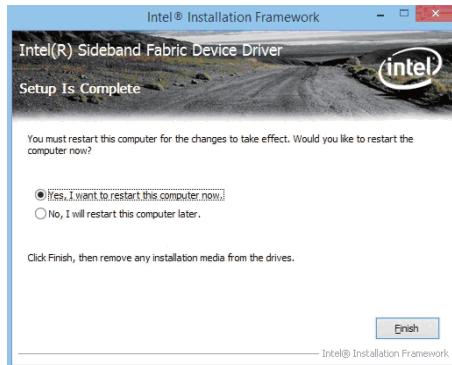

5. Click "Finish" to restart computer


NOTE: SYSTEM INSTALL will auto detect file path

For Windows 8/8.1 32 / 64-bit,


X:\driver\INTEL\BAY\MBI\Setup.exe

5-7 TXE Install Intel TXE driver

5-7-1 TXE Install for WIN8/WIN8.1

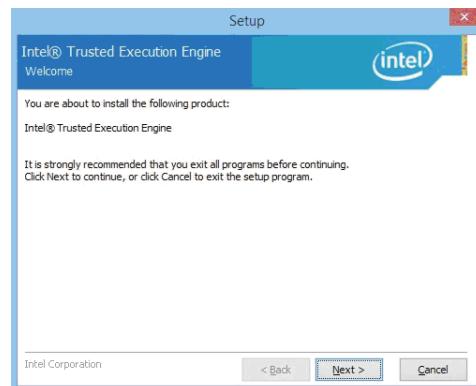


- At the "AUTOMATIC DRIVER INSTALLATION menu", click "TXE"
- At the "Setup" screen, Click "Next".

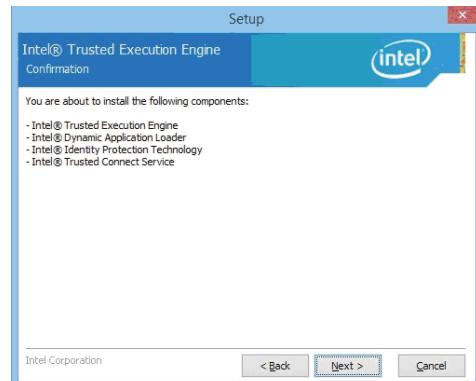

- At the "License Agreement" screen, Click "Yes".
- Click "Next".

4. Click "Next".

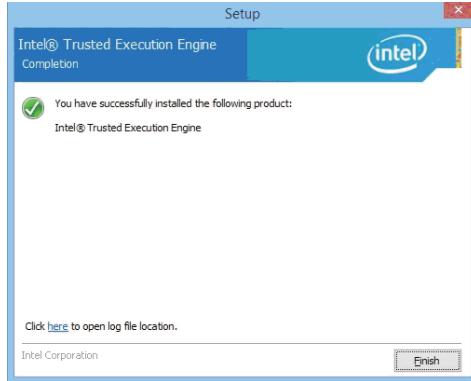

5. Click “Finish” & restart computer

NOTE: SYSTEM INSTALL will auto detect file path

For Windows 8 32 / 64-bit,

X:\driver\INTEL\BAY\TXE\WIN_8\SetupTXE.exe

For Windows 8.1 32 / 64-bit,


X:\driver\INTEL\BAY\TXE\WIN_8.1\SetupTXE.exe

5-7-2 TXE Install for WIN7


Please install PXE Patch first.



1. At the "AUTOMATIC DRIVER INSTALLATION menu", click "TXE Patch "

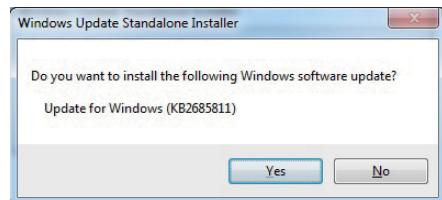


2. At the "Windows Update" screen, Click "Yes".

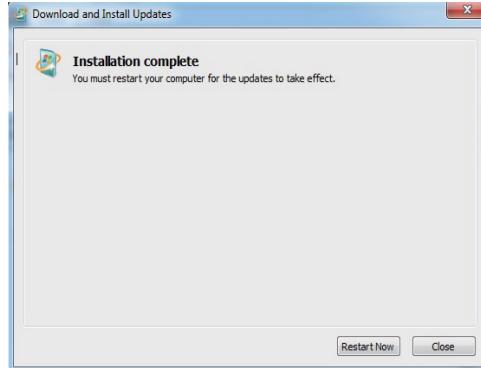

3. Click "Finish" & restart computer




4. At the "AUTOMATIC DRIVER INSTALLATION menu", click "TXE "

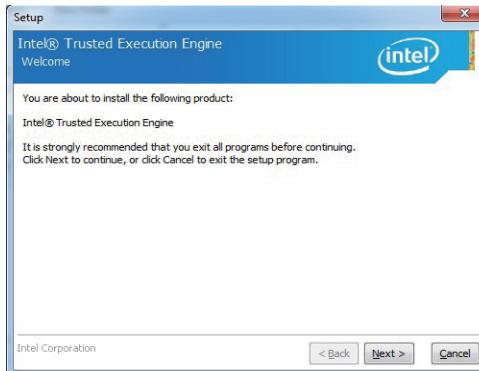

5. At the "TXE Setup" screen, Click "Next".



6. At the "License Agreement" screen, Click "Yes".

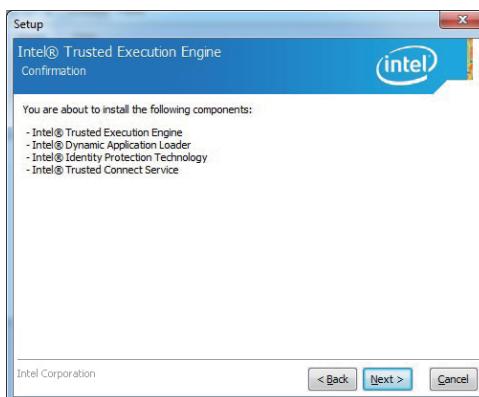

7. Click "Next".



8. Click "Finish" & restart computer

NOTE: SYSTEM INSTALL will auto detect file path

For Windows 7 32 / 64-bit,

TXE Patch

X:\driver\INTEL\BAY\TXE\WIN_7\kmdf-1.11-Win-6.1-x86.msu

X:\driver\INTEL\BAY\TXE\WIN_7\kmdf-1.11-Win-6.1-x64.msu

TXE

X:\driver\INTEL\BAY\TXE\WIN_7\SetupTXE.exe

X:\driver\INTEL\BAY\TXE\WIN_7\SetupTXE.exe

5-8 How to update Insyde BIOS

Under DOS Mode

STEP 1. Prepare a bootable disc.

(Storage device could be USB FDD or USB pen drive.)

STEP 2. Copy utility program to your bootable disc. You may download it from our website.

STEP 3. Copy the latest BIOS for your LEX motherboard from our website to
your bootable disc.

STEP 4. (Here take 2I385EW as an example, please enter your motherboard's name)

Insert your bootable disc into X: (X could be C:, A: or others.)

It depends on which type of storage device you use.)

Start the computer and type

X:\: H2OFFT-D.EXE 2I386EWA2.ROM -BIOS -ALL

2I386EWA2.ROM is the file name of the latest BIOS.

It may be 2I386EWA1.ROM or 2I386EWA2.ROM, etc.

Please leave one space between .ROM & -BIOS -ALL

By Bay Trail series mainboard, please type

X:\: H2OFFT-D.EXE 2I386EWA2.ROM -BIOS -ALL

-BIOS : Flash BIOS region

-ALL : Flash all

STEP 5. Press ENTER and the BIOS will be updated,

Computer will restart automatically.

Appendix A: Power Consumption Test

Condition (2I386EW)

Item	Spec
CPU	Atom E3845 1.91 GHz / Celeron J1900 1.99GHz
Memory	DDR3L 1600 4GB
Operating System	Windows 7 Ultimate 64bit
Test Program	3D Mark 06
HDD 2.5" SATA	128GB
mSATA	32GB

Test Result for reference only !

Storage	Processor	Power off	Start up		Operation Maximum	Shut down Maximum	In Put Voltage
			Maximum	Stable			
HDD	E3845	0.10A	0.97A	0.66A	1.21A	0.87A	12V
		0.06A	0.50A	0.36A	0.61A	0.41A	24V
	J1900	0.11A	0.96A	0.63A	1.37A	0.90A	12V
		0.06A	0.51A	0.36A	0.64A	0.44A	24V
mSATA	E3845	0.11A	0.93A	0.62A	1.18A	0.82A	12V
		0.06A	0.46A	0.32A	0.60A	0.43A	24V
	J1900	0.11A	0.92A	0.58A	1.33A	0.82A	12V
		0.06A	0.51A	0.32A	0.70A	0.40A	24V

The power consumption depends on your device choice!

Appendix B: Resolution list

640 x 480 x (256 / 16bit / 32bit)
800 x 600 x (256 / 16bit / 32bit)
1024 x 768 x (256 / 16bit / 32bit)
1152 x 864 x (256 / 16bit / 32bit)
1280 x 600 x (256 / 16bit / 32bit)
1280 x 720 x (256 / 16bit / 32bit)
1280 x 768 x (256 / 16bit / 32bit)
1280 x 800 x (256 / 16bit / 32bit)
1280 x 960 x (256 / 16bit / 32bit)
1280 x 1024 x (256 / 16bit / 32bit)
1400 x 1050 x (256 / 16bit / 32bit)
1440 x 900 x (256 / 16bit / 32bit)
1600 x 900 x (256 / 16bit / 32bit)
1600 x 1200 x (256 / 16bit / 32bit)
1680 x 1050 x (256 / 16bit / 32bit)
1920 x 1080 x (256 / 16bit / 32bit)
1920 x 1200 x (256 / 16bit / 32bit)