

MASTER module LEDs and buttons

FLIP
CARD



● **RUN MODE**

● **ONBOARDING MODE**

● **FIRMWARE UPDATE MODE**

ON state –
charging battery

BLINKING state –
bad battery

OFF state –
battery charged

Reset button

To switch between
ONBOARDING and **RUN** modes,
briefly press this button.

ON state – **connecting** with
WiFi network

OFF state – **connected** with
WiFi network

ON state – **connecting** to
the cloud

OFF state – **connected** to
the cloud

BLINKING state – at each
transmission, while uploading
or downloading data.


To enter the **FIRMWARE
UPDATE** mode long-press
on the button.

OFF state

ON state

BLINKING state – indicates
the **ONBOARDING** mode

OFF state

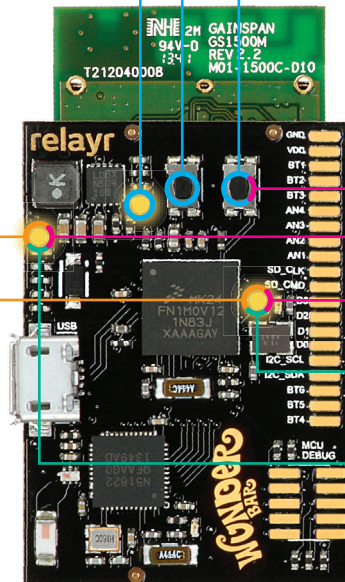

SENSOR modules LEDs and buttons*

● RUN MODE

● ONBOARDING MODE

● FIRMWARE UPDATE MODE


BLINKING state –
indicates the
ONBOARDING mode.

OFF state

ON state

To switch between
ONBOARDING and **RUN** modes,
briefly press this button.

To enter the **FIRMWARE
UPDATE** mode long-press
on the button.

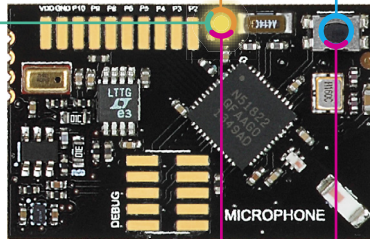

* Applicable to all six sensor modules.