

XTR-8LR100 is an half duplex transceiver based on Semtech (SX1276 chipset) patented “**LoRa SSM**” modulation technique providing an ultra long range radio communication, high interference immunity, high sensitivity and very low power consumption. Compared to standard modulation techniques, XTR-8LR100 improves up to 20 dB the receiver sensitivity, allowing long distances by using low power in transmission and low consumption, inexpensive power supply circuits and low cost batteries.

Transceiver works in 869,4÷869,65MHz (100mW, ver. 8LR100) and 868÷868,6MHz (25mW ver.XXX) European band with possibility to set the channel width .

XTR-8LR100 is a radio-modem with UART input interface, working on data packages (max. size 255 bytes). It can handle addressing schemes for point-to-multipoint star networks. Main radio parameters might be set up smoothly via command mode procedure.

Operating voltage is 3,3V, current consumption is 17 mA in reception, 115 mA in transmission (+20dBm ERP) or 35 mA (15 dBm ERP).

Module is available in tape & reel package for SMD assembling.

Size is 37 x 18 x 2,2 mm.

## Main features

- Direct transmission or radiomodem mode
- UART interface with store and forward mode
- No encoding or preamble requested
- AT command mode for set up of parameters
- HyperTerminal\* compatible
- Channels: 7 max
- Small form factor (37x18X2,2 mm)
- UART data rate: 9600, 19200, 115200 bps
- Emitted power: max 100 mW
- Sensitivity from -118 to-144 dBm
- Operating voltage: 3,3V
- Standard distance: 6000 m

## Applications

- Home and building automation
- Irrigation control
- Energy monitoring
- Industrial sensors
- SCADA
- Alarms
- Automatic Meter Reading

### Absolute maximum ratings

|                       |                   |
|-----------------------|-------------------|
| Operating temperature | -20 °C ÷ +70 °C   |
| Storage temperature   | -40 °C ÷ +100 °C  |
| Supply voltage        | +3,4V             |
| Input voltage         | -1.0 ÷ Vcc + 0.3V |
| Output voltage        | -1.0 ÷ Vcc + 0.3V |

### Technical Characteristics

|   | Min.         | Typ.  | Max.    | Unit |
|---|--------------|-------|---------|------|
| <b>DC Levels</b>                              |              |       |         |      |
| Supply voltage pin 1,15.                      | 2.4          | 3.3   | 3.6     | V    |
| Current consumption (rx mode)                 |              | 17    |         | mA   |
| Current consumption (tx mode @ +20 dBm)       | 90           | 110   | 150     | mA   |
| Current consumption (sleep mode)              |              | 1     | 2       | µA   |
| High level voltage in input/output            | 0.7xVcc      |       | Vcc     | V    |
| Low level voltage in input/output             | 0            |       | 0.3xVcc | V    |
| <b>RF TX</b>                                  |              |       |         |      |
| Band  | 869,4÷869,65 |       |         | MHz  |
| Emitted power                                 | 17           | 19    | 20      | dBm  |
| Modulation                                    | LORA         |       |         |      |
| Channel width -3dB                            | 20,8         | 62,5  | 125     | KHz  |
| Spurious emissions < 1GHz                     |              |       | -36     | dBm  |
| Spurious emissions > 1GHz                     |              |       | -30     | dBm  |
| Pin 14 ESD protection on contact (61000-4-2)  |              | 8     |         | KV   |
| Power on adjacent channel in TX (note 2)      |              |       | 50      | nW   |
| <b>RF RX</b>                                  |              |       |         |      |
| Sensitivity in RX, 125 KHz band (SF:6-10-12)  | -118         | -132  | -137    | dBm  |
| Sensitivity in RX, 62,5 KHz band (SF:6-10-12) | -121         | -135  | -140    | dBm  |
| Sensitivity in RX, 20,8 KHz band (SF:6-10-12) | -127         | -140  | -144    | dBm  |
| RF band                                       |              | 6     |         | MHz  |
| Adjacent channel selectivity (note 3)         |              | 50    |         | dB   |
| Adjacent channel saturation (note 4)          |              | ≥87   |         | dB   |
| Blocking test at ±2MHz (note 5)               | 85           |       | 90      | dB   |
| Blocking test at ±10MHz (note 5)              | 85           |       | 94      | dB   |
| <b>Performance</b>                            |              |       |         |      |
| Spreading Factor                              | 6            | 10    | 12      |      |
| Coding Rate                                   | 4/5          |       | 4/8     |      |
| UART data rate (note 1)                       | 9600         | 19200 | 115200  | bps  |
| Package size                                  | 1            |       | 255     | Byte |
| Outdoor range                                 |              | 6000  |         | m    |
| Channels                                      | 1            |       | 7       | n°   |
| Channel space with 20,8KHz BW                 |              | 25    |         | KHz  |
| <b>Timing</b>                                 |              |       |         |      |

Le caratteristiche tecniche possono subire variazioni senza preavviso. AURÆL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

|                                |     |             |  |     |
|--------------------------------|-----|-------------|--|-----|
| PWRDN → RX                     | TBD |             |  | ms  |
| TX → RX                        |     | TBD         |  | ms  |
| RX → TX                        |     | TBD         |  | ms  |
| <b>Default value</b>           |     |             |  |     |
| Channel                        |     | (CN2) 869,5 |  | MHz |
| Emitted power (tx)             |     | 20          |  | dBm |
| UART data rate (only for data) |     | 115200      |  | Bps |
| Bandwidth                      |     | 62,5        |  | KHz |
| Spreading Factor               |     | 8           |  |     |

Note 1: UART data is meant 8,n,1. UART Speed (command S8) is related to data communication. For command mode communication this set up is not has no effect and it works basically @9600bps

Note2: Test carried out according to method described in ETSI EN 300 220-1 V2.4.1 paragraph 7.6


Note3: Test carried out according to method described in ETSI EN 300 220-1 V2.4.1 paragraph 8.3

Note4: Test carried out according to method described in ETSI EN 300 220-1 V2.4.1 paragraph 8.3.4

Note5: Test carried out according to method described in ETSI EN 300 220-1 V2.4.1 paragraph 8.4

## Pin out description

**Picture 1:** module pin-out

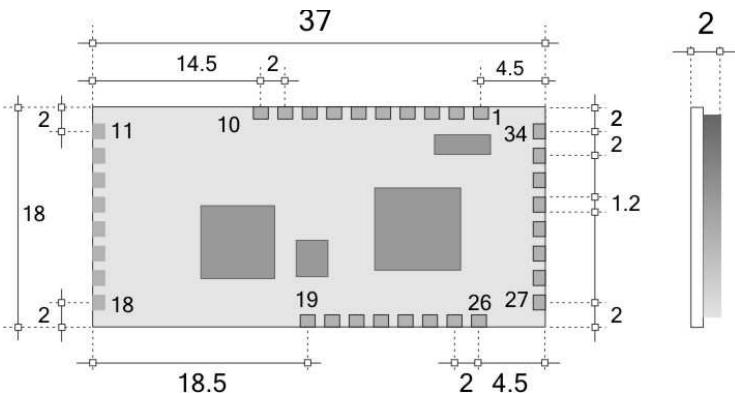

### **Pin-out**

|             |             |              |
|-------------|-------------|--------------|
| 1) GND      | 13) GND RF  | 25) IN2(NI)  |
| 2) GND      | 14) ANTENNA | 26) IN1(NI)  |
| 3) GND      | 15) GND RF  | 27) GND      |
| 4) AN0(NI)  | 16) GND RF  | 28) SET_C    |
| 5) AN1(NI)  | 17) GND RF  | 29) SET_B    |
| 6) AN2(NI)  | 18) GND RF  | 30) SET_A    |
| 7) GND      | 19) RTS     | 31) GND      |
| 8) RESERVED | 20) CTS     | 32) OUT2(NI) |
| 9) RESERVED | 21) RX_UART | 33) OUT1(NI) |
| 10) +Vcc    | 22) TX_UART | 34) GND      |
| 11) GND RF  | 23) IN4(NI) |              |
| 12) GND RF  | 24) IN3(NI) |              |

\*NI:not implemented

**PIN DESCRIPTION TAB:**

| N° Pin | Nome            | Descrizione  |
|--------|-----------------|--|
| 1      | <b>GND</b>      | Ground connection  |
| 2      | <b>GND</b>      | Ground connection  |
| 3      | <b>GND</b>      | Ground connection  |
| 4      | <b>AN0</b>      | Analog input (ADC cyclical mode)   |
| 5      | <b>AN1</b>      | Analog input (ADC cyclical mode)   |
| 6      | <b>AN2</b>      | Analog input (ADC cyclical mode)   |
| 7      | <b>GND</b>      | Ground connection  |
| 8      | <b>RESERVED</b> | Not to be connected  |
| 9      | <b>RESERVED</b> | Not to be connected  |
| 10     | <b>+Vcc</b>     | Regulated supply voltage 3,3V-500mA.<br>Connect a capacitor 10-100uF very close to the pin and GND.  |
| 11     | <b>GND RF</b>   | Ground connection  |
| 12     | <b>GND RF</b>   | Ground connection  |
| 13     | <b>GND RF</b>   | Ground connection  |
| 14     | <b>ANTENNA</b>  | 50 ohm impedance for antenna   |
| 15     | <b>GND RF</b>   | Ground connection  |
| 16     | <b>GND RF</b>   | Ground connection  |
| 17     | <b>GND RF</b>   | Ground connection  |
| 18     | <b>GND RF</b>   | Ground connection  |
| 19     | <b>RTS</b>      | Request to send. Output goes high when UART buffer is full or during filling/emptying from radio FIFO.<br>Output goes low when ready to receive data from UART port. |
| 20     | <b>CTS</b>      | Clear to send. Input (not implemented)   |
| 21     | <b>RX_UART</b>  | UART input in TTL levels, 1 start bit (0V), 8 data bit e 1 stop bit (3V).<br>Input must be driven in high level logic (3V)   |
| 22     | <b>TX_UART</b>  | UART output in TTL levels, 1 start bit (0V), 8 data bit e 1 stop bit (3V).<br>Input must be driven in high level logic (3V)  |
| 23     | <b>IN4</b>      | Digital input, non implemented yet   |
| 24     | <b>IN3</b>      | Digital input, non implemented yet   |
| 25     | <b>IN2</b>      | Digital input, non implemented yet   |
| 26     | <b>IN1</b>      | Digital input, non implemented yet   |
| 27     | <b>GND</b>      | Ground connection  |
| 28     | <b>SET_C</b>    | Set operation mode   |
| 29     | <b>SET_B</b>    | Set operation mode   |
| 30     | <b>SET_A</b>    | Set operation mode   |
| 31     | <b>GND</b>      | Ground connection  |
| 32     | <b>OUT2</b>     | Digital output. High when transmit or in test mode receives PONG   |
| 33     | <b>OUT2</b>     | Digital output. High when transmit or in test mode receives PING   |
| 34     | <b>GND</b>      | Ground connection  |

**Tab1:** Pin description

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

### **LoRa Modulation:**

The RF modulator and demodulator uses the spread spectrum radio technique and it's possible to set Chip/Symbol ratio from 128 to 4096, depending on RF sensitivity and flying time desired.

Improvement of sensitivity is outstanding compared to standard FSK modulation technique: 7,5 dB with 128 Chip/Symbol value and 20 dB with 4096 Chip/Symbol value.

Furthermore it is granted a general improvement of interference immunity, adjacent channel immunity and blocking tests compared to FSK demodulator.

The tables herebelow show how to properly set modulation parameters depending on sensitivity and flying time desired.

In order to be understood, flying time means the radio channel occupation for data package made of a 8 bytes preamble + 8 bytes payload + CRC.

| <b>Bandwidth 125KHz</b> |                          |                         |
|-------------------------|--------------------------|-------------------------|
| <b>Spreading Factor</b> | <b>Sensitivity (dBm)</b> | <b>Flying time (ms)</b> |
| 6                       | -118                     | 20                      |
| 7                       | -123                     | 41                      |
| 8                       | -126                     | 82                      |
| 9                       | -129                     | 144                     |
| 10                      | -131                     | 287                     |
| 11                      | -134                     | 495                     |
| 12                      | -137                     | 990                     |

| <b>Bandwidth 62,5KHz</b> |                          |                         |
|--------------------------|--------------------------|-------------------------|
| <b>Spreading Factor</b>  | <b>Sensitivity (dBm)</b> | <b>Flying time (ms)</b> |
| 6                        | -121                     | 41                      |
| 7                        | -126                     | 82                      |
| 8                        | -129                     | 164                     |
| 9                        | -132                     | 288                     |
| 10                       | -135                     | 577                     |
| 11                       | -137                     | 990                     |
| 12                       | -140                     | 1980                    |

| <b>Bandwidth 20,8KHz</b> |                          |                         |
|--------------------------|--------------------------|-------------------------|
| <b>Spreading Factor</b>  | <b>Sensitivity (dBm)</b> | <b>Flying time (ms)</b> |
| 6                        | -127                     | 124                     |
| 7                        | -130                     | 246                     |
| 8                        | -134                     | 492                     |
| 9                        | -137                     | 862                     |
| 10                       | -140                     | 1730                    |
| 11                       | -142                     | 2960                    |
| 12                       | -145                     | 5940                    |

As you can see sensitivity increases as far as SF value increases and data rate decreases as far as SF increases and Bandwidth decreases.

Parameters choice have to be made by assessing at first the bandwidth: if more channels are requested it's mandatory to choose 20,8 KHz BW, otherwise, 62,5 or 125 KHz BW.

In this case SF value equals to 8-10 is the best trade-off between RF sensitivity and flying time.

Very often in radio control applications, payload is not more than 8-10 bytes and 0,5 sec is a reasonable time for transmission and feedback (ACK) reception.

Here below the calculation equations of flight times for packet radio with payloads greater than 8Bytes:

$$T_{sym} = \left( \frac{2^{SF}}{BW} \right) \quad \text{EQ1}$$

**Tsym:** durata di un simbolo in secondi

**SF:** Spreading Factor da 6 a 12

**BW:** banda del canale radio in Hz (registro S2)

$$PayloadsymbNb = 8 + \left\{ ceiling \left[ \left[ \frac{(8 \times nBytePL) - (4 \times SF) + 44}{4 \times (SF - 2)} \right] \right] \times (CR + 4) \right\} \quad \text{EQ2}$$

**PayloadsymbNb:** Payload symbol quantity

**nBytePL:** Payload byte quantity

**CR:** coding rate from 1 to 4 (register S6)

$$Tpachet = (PayloadsymbNb + 12,25) \times T_{sym} \quad \text{EQ3}$$

**Tpachet:** data packet total timing in seconds

**12,25:** Symbols quantity used on preamble

### Data packet frame:

XTR-8LR100 is a radio modem working in packet mode and handling addresses for point-to-multipoint networks.


Packet has a 255 bytes max length, where 247 bytes are the payload and 7 the addresses.

It's made up of:

- Preamble: it comprises 8 bytes of variable length depending on data rate, used for synchronization purposes..
- Header: it comprises information related to the payload lengths, Code Rate, and CRC presence of payload 16 bit
- Network\_ID: every module has got a 4 bytes network ID, editable via AT command. (It's present only in net modality S10=1)


- Source Address: Module or Node address from which the data packet starts (sender), composed by 2 bytes for a maximum node capability of 65536 nodes each net editable via AT command. (It's present only in net modality S10=1)
  - Destination Address: 2 bytes destination node address. This address can be changed via AT command. It must be forwarded on serial port before the payload.
  - 0xFF (default) address means a broadcasting message: in this case every node joining the network (same network\_ID) receives the message (It's present only in net modality S10=1)
  - Payload: from 1 to 247 bytes. When received, the message is forwarded to UART output only in case Network\_ID and Destination address are corresponding, otherwise it's eliminated. In case of transmission, data coming from UART port are included in payload field.
  - Payload CRC: checksum 2 Bytes

In normal TX and RX operations, it is mandatory to set up the 2 addresses needed for network functionality in command mode, then move to NORMAL mode and send/receive data (payload) via UART port. To transmit a radio data packet, User must sent on UART the Destination address before the payload. Data are not yet encrypted.

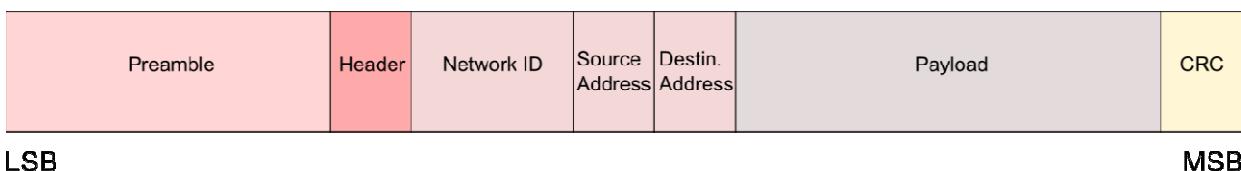

**Picture 2:** Data radio packet frame in NORMAL Mode with addressing

In NORMAL mode no network (register S10=0) fields NETWORK ID, SOURCE ID e DESTINATION ADDRESS will not present on radio protocol and 255 bytes payload will be at disposal

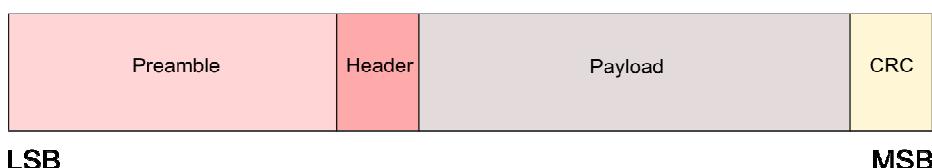

**Picture 3:** Data radio packet frame in NORMAL Mode no network

## **Operation modes:**

Device works in 7 states operation modes:

- 1. SLEEP**
- 2. COMMAND MODE**
- 3. NORMAL**
- 4. TX WAKE UP**
- 5. RX WAKE UP**
- 6. TX ADC WAKE UP**
- 7. TEST MODE**

### **1. Sleep**

When SET\_A, SET\_B, SET\_C inputs are floating or high level, module enters automatically in sleep state: radio and microcontroller chips are in low power state.

It's only allowed the activation of command mode (++++) via UART port.

### **2. Command Mode**

Command mode allows the user to set up operating parameters.

Configuration occurs via AT commands sent to TX\_UART (pin.22) with 9600 bps data rate. Likewise return values are received from RX\_UART (pin.21).

To enter command mode, from sleep mode send to TX\_UART a sequence of 4 '+' ASCII characters in a row (++++) .

In order to execute it, it's recommended to use the RS232 or USB port of PC (pay attention to convert physical levels to 0-3V), connect TX and RX while RTS and CTS are not handled in command mode. Use a program for serial port communication, like Hyperterminal, RealTerm or similar ones, by setting these parameters: data rate: 9600 bps, one start bit, 8 data bit, 1 stop bit, no parity, select CR and LF

Send from PC the sequence ++++. If the return value is **COMMAND-MODE** then communication is ok.

When the device is in command mode, it can't send/receive any data to/from RF.

In command mode the UART data rate is fixed at 9600 bps and any change to S8 register can't affect data rate in command mode.

**Note: in Command-Mode insert as a command terminal CR(carriage return) and LF(line feed).**

**How to quit command mode**

After 2 minute. from last command sent, module automatically switches to sleep mode. Otherwise, in order to force the exit, send **ATCC** command: if everything is right you'll get a **OK** as confirmation.

**AT command list:**

Commands allow to write and read registers which set the way the module operates.

Configuration registers reading and writing occurs by sending the sequence **AT** followed by command or register name, according to the standard of PSTN modems.

Here below you find the list of available commands: in order to use them, please abide by the examples of registers reading and writing shown in next page.

| <b>AT</b>   | <b>COMMAND</b>                                      | <b>&lt;CR&gt; &lt;LF&gt;</b>                                 |
|---|---|--|
| Uppercase characters that come before a command or a register | Commands are codes including one or more characters | Command ends always with <CR> Carriage Return <LF> line feed |

| <b>Register</b>                | <b>Name</b>                 | <b>Function</b>   | <b>Values</b>   |                |               |
|--------------------------------|-----------------------------|---|---|----------------|---------------|
| <b>S0<br/>r</b>                | <b>HW/FW<br/>Version</b>    | It mean the radio module version HW and FW  | <b>Byte High</b> = HW Version<br><b>Byte Low</b> = FW Version   |                |               |
| <b>S1<br/>r/w</b>              | <b>BAND</b>                 | Operating band frequency  | <b>0</b> = 868 – 868,6MHz (NI, availbla in other versions)<br><b>1</b> = 869,4 – 869,65MHz (default)  |                |               |
| <b>S2<br/>r/w</b>              | <b>BANDWIDTH</b>            | RF channel bandwidth  | <b>0</b> = 20,8 KHz<br><b>1</b> = 62,5 KHz (default)<br><b>2</b> = 125 KHz  |                |               |
| <b>S3<br/>r/w<br/>(note 2)</b> | <b>CHANNEL</b>              | Operating radio channel<br><br>To apply with limits imposed by EN300 220 normative, channeling is viable only with BW 20,8 KHz; for the others BW (62,5 KHz e 125 KHz) setting of channel is useless and module will work only on default channel | <b>BW</b> 20,8KHz   | <b>62,5KHz</b> | <b>125KHz</b> |
|                                |                             |   | <b>0</b> = 869,45MHz  | <b>NI</b>      | <b>NI</b>     |
|                                |                             |   | <b>1</b> = 869,475MHz   | <b>NI</b>      | <b>NI</b>     |
|                                |                             |   | <b>2</b> = 869,5MHz (default)   | default        | default       |
|                                |                             |   | <b>3</b> = 869,525MHz   | <b>NI</b>      | <b>NI</b>     |
|                                |                             |   | <b>4</b> = 869,55MHz  | <b>NI</b>      | <b>NI</b>     |
|                                |                             |   | <b>5</b> = 869,575MHz   | <b>NI</b>      | <b>NI</b>     |
|                                |                             |   | <b>6</b> = 869,6MHz   | <b>NI</b>      | <b>NI</b>     |
| <b>S4<br/>r/w</b>              | <b>POWER</b>                | RF power emitted in antenna   | <b>0</b> = NI (nota 1)<br><b>1</b> = NI (nota 1)<br><b>2</b> = +20dBm (default)<br><b>3</b> = NI (nota 1)<br><b>4</b> = NI (nota 1)                     |                |               |
| <b>S5<br/>r/w</b>              | <b>SPREADING<br/>FACTOR</b> | Spreading factor  | <b>6</b> = 64 (chip/symbol)<br><b>7</b> = 128<br><b>8</b> = 256 (default)<br><b>9</b> = 512<br><b>10</b> = 1024<br><b>11</b> = 2048<br><b>12</b> = 4096 |                |               |

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

|                              |                         |  |   |
|------------------------------|-------------------------|--|---|
| <b>S6</b><br>r/w             | <b>ERROR CODING</b>     | Error recovery   | <b>1</b> = 4/5 (default)<br><b>2</b> = 4/6<br><b>3</b> = 4/7<br><b>4</b> = 4/8                |
| <b>S7</b><br>r/w             | <b>RSSI ENABLE</b>      | Adds in rear of payload the RRSI value (2 bytes)   | <b>0</b> = No RSSI (default)<br><b>1</b> = RSSI in coda al payload                            |
| <b>S8</b><br>r/w<br>(note 3) | <b>UART BPS</b>         | UART data rate   | <b>0</b> = 9.600 bps<br><b>1</b> = 19.200 bps<br><b>2</b> = 115.200 bps (default)             |
| <b>S10</b><br>r/w            | <b>NETWORK ENABLE</b>   | Adds on top of payload, the ID network and Source address  | <b>0</b> = No network(default)<br><b>1</b> = network  |
| <b>S11</b><br>r/w            | <b>NETWORK ID</b>       | It sets the device network address (4 bytes)   | <b>Min</b> = 0x00000001 (default)<br><b>Max</b> = 0xFFFFFFFF                                  |
| <b>S12</b><br>r/w            | <b>SOURCE ADDRESS</b>   | It sets the device ID or sender (2 bytes)start address message   | <b>Min</b> = 0x0001 (default)<br><b>Max</b> = 0xFFFF (broadcast)                              |
| <b>S20</b><br>r/w            | <b>RX CYCLIC TIME</b>   | It sets the wake up time interval from 2 cyclic receptions from 10ms to 6000ms with steps of 1ms   | <b>Min</b> = 10 ms<br><b>Max</b> = 6.000 ms<br><b>Default</b> = 100 ms (default)              |
| <b>S30</b><br>r/w            | <b>ADC TX TIME</b>      | It sets the wake up time interval from 2 cyclic transmissions Impostazione dell'intervallo di risveglio tra 2 trasmissioni cicliche from 1s to 65536s with steps of 1s. Addressing is activated by default | <b>Min</b> = 1 s<br><b>Max</b> = 65.535 s<br><b>Default</b> = 10 s                            |
| <b>S90</b><br>r              | <b>REGISTERS STATUS</b> | Registers value restores   | <b>S1</b> = x (x = value restored)<br><b>S2</b> = x<br><b>S3</b> = x<br>....<br><b>Sn</b> = x |
| <b>S91</b><br>r/w            | <b>DEFAULT VALUES</b>   | Setted at 1 it stores on register, the default values  | <b>0</b> = Modified values (r)<br><b>1</b> = Default values (r/w)                             |
| <b>S92</b><br>r/w            | <b>RADIO TEST_MODE</b>  | Ping-Pong radio test mode  | <b>0</b> = Off<br><b>1</b> = On Tx Master<br><b>2</b> = On Rx Slave                           |

(note 1) NI means not implemented yet. Command execution doesn't have any effect.

(note 2) To apply with limits imposed by EN300 220 normative, channeling is viable only with BW 20,8 KHz; for the others BW (62,5 KHz e 125 KHz) setting of channel is useless and module will work only on default channel

(note 3) UART data rate setting (command S8), refers exclusively to data communication. In command mode this setting has no effect and it will work onlt at 9600 bps.

| <b>Command</b> | <b>Name</b>          | <b>Feature</b>                  |
|----------------|----------------------|---------------------------------|
| <b>WR</b>      | <b>WRITE</b>         | Write registers value to EEPROM |
| <b>CC</b>      | <b>COMMAND CLOSE</b> | Command Mode exit               |
| <b>Sx</b>      | <b>REGISTER NAME</b> | Register ID to be read or write |

### Return values to commands and operations on registers

Positive return: **OK<CR><LF>**

Negative return: **<bl> ERROR<CR><LF>**

Forbidden operation: **<bl> NO ACCESS<CR><LF>**

Command mode exit **EXIT<CR><LF>**

<CR> Carriage Return, ASCII character 13; <LF> Line Feed, ASCII character 10; <bl> ASCII character 32.

### Readout of a register

**Syntax:** **AT\$Sx<CR><LF>** [x = 1, ..., 16 register to be read]

**Return :** value stored in the register if the command syntax is correct followed by <CR><LF>.

Register value is given digit after digit as ASCII characters.

**Example:** '16' is given as the sequence of ASCII characters 0x31,0x36, corresponding to digit '1' and '6'. Same procedure must be applied in case of writing a new value in a register.

### Writing of a register

**Syntax:** **AT\$Sx=Y<CR><LF>** [x = 2, 3, 4 register to write on, y = value to add]

**Return:** as described in 'Return values'

All values stored in the registers will be lost when the module is turned off, unless the changes are saved in microcontroller EEPROM memory by means of the specific command ATWR: in this case the saved values will be active even if the module is turned off and then on.

### Command to save registers value in EEPROM c

**Syntax:** **ATWR<CR><LF>**

**Return:** as described in 'Return values'

### Command to quit command mode

**Syntax:** **ATCC<CR><LF>**

**Return:** as described in 'Return values'

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

Command mode exit occurs, even without ATCC command, automatically after 10 sec. of idle state, or after the command ATWR

### 3. Normal

Enabled by resetting SET\_A input and setting (or leaving floating) SET\_B and SET\_C.

Radio chip and microcontroller are ON: transceiver can receive data from RF and/or from UART port.

Therefore in this state the transceiver is in receiver mode and switches to transmission mode only if a packet comes from UART port.

When a start bit (low logic level, 0V) and a valid payload packet following (at least 1 byte) is detected on RX\_UART (pin.21) input , transceivers moves to transmission mode.

The way the *store & Forward* mechanism works is described by couples of sequence operations:

- Store from UART on unit A /Forward to RF buffer on unit A/ RF TX unit A
- RF RX unit B/Forward to UART output on unit B [Fig. 4]


When no data are detected on pin 21 for a time longer than 3 bytes length (considered at data rate in usage), transceiver stops the storing of data coming from UART port until the packet is completely forwarded to RF buffer.

Max packet size is 247 bytes.

Data are sent on air only when the UART storage phase is over. Microcontroller checks the incoming packets from radio receiver and enables forwarding to UART output port only in case of valid packets (corrupted packets are eliminated).

RTS line is helpful to monitor UART buffer status: it's normally low level and goes high when buffer is full or during emptying of UART buffer towards radio buffer, or when data are sent on TX\_UART (pin22)

The following diagram explains how RX, TX and RTS and CTS UART lines work:

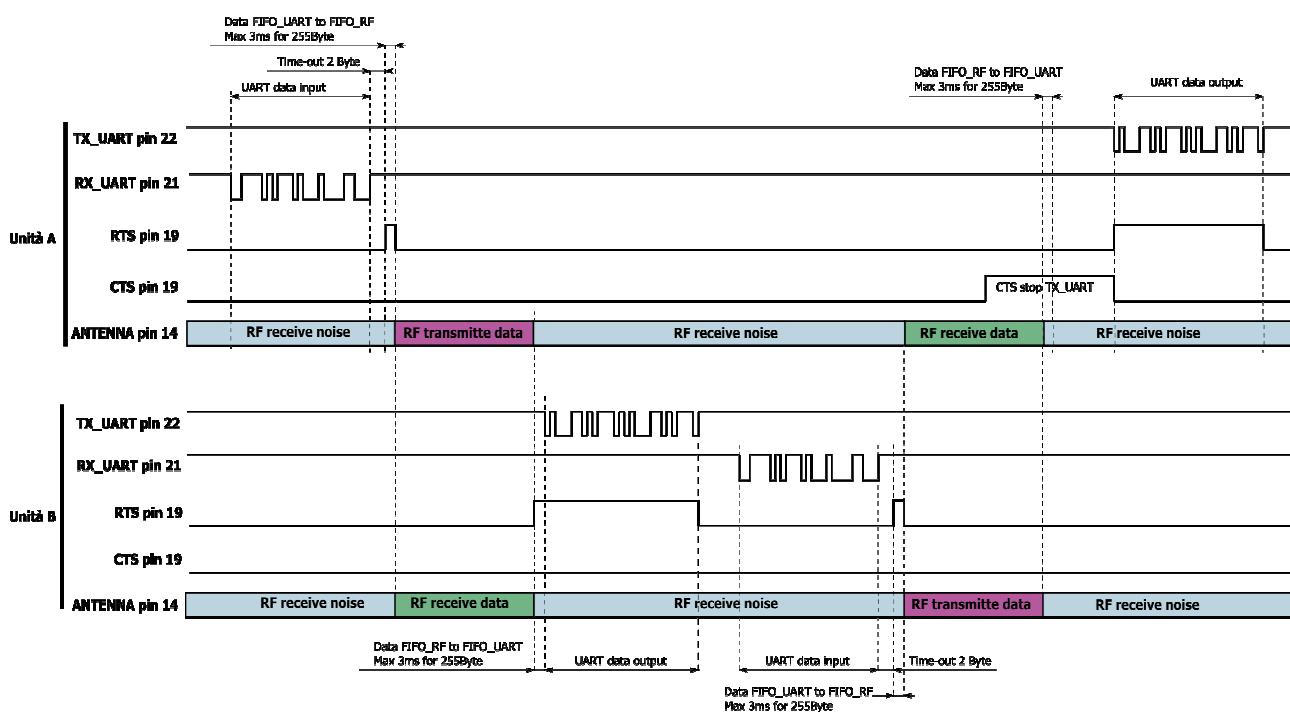

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

**Picture 4:** Data transmission from unit A → B, and trasmission of ACK from unit B → A

As shown in fig. 4, the time interval from start where data is present on pin21 in unit A (RX\_UART), to when it forwarded to pin 22 (TX\_UART) of unit B, is strictly depending on payload size and UART data rate of both modules. CTS in high logic level forbids to XTR-8LR100 to sent data on pin 22 (TX\_UART)

**In order to grant a proper functionality of the transceiver, it's not allowed to overlap phases: i.e. if unit A is emptying UART buffer to radio buffer, any data incoming from UART port are lost.**  
**In order to execute properly the exchange of packet from/to UART port, it's recommended to control the RTS line as go/stop operation signal.**  
**Likewise unit B is not allowed to receive data from RF until the previous packet is still to be transmitted through UART port.**

Using the NORMAL mode with addressing:


NORMAL mode allows to work with addressing data packet, so a potential network composed by many devices permit a point-to-point communication, or point-multipoint.

From command-mode network function is achievable with **ATS10=1** resigter, other registers to be setted are NETWORK ID reg.number S11 and SOURCE ADDRESS S12 (2 bytes) a unique identifier for each device. A wireless network could be composed by 2 to 65536 devices. SOURCE ADDRESS identifies from which device the message starts, DESTINATION ADDRESS identifies who is the device to which the message is meant. From this condition the device forwards on UART the radio data packet received, but only those who have the same NETWORK ID and DESTINATION ADDRESS. When the device transmit the DESTINATION ADDRESS must be applied ever before the payload.

In case of point –multipont network, it's necessary to set up the DESTINATION ADDRESS on FFFF, then all the related devices with same NETWORK ID will receive the payload preceded by 0xFFFF.

No automatic messages ACK is provided.

As an example here below a communication between device 1 and 2 on network A for a message "provalink"

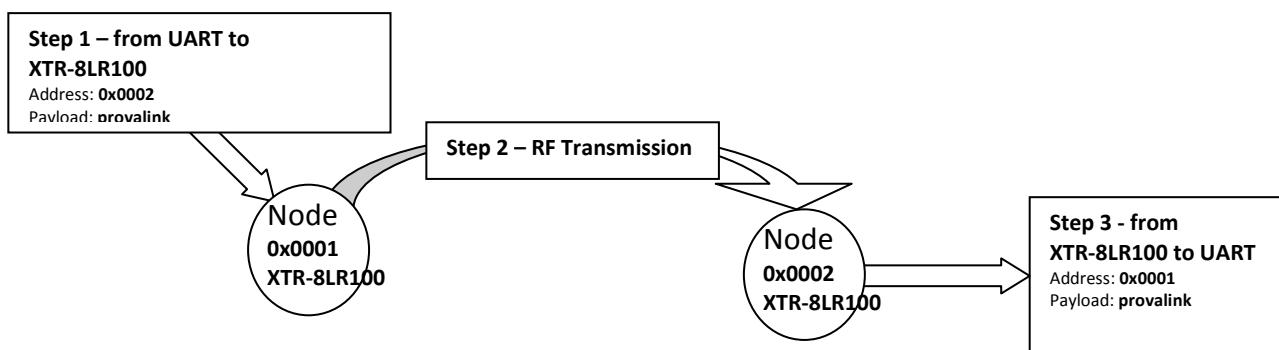

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

**Picture 5:** TX-RX diagram of “provalink” message from node 1 to node 2

Hereinafter are described necessary operations to realize the example on picture 5  
 From command-mode of device 1, send the following AT command string:

| Commands               | Answer     | Note                        |
|------------------------|------------|-----------------------------|
| ++++<CR><LF>           | OK<CR><LF> | Command-mode enters         |
| ATS10=1<CR><LF>        | OK<CR><LF> | Network mode activates      |
| ATS11=0000000A<CR><LF> | OK<CR><LF> | Assigns network address “A” |
| ATS12=0001<CR><LF>     | OK<CR><LF> | Assigns device address “1”  |
| ATWR<CR><LF>           | OK<CR><LF> | Save and exit               |

Node 1 has been set in NORMAL Mode with addressing, NETWORK ID = A and SOURCE ADDRESS = 1. ATWR stores new settings on Eprom and brings back the device on SLEEP

From command-mode of device 2, send the following AT command string:

| Commands               | Answer     | Note                        |
|------------------------|------------|-----------------------------|
| ++++<CR><LF>           | OK<CR><LF> | Command-mode enters         |
| ATS10=1<CR><LF>        | OK<CR><LF> | Network mode activates      |
| ATS11=0000000A<CR><LF> | OK<CR><LF> | Assigns network address “A” |
| ATS12=0002<CR><LF>     | OK<CR><LF> | Assigns device address “2”  |
| ATWR<CR><LF>           | OK<CR><LF> | Save and exit               |

As per node 1 Commands string is repeated excluding command ATS12 that assigns device address SORUCE ADDRESS = 2

Close SET\_A to GND (normal Mode) on both devices and forwards on RX\_UART line of device 1 string “[x0 \x2 provalink” (1).

Device 1 sends the message via radio.

Only the device called “2” will forward on its own TX\_UART line “01provalink” message

Same as mentioned in the above example, addressing method is obtained placing ahead to the payload, in this case “provalink” the receiver address. Listening device “2” will receive the payload preceded by the sender address.

(1): Correct syntax to PC realterm terminal. Network address is write in “hex” and “provalink” message in ASCII. Different programs used from Realterm could require different syntax. For more information related to Realterm using please look at the DEMO BOARD\_XTR\_8LR100 user manual

#### 4. TX Wake up

Same as the NORMAL mode but with a data packet RF completed by a long preamble settable from command ATS20=X (X means from 10 to 6000 ms) in order to allow the wake up and the receiving from RX WAKE UP mode devices.

This function is viable connecting input SET\_B to GND and left open or connected to +V SET\_A and SET\_C

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

Complementary modality to Rx Wake UP, it is recommended to set the S20 register with the same value.

NOTE: RX WAKE UP AND TC WAKE UP do not provide the transmission of ACK automatically. It is possible deploy and ACK from the user side

## 5. RX Wake up

It comes in RX wake up when connecting inputs SET\_A and SET\_B to GND and keep open or connected to +V SET\_C line. RX wake up is useful for low consumption applications where an auto awakening is required, allowing to choose the on-off loop fit for wanted consumption.

Device is normally in sleep mode with average consumption of 1uA, and command ATS20=X (where X is ms from 10 to 6000 in steps of 1ms) permits to drive the setting. When the time S20 is over, it comes in RX searching for a valid preamble, in order to complete the data packet receiving and repeat the cycle. If RX does not find a valid preamble, it remains on RX for 3 symbols and when they expire, goes back to sleep. RX ON status time out it is a variable purpose of Spreading Factor (SF) and bandwidth computable as follow:

$$Ton(RX) = 3 \times \left( \frac{2^{SF}}{BW} \right) \quad \text{EQ4}$$

Where:

**Ton(RX):** Receiver turn on time MAX in seconds

**SF:** Spreading Factor from 6 to 12 from S5 register

**BW:** Bandwidth, in (Hz) from S5 register

In order to communicate with RX wake up devices is necessary use XTR-8LR100 in TX wake up mode, programmed with similar working parameters. Only in this case preamble emitted will have adequate length to be intercepted.


## 6. Tx ADC WAKE UP

Useful for battery powered application who permits to join up to 3 sensors to ADC inputs and transmit the value at predetermined cycles independently without using interfaces and external intelligence.

This function is possible connecting inputs SET\_A and SET\_C to GND and keep open or connected to +V SET\_B line. Analog inputs used are: AN0 (pin4), AN1 (pin5) e AN3 (pin6) they allows analog signals from 0 to Vcc 12 bit resolution. Device is normally in sleep mode, and it awake with timing fit to command ATS30=X (where X is in second from 1 to 65536). It read analog sensors value, transmits the status of ADC, goes to sleep and repeat the cycle. Device The device operates only in network mode with broadcast

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

destination address (all FFFF), Receiver with same ID network submits on UART ADC values preceded by SOURCE ADDRESS (0xFFFF)

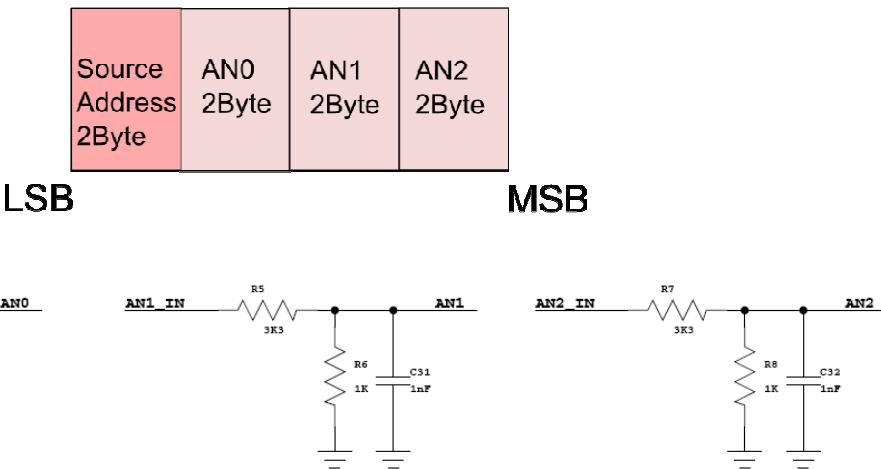

**Picture 6:** Analog input electric diagram AN0(pin4), AN1(pin5), AN2(pin6).

## 7. Test Mode

It's an operation mode which allows the user to test seamlessly the radio link performance. It is triggered by driving input SET\_C to low level and setting (or leaving floating) SET\_A and SET\_B pins. This mode allows to connect two devices as Master and Slave. The former sends 12 ASCII characters "PING xxxx\r\n\r" and in case the latter receives, it will answer with an ACK value of 12 ASCII characters "PONG xxxx\r\n\r". Communication is reported by outputs:

OUT\_1 (pin 33) goes high when Master sends or Slave receive a "PING"

OU2\_1 (pin 32) goes high when Master receive or Slave sends a "PONG"

The selection between Master/Slave configuration is made through ATS92 command:

0 = disabled feature

1 = module set as Master

2 = module set as Slave


**When you have finished test in Test Mode before returning to work in other modes of operation, it is essential to disable the Test with the command ATS92 = 0.**

## Application schematic:

Module connection in NORMAL mode is very easy. TX, RX and configuration pins are handled via asynchronous serial interface. CTS line is not implemented yet.

Module works always in receive mode. Switching from RX to TX mode is triggered automatically when the first data byte comes to input pin 21 (RX\_UART).

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

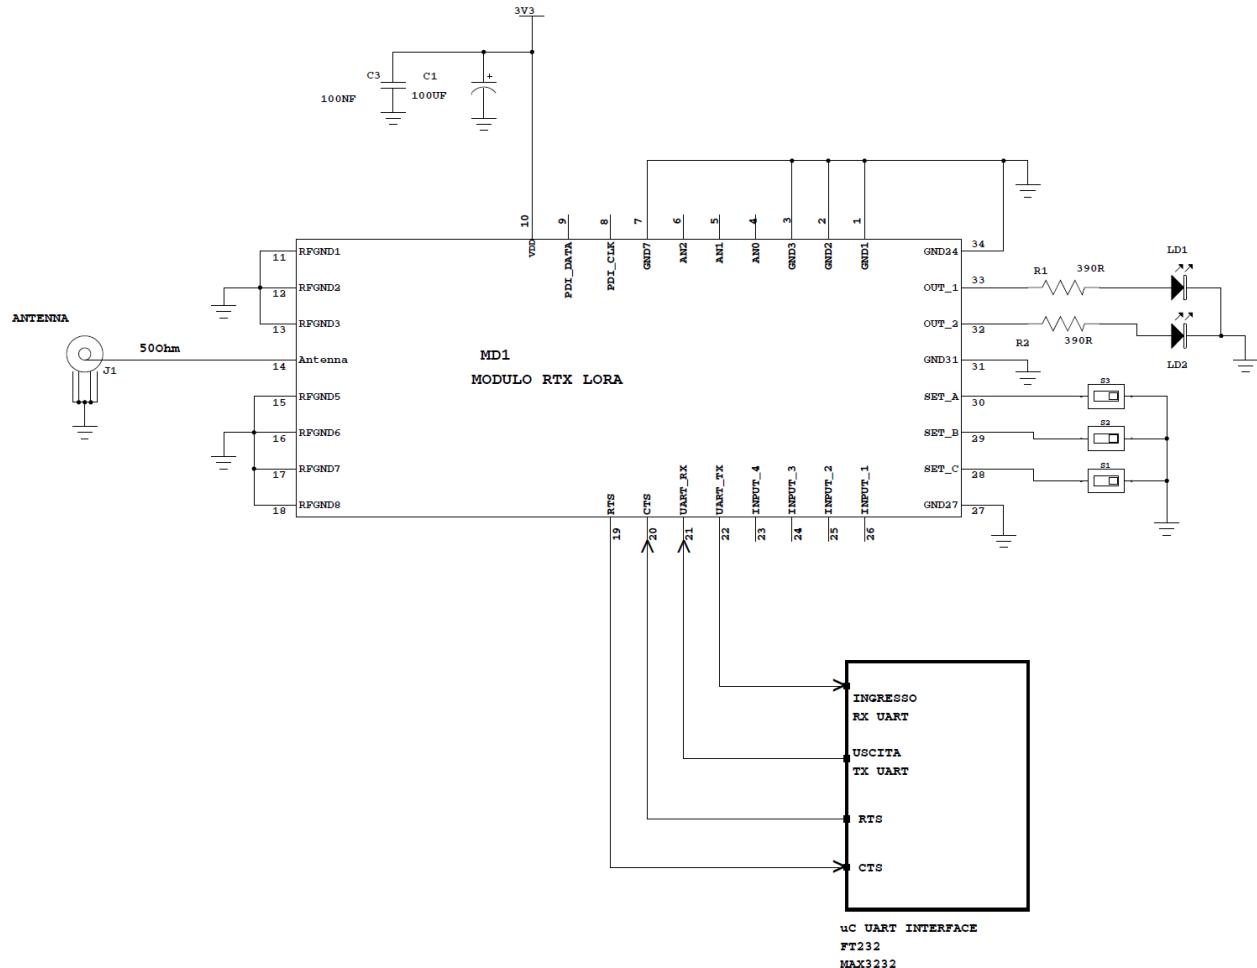

**Picture 7:** Application schematic

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

### **Device usage**

In order to obtain the performances described in the technical specifications and to comply with the operating conditions which characterize the Certification, the transmitter should be mounted on a printed circuit taking into account the following:

#### **Power Supply:**

1. XTR-8LR100 must be supplied from very low voltage safety source protected against the short circuits. Maximum voltage variations allowed: 2.4 ÷ 3.6 V. However it is preferable to maintain a stable voltage to a predetermined value in the range of voltage as specified above, using a voltage regulator "Fast transient response"
2. Decoupling, next to the transmitter, with a ceramic capacitor of minimum 100nF.
3. Connect electrolytic capacitor 220uF, low ESR, close to the pin 10 (+Vcc).

#### **Pin interface:**

Put a capacity of 22-100pF close to the corresponding pins of signal connection, connected between them and the ground plane. The capacitance value varies according to the pin of the module, so please follow to the electrical schematic of Figure 5 and the lay-out of figure 6.

#### **Ground:**

The mass must surround at the best the welding area of the module and must also be realized in the lower face in order to obtain the optimal result, with the through holes connecting the two ground planes.

#### **Antenna:**


Connect pin 2 (antenna) to the coaxial connector or antenna, with microstrip constant impedance of 50R, width 3.2 mm for PCB with thickness 1.6 mm and 1.6 mm for PCB with thickness 1mm. (see Figure 6)  
The antenna is a typical rigid copper wire (insulated or not) of 8cm length and cross-section of 0.5 mm<sup>2</sup> placed vertically to the ground plane.

Other placements of antenna (bend, spiral) will work but performance are not predictable.

As an alternative to connect the module to an external antenna, connect an SMA connector into PCB using microstrip 50 (see figure below).

The proposed lay-out below, for example, shows the connections of signals and power supply on the top and a ground plane on the bottom side of the extended PCB that surrounds the radio module. The cross-link antenna impedance 50R is 3.2 mm wide, specifically, calculated for double-sided Fr-4 epoxy glass 1.6 mm thick. The pin 1 of the power supply, is connect to the power supply with 2mm wide track. A 220uF electrolytic capacitor must be placed nearby.

The pins of the input output signals of the module are connected to the ceramic capacitors from 22 to 100pF, places close by the same.

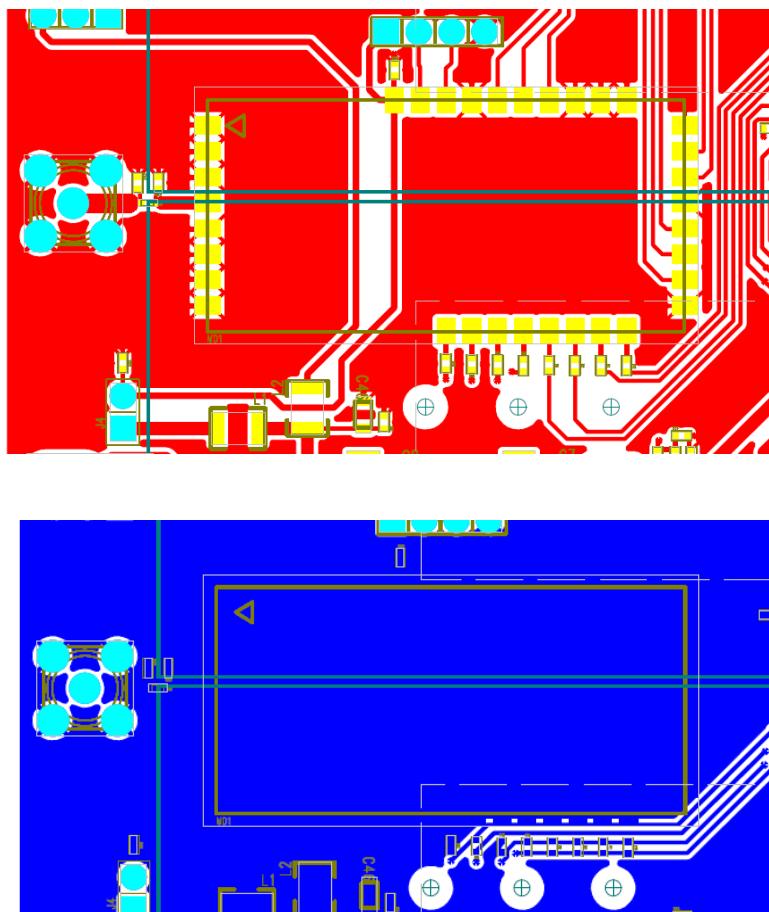


**Picture 7:** Example of lay-out, the connection tracks on PCB on the top side and ground plane in the button side

### Reference Rules

**XTR-8LR100** transceiver is compliant with the European set of rules **EN 300 220 V2.4.1 (2012-05)**, and **EN 301 489-3 V1.5.1 (2012-07)**. Tests has been performed through transmissions of Pseudo Code Random at 500bps(CEPT 70-03). The occupancy of bandwidth has been performed through transmissions of Pseudo Code Random at 500bps. In addition, the product has been tested according to **EN 60950** and it can be utilized inside a special insulated housing that assures the compliance with the above mentioned rules. The transceiver must be operated from a very low voltage source, safety protected against short circuits. The usage of the transceiver is foreseen inside housings that assure the overcoming of the rule **EN 61000-4-2** not directly applicable to the module itself. In particular, it is the user's care the insulation of the external antenna connection and antenna itself since the RF output of the receiver is not able to directly bear the electrostatic charges foreseen by the above mentioned rule.

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

### Soldering and assembling layout SMD

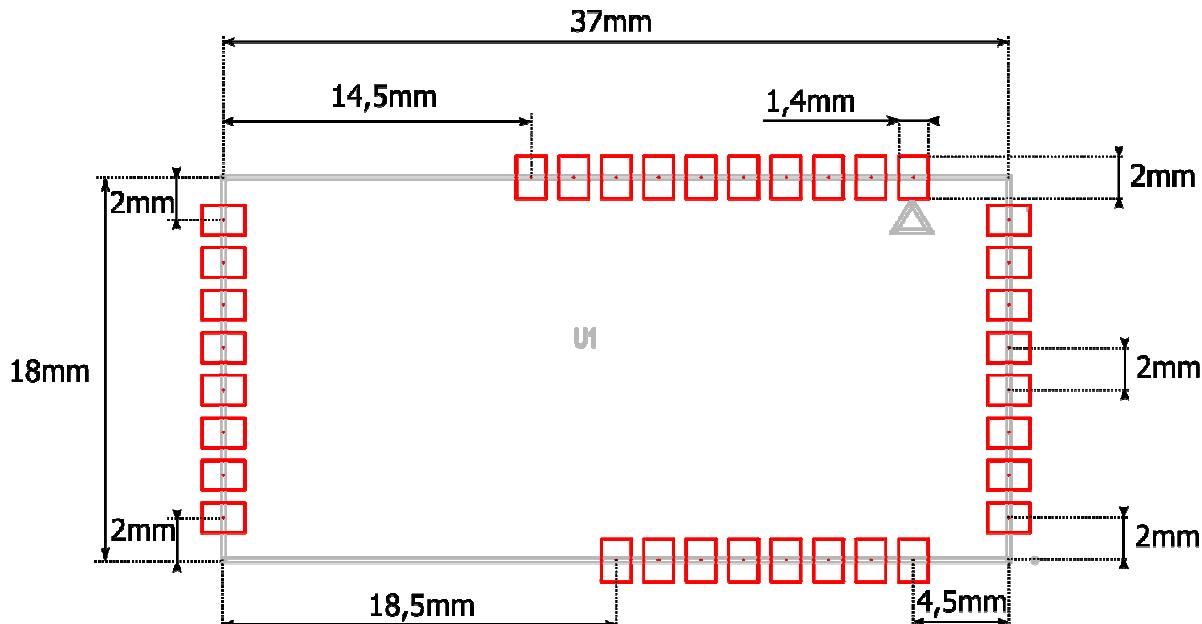

**Picture 9:** suggested layout for Host board

Al fine di assicurare il corretto assemblaggio del modulo si richiede di applicare un processo produttivo osservando attentamente le seguenti raccomandazioni:

In order to ensure the right assembly of the module, it is necessary to apply a production process by observing carefully the following instructions:

- Soldering paste: Use soldering paste as SAC305 (96,5% Sn, 3% Ag, 0,5% Cu), screen printed according the layout of Picture 8, with a thickness > 150um.
- Assembly: the module can be assembled with automatic machine by using a suction cup tool, applied on bigger integrated circuit
- Soldering: the module can be soldered on host board, through a reflow profile for Lead-free components.
- Jedec standard “J-STD-020E”
- Lo standard Jedec “J-STD-020E” defines temperatures and exposure times, is attached below graph and profile table time / temperature recommended for the purpose.
- For host that provide more reflow cycles it is recommended to perform the soldering of the module at the end of the soldering cycle, taking care to limit excessive vibrations during the terminal phase of reflow soldering paste.


Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

| Profile Feature  | Pb-Free Assembly |
|--|------------------|
| <b>Preheat/Soak</b>  |                  |
| Temperature Min ( $T_{smin}$ )   | 150 °C           |
| Temperature Max ( $T_{smax}$ )   | 200 °C           |
| Time ( $t_s$ ) from ( $T_{smin}$ to $T_{smax}$ )   | 60-140 seconds   |
| Ramp-up rate ( $T_L$ to $T_p$ )  | 2 °C/second max. |
| Liquidous temperature ( $T_L$ )  | 217 °C           |
| Time ( $t_L$ ) maintained above $T_L$  | 60-150 seconds   |
| Peak package body temperature ( $T_p$ )  | 240°             |
| Time ( $t_p$ )* within 5 °C of the specified classification temperature ( $T_c$ ), see Figure 9. | 30* seconds      |
| Ramp-down rate ( $T_p$ to $T_L$ )  | 6 °C/second max. |
| Time 25 °C to peak temperature   | 5 minutes max.   |

\* Tolerance for peak profile temperature ( $T_p$ ) is defined as a supplier minimum and a user maximum.

**Table 3:** Detailed time / temperatures profile for soldering XTR-8LR100

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

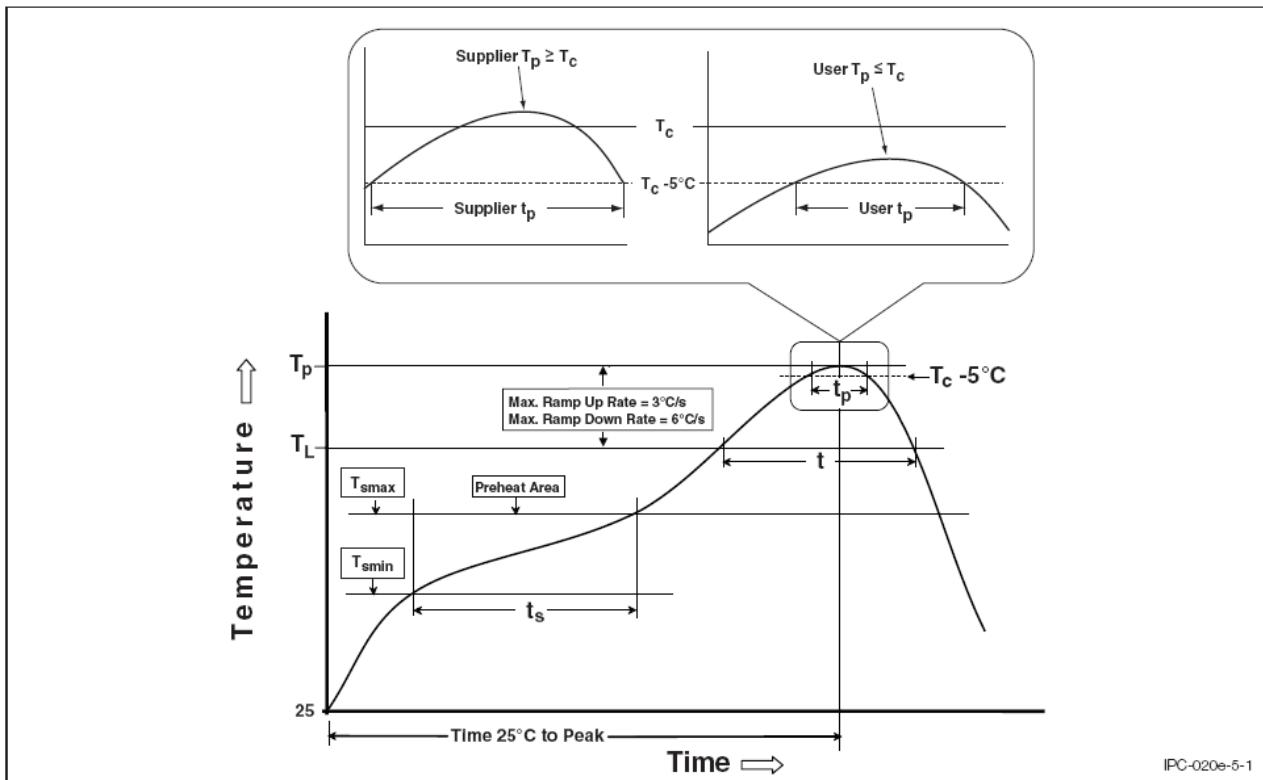

**Picture 10:** Soldering profile for XTR-8LR100



IPC-020e-5-1

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.


## **Specifications Packaging Tape and Reel:**

XTR-8LR100 is packed in Tape and Reel composed by an embossed carrier tape and antistatic cover tape. In this way the modules are ESD protected and can be handled by machines for the automatic assembly of SMD components.

DETAIL G  
SCALE 5:1

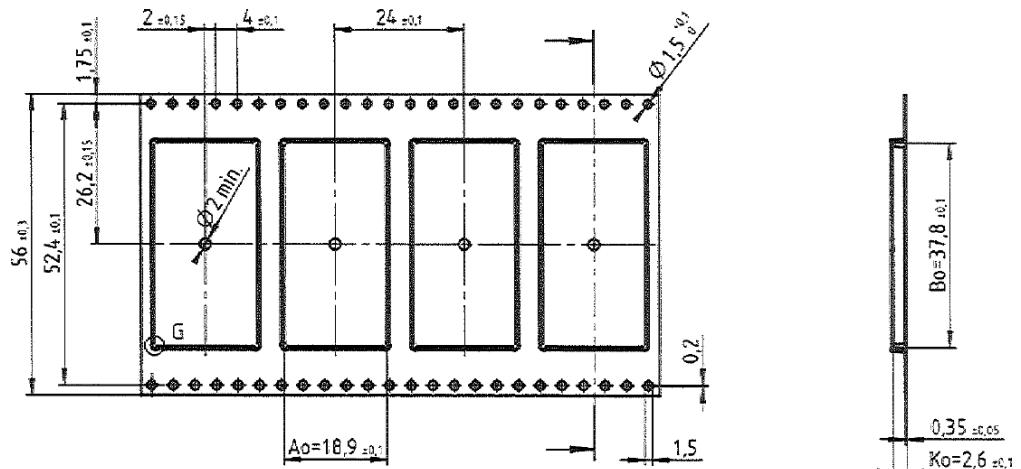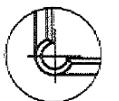

**Picture 11:** Tape and Reel drawing (in mm)

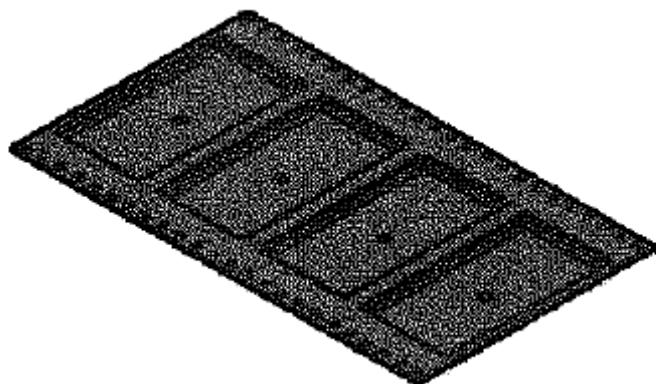

**Picture 12:** External aspect of the embossed

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.

**CEPT 70-03**

XTR-8LR100 transceiver operates in a harmonized frequency band and therefore, in order to comply with local regulations, the device must be used on the time scale with maximum duty-cycle time 10% (equivalent to 6 to 60 minutes of usage ).

**Version:**

| Data rilascio | Revisione manuale d'uso | Firmware corrispondente | Variazioni rispetto alla precedente revisione   |
|---------------|-------------------------|-------------------------|---|
|               | 1.0                     | 0100                    | Primo rilascio  |
| 11/03/2015    | 2.0                     | 0107                    | Inserite fig.3,4,5,6 comandi AT, Normal con indir. Modalità 4,5,6, EQ. Da 1 a 4,  |
| 10/07/2015    | 2.1                     | 0110                    | Introdotti tempi comm. caratteristiche tecniche<br>Corr. Pag.8,14,15,16<br>Introdotto: Paragrafo saldatura, Imballo T&R |
|               |                         |                         |   |

Le caratteristiche tecniche possono subire variazioni senza preavviso. AUR<sup>®</sup>EL S.p.A. non si assume la responsabilità di danni causati dall'uso improprio del dispositivo.