
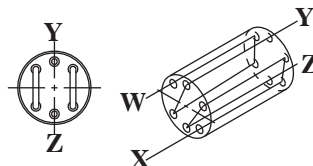
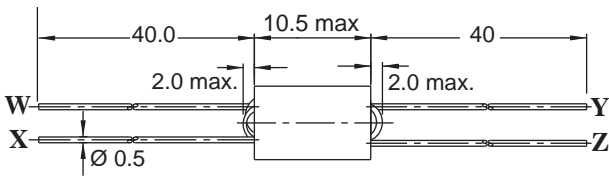
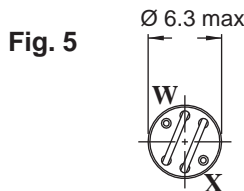
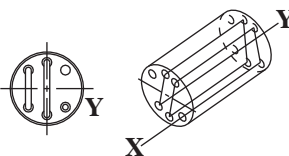
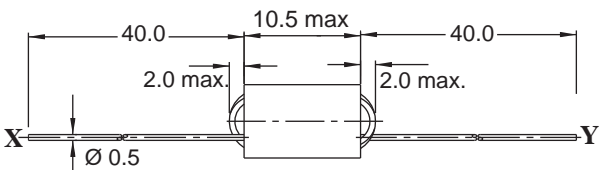
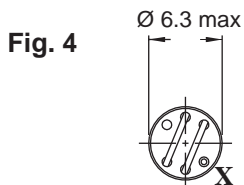
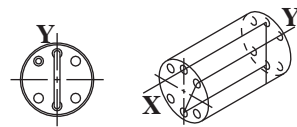
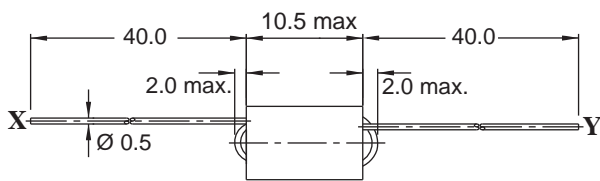
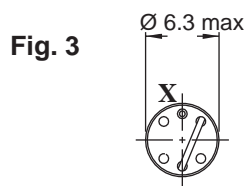
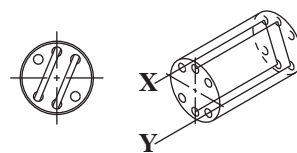
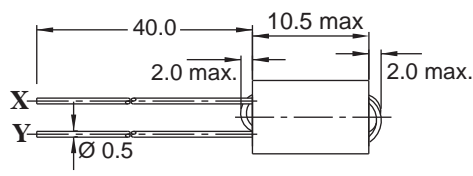
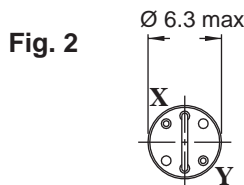
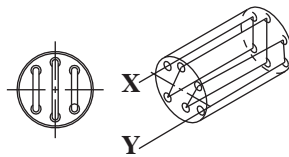
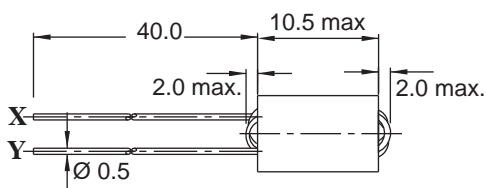


06 H

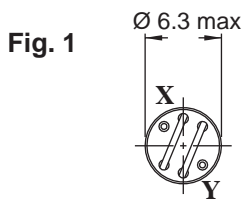

| Part No | Impedance Z (Ω) | f _L (MHz) | Turns | Current (A) | Fig. |
|-------------|--------------------|----------------------|--------|----------------|------|
| 06H-351X-00 | 300 | 120 | 1½ | 1.0 | 3 |
| 06H-451X-00 | 350 | 250 | 1½ | 1.0 | 3 |
| 06H-551X-50 | 800 | 50 | 3 | 1.0 | 1 |
| 06H-651X-50 | 520 | 50 | 2 | 1.0 | 2 |
| 06H-751X-00 | 600 | 50 | 2½ | 1.0 | 4 |
| 06H-851X-00 | 700 | 180 | 2½ | 1.0 | 4 |
| 06H-901X-00 | 700 | 50 | 2 x 1½ | 1.0 | 5 |
| 06H-102X-00 | 800 | 110 | 2 x 1½ | 1.0 | 5 |
| 06H-881X-50 | 750 | 180 | 3 | 1.0 | 1 |


Material : Ferrite

SPQ :


| | |
|--------------|-------------|
| Packing Form | Loose / Box |
| Axial | 300 [-00] |

Remark : All models are available with insulation tube (06 H/T)


Typical IZI vs Frequency(f)

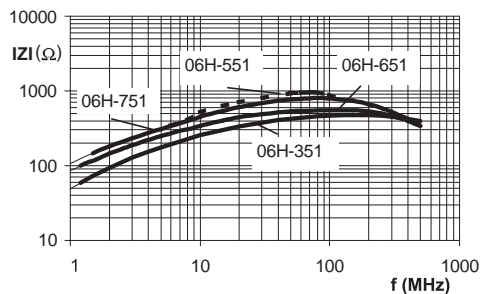


Typical a(dB) vs Frequency(f)

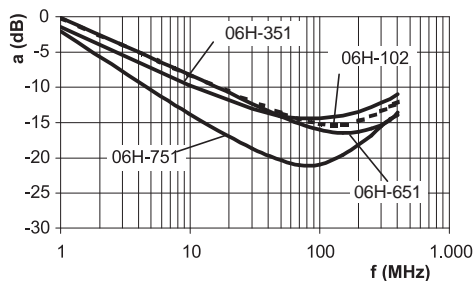

Typical IZI vs Frequency(f)

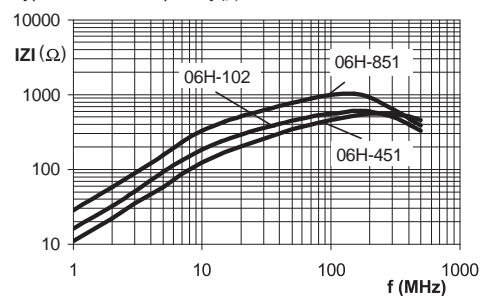

Typical a(dB) vs Frequency(f)

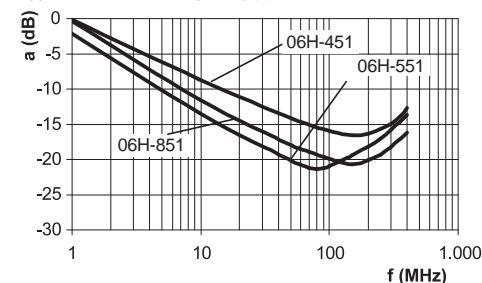

Wide Band Chokes