



Assembly Guide




1-1 Installing for Mini PCI-e Card

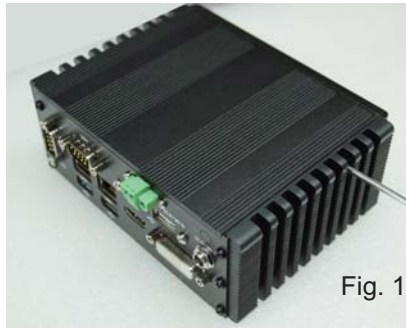


1. Remove the screws from the left & right sides of the chassis and remove the top cover. (Fig.1)

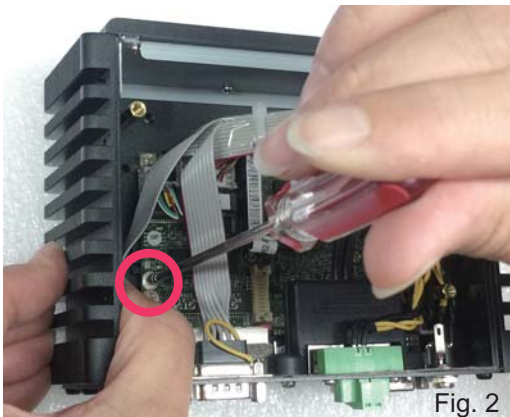

2. Remove the mini PCIe fixing screw from motherboard.(Fig.2)

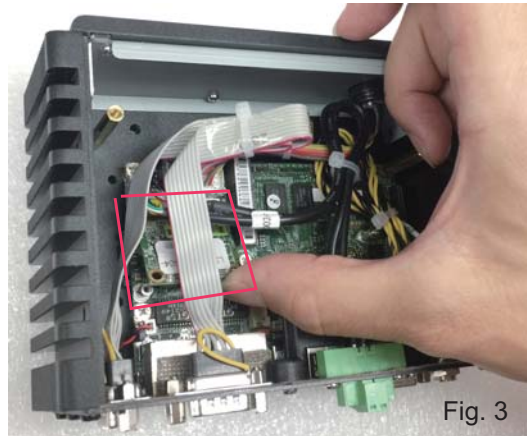


3. Install the mini PCIe card into the slot at a 45 degree angle.(Fig. 3)

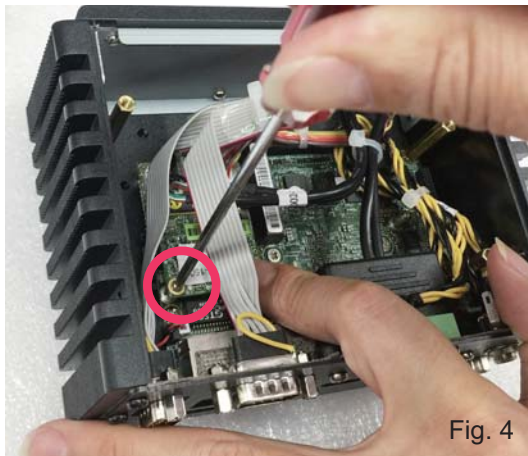


4. Press down to screw back the fixing screw.(Fig. 4)


1-2 Installing for SATA HDD Version

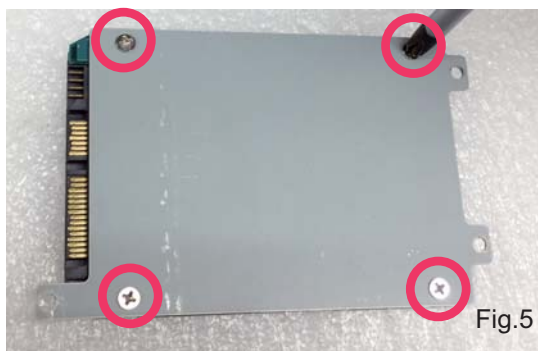


1. Place the HDD kit on the HDD and screw them with screws. (Fig.5)

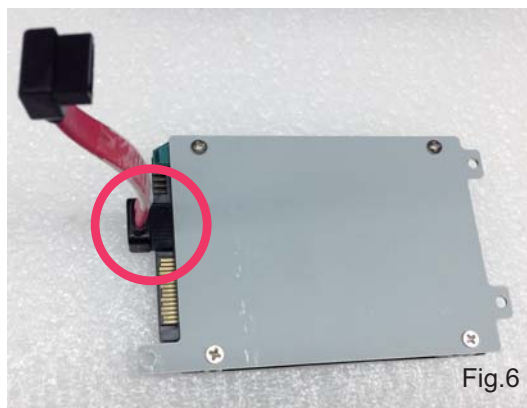

2. Connect the SATA Data Cable with HDD. (Fig.6)

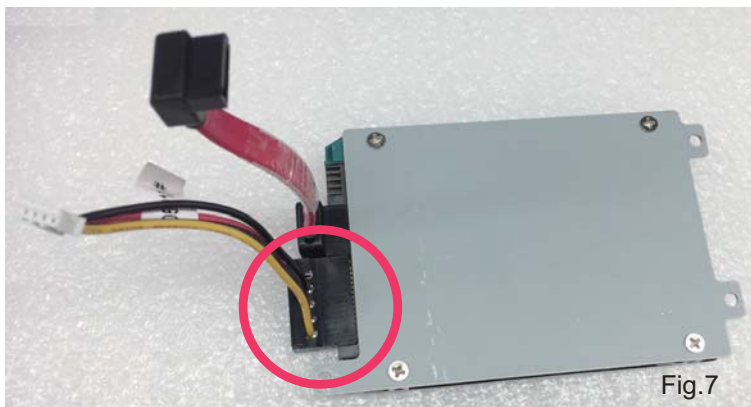

3. Connect the SATA Power Cable with HDD. (Fig.7)

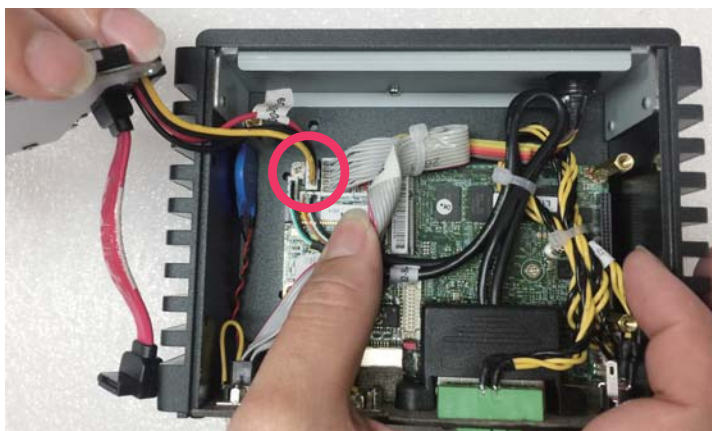

4. Connect the SATA Power Cable with motherboard. (Fig.8)

Fig.8

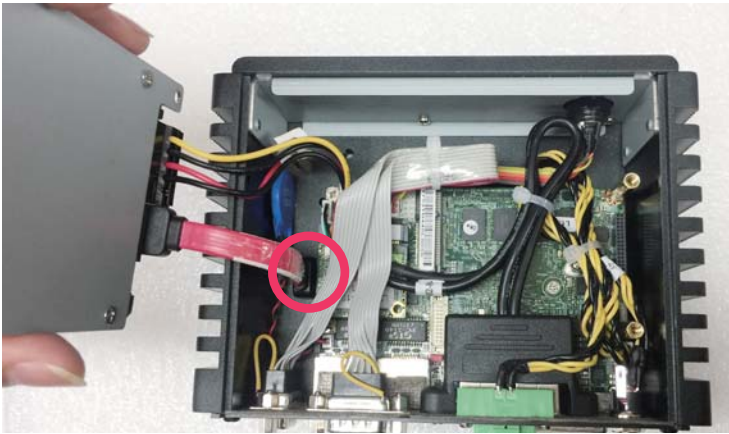


Fig.9

5. Connect the SATA DATA Cable with motherboard. (Fig.9)

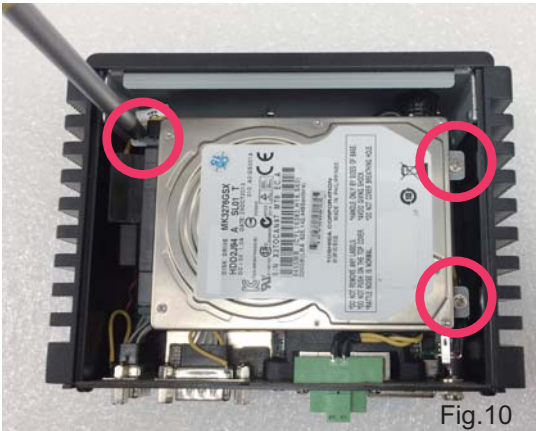


Fig.10

6. Place the HDD kit inside the system and tighten the screws manually. (Fig.10)



Fig.11

7. Apply HDD thermal adhesive to HDD & make sure don't stick on HDD track . (Fig.11)



Fig.12

8. Put the cover back & tighten the cover with 2 sides screws. (Fig.12)

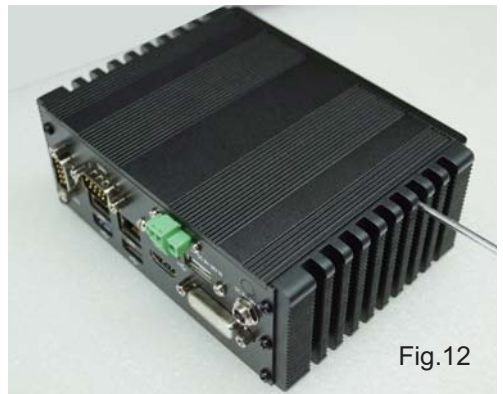


Fig.12

1-3 TERA Exploded Drawing

No	Name	Q'ty
1	BOTTOM COVER	1
2	TOP COVER	1
3	TOP COVER BRACKET	2
4	FRONT COVER	1
5	FRONT FRAME	1
6	POWER BOTTON	1
7	IO PANEL	1
8	HDD BRACKET	1

