

# TT-LX 112/212/312

## ▶ TT-LX 112



## ▶ TT-LX 212



## ▶ TT-LX 312



## ▶ TT-LX 112



## ▶ TT-LX 212/312



## Specifications

Model	Attn.	Bandwidth	Rise Time (ns)	Input Impedance		Compensation Range (pF)
				R (MΩ)	C (pF)	
TT-LX 112	x1	25	14	1	42	-
TT-LX 212	x10	150	2,3	10	13	8-25
TT-LX 312	x1	10	35	1	47	-
	x10	150	2,3	10	13	8-25

Cable Length: 1,2 Meter

**TESTEC**



**To reduce risk of fire or electric shock, do not exceed the voltage or category ratings of the probe. See voltage derating curve**

**Max Input Voltage Attenuation x1:**

.....55Vrms Measurement Category II

**Max Input Voltage Attenuation x10:**

.....400Vrms Measurement Category II

.....1500V Transient Overvoltage

DC-Accuracy .....±2%

Pollution Degree .....Pollution Degree 2\*

Operating Altitude.....Up to 3000 meters

Max. Operating Temp .....0° C to +50° C

Humidity .....5% to 95% RH (10 to 30 °C)

.....5% to 50% RH (above 40 °C)

.....RH not controlled below 10 °C

\* As defined in IEC 61010-031. See definitions below.

### Definitions

Measurement Category II (CAT II) refers to measurements performed on circuits directly connected to utilization points (socket outlets and similar) of the low-voltage mains installation.

Pollution Degree 2 refers to an operation environment where normally only dry non-conductive pollution occurs. Temporary conductivity caused by condensation should be expected.

## CE UK Compliance Statements:

The product is in conformity with the relevant Union harmonization legislation:

**2014/35/EU - Low Voltage Directive, LVD**

In accordance with the following harmonized standard:

- EN 61010-031:2015

**2014/30/EU - EMC Directive, EMC**

In accordance with the following harmonized standards:

- EN 61326-1:2013

- EN 61326-2-2:2013

**2011/65/EU - Directive for certain hazardous substances, RoHS II - incl. 2015/865/EU RoHS III**

In accordance with the following harmonized standard:

- EN IEC 63000:2018

**This Instrument fulfills the following safety requirements:**

**EN 61010-1: 2010/A1:2019/AC:2019-04**

Part 01: Safety requirements for electrical equipment for measurement, control, and laboratory use.

**EN 61010-031:2015 + A1:2021 + A11:2021**

Part 031: Safety requirements for hand-held and hand-manipulated probe assemblies for electrical test and measurement.

**Disposal of Old Electrical & Electronic Equipment:**



(Applicable in the European Union and other European countries with separate collection systems). This product is subject to directive 2012/19/EU of the European Parliament and the Council of the European Union on waste electrical and electronic equipment (WEEE), and in jurisdictions adopting that directive, is marked as being put on the market after August 13, 2005, and should not be disposed of as unsorted municipal waste. Please utilize your local WEEE collection facilities in the disposition of this product and otherwise observe all applicable requirements

**TESTEC**

Testec Elektronik GmbH  
Voltastr. 8-10 · 63303 Dreieich/Germany  
Phone: +49 69 943 335-0  
info@testec.de · www.testec.de

## General Safety Information



Observe generally accepted safety procedures in addition to those listed here to avoid personal injury or damage to equipment.

**The overall safety of any system incorporating this accessory is the responsibility of the assembler of the system.**

**Connect only to grounded instruments.** Use only with oscilloscopes that have BNC with 1 MΩ input and connected to an earth ground. Do not connect the probe reference lead to any point which is at a potential other than earth ground.

**Connect and disconnect properly.** Connect probe to the oscilloscope before connecting it to the test circuit. Disconnect the probe input and reference lead from the test circuit before disconnecting from the oscilloscope. Do not connect/disconnect probes while connected to a voltage source

**Do not overload.** Do not apply any potential to the probe leads that exceeds the maximum rating of the probe. Observe all terminal ratings on the oscilloscope before connecting. Consult the oscilloscope product manual for further ratings information.

**Always comply with the Voltage vs. Frequency Derating Curve.**

**Do not disassemble.** Touching exposed connections may result in electric shock.

**Use indoors only within operational environment listed.** Do not use in wet or explosive atmospheres. Keep product surfaces clean and dry.

**Handle with care.** Probe tips are extremely sharp and may puncture skin or cause other bodily injury if not handled properly.

**Keep fingers behind the finger guard of probe body and accessories.**

**Do not operate with suspected failures.** Before each use, inspect the probe and accessories for any potential damage such as tears or other defects in the probe body, cable jacket, accessories, etc. If any part is damaged, cease operation immediately and sequester the probe from inadvertent use.

## Terms and Symbols

The following terms appear in this manual:



**CAUTION** of potential damage to equipment, or **WARNING** of potential for bodily injury. Attend to the accompanying information to protect against personal injury or damage. Do not proceed until conditions are fully understood and met. Refer to manual.




**DANGER** High Voltage, risk of electric shock or burn.




**PROTECTIVE (EARTH) TERMINAL**

## Voltage vs. Frequency Derating Curve TT-LX 212/312

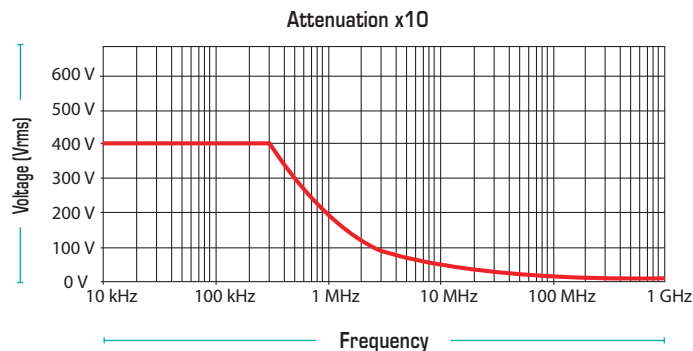


## Input Impedance Profile TT-LX 212/312

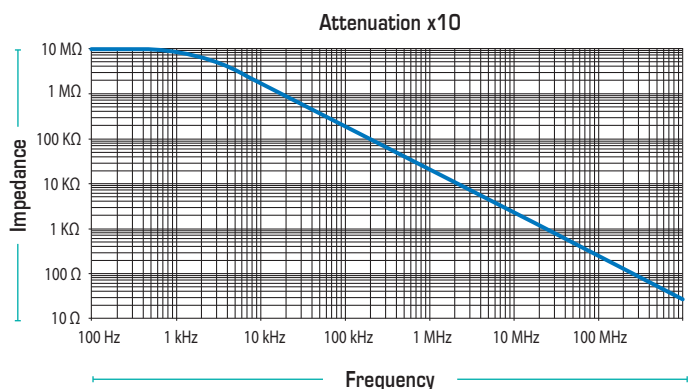

3

## Accessories Supplied TT-LX 112/212/312

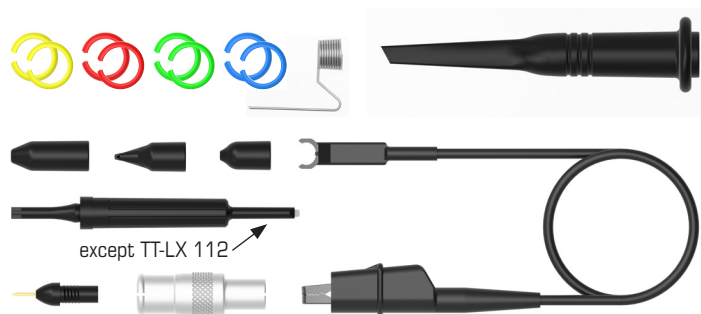

4


## Attenuation x10

### Probe Compensation TT-LX 212/312

The following adjustment is required whenever the probe is transferred from one oscilloscope or input channel to another. Proper compensation of the probe is necessary to assure amplitude accuracy of the waveform being measured by matching the probe to the oscilloscope's input capacitance.

### Low Frequency Compensation:

1. Apply a 1 kHz square wave to the probe or connect to the oscilloscope's calibrator output.
2. Adjust the trimmer located in the BNC connector-box for a flat topped square wave.

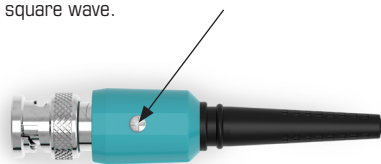


### Waveform Compensation

Over Compensated  
Incorrect

Under Compensated  
Incorrect

Properly Compensated  
Correct

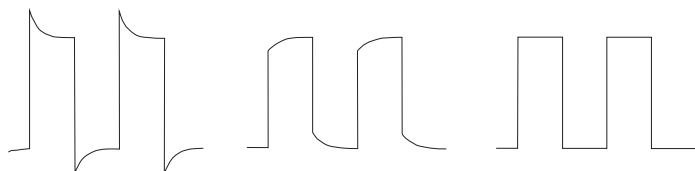

5