

### RTC-1200SK

Rugged Tablet Computer

User's Manual 2<sup>nd</sup> Ed

#### **Copyright Notice**

This document is copyrighted, 2019. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its

users.

#### Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Cortex is the registered trademark of ARM Holdings
- Android is the trademark of Google Inc.

All other product names or trademarks are properties of their respective owners.

#### Packing List

Before setting up your product, please make sure the following items have been shipped:

Item		Quantity
•	RTC-1200SK	1
•	Power Adapter	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the AAEON.com for the latest version of this document.

# RTC-1200Sk

#### Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

- 1. All cautions and warnings on the device should be noted.
- 2. Make sure the power source matches the power rating of the device.
- Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- Always completely disconnect the power before working on the system's hardware.
- 5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
- If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
- 7. Always disconnect this device from any AC supply before cleaning.
- 8. While cleaning, use a damp cloth instead of liquid or spray detergents.
- 9. Make sure the device is installed near a power outlet and is easily accessible.
- 10. Keep this device away from humidity.
- 11. Place the device on a solid surface during installation to prevent falls
- 12. Do not cover the openings on the device to ensure optimal heat dissipation.
- 13. Watch out for high temperatures when the system is running.
- 14. Do not touch the heat sink or heat spreader when the system is running
- 15. Never pour any liquid into the openings. This could cause fire or electric shock.
- 16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

- 17. If any of the following situations arises, please the contact our service personnel:
  - i. Damaged power cord or plug
  - ii. Liquid intrusion to the device
  - iii. Exposure to moisture
  - Device is not working as expected or in a manner as described in this manual
  - v. The device is dropped or damaged
  - vi. Any obvious signs of damage displayed on the device

#### DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.

#### FCC Statement



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

#### Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

#### Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

#### China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON Panel PC/ Workstation

	有毒有害物质或元素					
部件名称	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
印刷电路板	0	0	0	0	0	0
及其电子组件	0	0	0	0	0	0
外部信号	0	0	0	0	0	0
连接器及线材	0	0	0	0	0	0
外壳	0	0	0	0	0	0
中央处理器	0	0	0	0	0	0
与内存	0	0	0	0	0	0
硬盘	0	0	0	0	0	0
液晶模块	0	0	0	0	0	0
光驱	0	0	0	0	0	0
触控模块	0	0	0	0	0	0
电源	0	0	0	0	0	0
O:表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006标准规定的限量要求以下。						

X:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。

备注:

一、此产品所标示之环保使用期限,系指在一般正常使用状况下。 二、上述部件物质中央处理器、内存、硬盘、光驱、触控模块为选购品。 Poisonous or Hazardous Substances or Elements in Products

AAEON Panel PC/ Workstation

Poisonous or Hazardous Subst		bstances or Elemer	its			
Component	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	0	0	0	0	0	0
Wires & Connectors for External Connections	0	0	0	0	0	0
Chassis	0	0	0	0	0	0
CPU & RAM	0	0	0	0	0	0
Hard Disk	0	0	0	0	0	0
LCD	0	0	0	0	0	0
Optical Drive	0	0	0	0	0	0
Touchscreen	0	0	0	0	0	0
PSU	0	0	0	0	0	0

O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.

X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.

Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only

#### Table of Contents

Chapter	1 - Produ	uct Specifications	1			
1.1	Spec	ifications	2			
Chapter	Chapter 2 – Getting Started6					
2.1	Prod	luct Overview	7			
2.2	Note	es before use	13			
2.3	Turni	ing On the Device	14			
2.4	Touc	h Controls	15			
Chapter	· 3 – Settir	ng Up	16			
3.1	Setti	ngs Screen	17			
	3.1.1	System	20			
	3.1.2	Device	23			
	3.1.3	Network & Internet	24			
	3.1.4	Personalization Settings	26			
	3.1.5	Accounts Settings	27			
	3.1.6	Time & Language Settings	28			
	3.1.7	Ease of Access Settings	29			
	3.1.8	Privacy Settings	30			
	3.1.9	Update & Security	31			
Chapter	· 4 – Optio	onal Accessories	32			
4.1	Barc	ode Scanner	33			
4.2	Doc	king Station	34			
	4.2.1	Specifications	35			
4.3	Insta	II Camera Metro UI	37			
Append	lix A - Sta <sup>.</sup>	tements	41			
A.1	State	ements	42			
A.2	2 Cana	adian Notice	44			

A.3	Safety Caution	. 45
A.4	Battery Disposal	. 47
A.5	Battery Caution	. 49
A.6	Adapter Caution	. 50
A.7	FCC Interference Statement	51

### Chapter 1

Product Specifications

#### 1.1 Specifications

System	
Processor	Intel® Core™ i Dual Core up to 3.4GHz
	Processor Intel® Celeron® 3955U Dual Core
	2.0GHz Processor
Operating System	Windows $\ensuremath{^{\textcircled{@}}}$ 10 IoT Enerprise 64bit, Windows $\ensuremath{^{\textcircled{@}}}$
	7 Embedded 32/64bit
Memory	DDR3 SODIMM Socket x 1, up to 8 GB
Storage	M.2 (NGFF) SSD, up to 256 GB
Display	11.6" TFT-LCD/ 16:9, with Projected Capacitive
	Multi-Touch screen
I/O Ports	DC-in Jack x 1
	USB 3.0 x 1 (Type A), USB 2.0 x 2 (Type A)
	RJ45 x 1, RS-232/422/485 COM x 1
	HDMI x 1, Micro SD Card Slot x 1
	3.5-mm stereo headphone jack x 1
	Built-in Speaker & Microphone
	SIM Card Slot x 1, Barcode Scanner (Optional)
Communication	Bluetooth v4.1, Wi-Fi (802.11 b/g/n),
	Front-facing NFC/ RFID (13.56MHz), 3G
	(Optional)
Navigation	GPS, Glonass
WWAN(optional)	3G: WCDMA, LTE via mini-card slot (Optional)
Camera	2 MP front camera, 5 MP auto-focus rear
	camera with flash

	System
Rugged	Sensors
ed Tablet	Expansion Slot
Computer	Barcode Scanner (Op
	RFID (Optional)

m	
ors	G-sensor, E-Compass, Gyroscope,
	Light-sensor
ision Slot	Docking; GPS/WLAN Pass-through via
	Docking
de Scanner (Optional)	1D Scanner support CMOS engine (Optional),
	2D Scanner support LED engine
(Optional)	Front-facing HF RFID based on 13.56MHz
	compatible with NFC

Mechanical	
Color	Gray & Black
Dimension (W x H x D)	12.36" x 7.87" x 0.96" (310.4mm x 200mm x
	24.5mm)
Gross Weight	3.3 lbs (1.5 kg)

Power Supply	
AC / DC Adapter	AC 100~240V, 50~60Hz ; DC 19V/3.42A (65W)
Battery Life	Dual Li polymer High Capacity Batteries, up to 10
	Hours Battery Life (Mobilemark)
Master Battery	Removable Battery: 14.8V 2270mAH
Slave Battery	Removable Battery: 14.8V 2270mAH

Environmental	
Operating Temperature	-4°F ~ 140°F (-20°C ~ 60°C)
Storage Temperature	-67°F ~ 158°F (-55°C ~ 70°C)
Humidity	50°C; 5% ~ 90% R/H; 120 hours,
	non-condensing
Environmental Sealing	IP65
Vibration	MIL-STD-810G Method 514.6 Procedure I, Cat.
	24, Fig. 514.6E-1 & E-2
Drop	MIL-STD-810G Method 516.6 Procedure IV
	• Height of Drop: 122cm (48 inch; 4ft),
	• Number of Drop: 26 times, - Floor: Two
	inch plywood backed by concrete, for all
	surfaces, edges and corners
ESD	Air charge: +/- 8KV, Contact charge: +/- 4KV
Certifications and Standards	UL: UL60950-1, CE/LVD: EN60950-1, FCC, CE

Display	
LCD	11.6" TFT-LCD/ 16:9, with LED backlight
Resolution	1920 x 1080 pixel
Maximum Color	16.7M
Dot Size	0.117 x 0.117(H)
Brightness	1000 nits; 300 nits (Optional)
Viewing Angle	Horizontal: 178° (Typ.), Vertical: 178° (Typ.)

Touchscreen	
Touch Type	Projected capacitive multi-touch screen (PCT);
	Gloves/Finger Switchable by F2
Light Transmission	Min 87% (ASTM D1003; Wavelength = 550nm)

Physical Key	
Windows	Starter Key
Volume up	Speaker Volume Up
Volume down	Speaker Volume Down
F1	Ctr+Atl+Del & Barcode Scanner Trigger
F2	Touch Mode Switch
F3	PrtSc/printscreen

## Chapter 2

Getting Started


#### 2.1 Product Overview

#### Front View





#### Side View (Left)

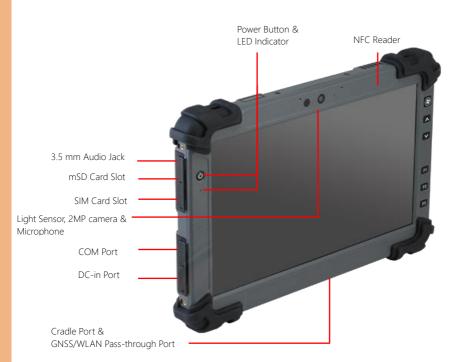

Part	Function
NFC Reader	Support NFCIP-1 and NFCIP-2, ISO/IEC 14443, ISO/IEC 15693,
	ISO/IEC 18000-3, MIFARE and FeliCa specifications
Power Button	Shut down/power on & sleep mode by Power Options in
	System Settings
LED Indicator	Battery Charge Status; Orange or Green (full)
3.5 mm Audio Jack	Usable with any audio device with a 3.5 mm jack.
mSD card Slot	support up to SDXC 2TB
SIM Card Slot	Usable with standard-size SIM cards only.
Light Sensor	Ambient Light Sensr

2MP camera	1080p FHD Webcam
Microphone	DMiC for speech/voice program
COM Port	RS232/422/485
DC-in Port	AC Power input : 100V-240V, 50Hz-60Hz, 65W output : 19V
Cradle & GNSS/WLAN	For interaction for docking station I/Os
Pass-through Port	

#### Side view (Right)



Part	Function
Windows Key	Starter key
Volume Up	speaker volume up
Volume Down	speaker volume down
F1	Ctr+Atl+Del as Soft Reboot & BCR Trigger Butten(When
	BCR is enable)
F2	Touch Modes Switch ; Finger (Rain) or Gloves
F3	Screenprint
HDMI	HDMI 1.4
USB3.0	typeA
USB2.0	typeA
USB2.0	typeA
RJ45	GbE LAN

#### **Rear View**



Part	Function
5MP camera & Flash	QSXVGA Camera with Flash
Battery Bay	Battery bay for 2 batteries

#### 2.2 Notes before use

Before using your device, please read through the following instructions

- Use only the power adapter that comes with your device. Using a different power adapter may cause damage.
- The AC cable is designed for the RTC-1200SK only
- This product is intended to be supplied by a Listed Power Adapter or DC power source, rated 19Vdc, 3.42A minimum, Tma = 40°C. Please contact AAEON for further assistance.
- Using a power outlet is the best way to charge your device (refer to section 1.2 for the adapter's voltage output and acceptable input)
- When using the device for the first time, fully charge the battery for up to 8 hours. If the device is inactive, charging the battery once per month is recommended to prevent deterioration.
- There are two batteries in the RTC-1200SK: both batteries can be monitored at the title bar). Charge the device once battery 1 drops below 20%
- Always allow your battery to be fully charged before use. Calibrating the battery before use is also highly recommended.
- To prolong battery life, allow a fully charged battery to discharge more than 95% before recharging
- Ensure that the battery cover is properly secured by manually pushing the pin to lock position.
- The RTC-1200SK CANNOT be charged via an USB connection.
- The IP65 waterproof protection may get damaged when subjected to shocks greater than levels tested in MIL-STD-810G Method 516.6 Procedure IV. The protection may also be affected if the rubber connector fails to cover or close firmly.

#### 2.3 Turning On the Device



- The power button turns your device on and off. Hold the button for one second to power on.
- To start or wake it up from sleep mode, hold the power button for 0.5 seconds till the shutdown confirmation is shown. If the system remains unresponsive, press and hold the power button to force power off (may result in data loss). It is strongly recommended that important data is backed up on a regular basis.

#### 2.4 Touch Controls

Gusture	Action
Single Taps	Single taps allow users to open any files or applications or select text input area
Long Tap	Long tapping an icon allows it to be moved freely on the screen. This gesture also opens the Android context menu,
(Tap and Hold)	letting you cut, copy, rename, delete the selected file, or select multiple files for batch actions

### Chapter 3

Setting Up

#### 3.1 Settings Screen

The Settings screen allows you to configure some settings of your RTC-1200SK which includes:

Main Category	Sub Category
	Display
Gustana	Notifications
System	Apps
	Power
	Bluetooth
Device	Printers
	Mouse
	Wi-Fi
Networks & Internet	Airplane Mode
	VPN
	Background
Personalization	Lock Screen
	Colors
	Your Account
Accounts	Sync Settings
Accounts	Work
	Family
	Speech
Time & Language	Region
	Date
Ease of Access	Narrator
	Magnifier

	High Contrast
	Location
Privacy	Camera
	Windows Update
Update & Security	Recovery
	Backup

#### From Home Screen



#### 1. Reveal the Charm Bar.



#### 2. Tap Settings



Tablet Computer

#### Configuring the Display.

1. Go to Setting>Systems>Display.

← Settings	- 🗆 X
🔯 SYSTEM	Find a setting
Display	Identify Detect Connect to a wireless display
Notifications & actions	Change the size of text, apps, and other items: 100% (Recommended)
Apps & features	Orientation
Multitasking	Landscape $\checkmark$
Tablet mode	Lock rotation of this display
Battery saver	Off Off
Power & sleep	Brightness level
Storage	Adjust my screen brightness automatically
Offline maps	On Con
Default apps	Apply Cancel
About	Advanced display settings

•Font Size:

Adjust the font size here.

#### •Display Rotation:

You may lock rotation of this display Off or On.

#### •Brightness:

You may allow the device to adjust the screen brightness automatically. On or Off.

#### 2. Select Notifications & actions.

€- Settings		-	0	×
💮 SYSTEM		Find a setting		P
Display	Quick actions			
Notifications & actions	Choose your quick actions			
Apps & features	8 6 7 8			
Multitasking				
Tablet mode	Select which icons appear on the taskbar			
Battery saver	Turn system icons on or off			
Power & sleep	Notifications			
Storage	Show app notifications			
Offline maps	On Show notifications on the lock screen			
Default apps	On			
About	Show alarms, reminders and incoming VOIP calls on the lock screen			
	On On			
	Hide notifications while presenting			
	mo (III)			
# A @ 🔽		^ ∎ <sup>1</sup> K B3 ⊡	259 P	M

#### •APP:

You may show app notifications On or Off.

#### ·Lock Screen:

You may show notifications on the lock screen On or Off.

·Alarms, Reminders, Incoming VOIP calls:

You may show alarms, reminders and incoming VOIP calls

on the lock screen On or Off.

#### Configuring Apps & Features

1. Go to Settings>Systems> Apps & features.

← Settings			-	0	×
🔯 SYSTEM		Find a setting			P
Display	Apps & features				
Notifications & actions	Manage optional features				
Apps & features	Search, sort, and filter by drive. If you would like to uninstall or move an app, select it from the list.				
Multitasking	Type an app name				
Tablet mode	15 Sort by size V				
Battery saver	🛃 Show apps on all drives 🗸				
Power & sleep	Intel(R) Processor Graphics 74.2 MB Intel Corporation 4/8/2016				
Storage Offine maps	NXPProximityInstaller 9.52 MB NXP Semiconductors 4/8/2016				
Default apps	Currectel USB Drivers For UC208UC15&EC20 8.81 MB Currectel Wireless, Co.Ltd. 4/8/2016				
About	u-center v0.12     Unavailable     u-blox     4/13/2016				
	Windows Driver Package - u-blox AG (ublox Unavailable u-blox AG 4/13/2016				
# P 🛛 🖸		^	B 🖂	10.41	AM 2016

2. You may view the amount of the space used by each app.

#### Configuring Power & Sleep

#### 1. Go to Settings>Systems.

← Settings	– a ×
🛞 SYSTEM	Find a setting
Display	Screen
Notifications & actions	On battery power, turn off after
Apps & features	4 minutes V
Multitasking	When plugged in, turn off after
Tablet mode	Never V
Battery saver	Sleep
Power & sleep	On battery power, PC goes to sleep after
Storage	4 minutes V
Offline maps	When plugged in, PC goes to sleep after
Default apps	Never 🗸
About	Wi-Fi
	Cn battery power, stay connected to Wi-Fi while asleep
	When plugged in, stay connected to Wi-Fi while asleep
= P 🛛 🔼	^ ⊫ *i 18 == 420 PM

- 2. Select Power & Sleep.
- 3. Set up the idle time before the device goes to sleep mode.

#### 3.1.2 Device

### 1. Go to **Settings>Devices.**

Adding Printers & Scanners

<- Settings			 ٥	×
DEVICES		Find a setting		P
Printers & scanners	Add printers & scanners			
Connected devices	<ul> <li>Add a printer or scanner</li> </ul>			
Bluetooth	+ Has a branch of straining			
Mouse & touchpad	Printers			
Typing	Microsoft Print to PDF			
AutoPlay				
	Microsoft XPS Document Writer			
	Download over metered connections			
	To help prevent extra charges, keep this off so device software (drivers, info, and apps) for new devices won't download while you're on metered internet connections.			
	Off			
	Related settings			
	Devices and printers			
	Device manager			

- 2. Select Printers & Scanners.
- 3. You may add a printer or scanner.

#### Pairing Bluetooth devices

#### 1. Go to Settings>Devices.

← Settings		- ø ×
DEVICES		Find a setting ,0
Printers & scanners	Manage Bluetooth devices	
Connected devices	Bluetooth	
Bluetooth	Your PC is searching for and can be discovered by Bluetooth	
Mouse & touchpad	devices.	
Typing	Bluetooth Notebook Mause 5000 Paired	
AutoPlay	AUGUSLIANG-NB Ready to pair	
	Ready to pair	
	AA-LATI-2154 Ready to pair	
	Ready to pair	
	PC000758 Ready to pair	
	Unknown Ready to pair	
	Related settings	
ii 👂 🖬 🧕		∧ 🛊 🗯 🐜 🛤 📟 500 PM 621/2016

- 2. Select **Bluetooth** to turn on the Bluetooth.
- 3. Search and select the device you would like to pair with.

#### 3.1.3 Network & Internet

#### Connecting to a WiFi AP

1. Go to Settings>Network & Internet>Wi-Fi

÷	Settings		-	σ	×
۲	NETWORK & INTERNET		Find a setting		P
WI-FI		Wi-Fi			
Airpla	ne mode	On On			
Cellula Data u		AAEON-Wireless			
	nage • hotspot	503#2#			
VPN		AAEON-Wireless-PEAP			
Dial-u	p	AAEONWireless25			
Ethern Proxy	et	AAEON-Wireless2F-1			
Praxy		ONVX_ORION_SERVER			
		RMD_SW_24G			
		TP-LINK			
		twbisonic01			
Ŧ	۵ 🖸	3400	^ m % B	S <sup>2</sup> 621     621	1 PM /2016

- 3. Select one access point from the list.
- 4. Type in your password and tap Connect

#### Configuring Airplane Mode

1. Go to Setting>Network>Airplane mode.

Settings     NETWORK & INTERNET		- Find a setting	<b>о х</b>
Ni Al Vegauer mode Alakar Data saage Alakabe haquad Alakap Datage Datage	Airplane mode Ten this on to stop all winetex communication Ten this on to stop all winetex communication Winet Contair Winet Contair Contai		
# P 🛛 🖸		^ D % Ø I	E35 AM 672/2016

2. You may turn it on to stop all wireless communication.

# 1. Go to Settings>Network>VPN

-	Settings		-	٥	×
		Add a VPN connection			
		■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■			
		Connection name			
		Server name or address			
		Save Cancel			
					AM
	ዖ 🖽 🖸	へ 🗩 🏗 尾		840 6/22/	2016


2. You may add a VPN connection. Input VPN provider,

Connection name, Server name or address and tap Save.

# 3.1.4 Personalization Settings

# Background/Colors/Lock screen

1. Go to Settings>Personalization>Background.

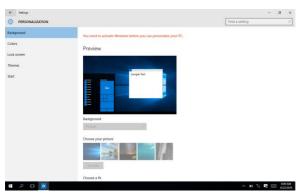


2. You may personalize the background color and / or

lock screen.

## 3.1.5 Accounts Settings

## 1. Go to Settings>Accounts.

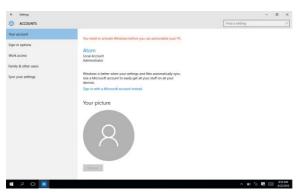

2. You may manage user accounts and setup the

properties for each account here.

# Configuring Date & Time

1. Go to Settings>Time & Language.

€- Settings		-	o ×
TIME & LANGUAGE		Find a setting	P
Date & time	Date and time		
Region & language	12:42 PM, Wednesday, June 22, 2016		
Speech	Set time automatically		
	On		
	Change date and time		
	Dunge		
	Time zone		
	(UTC+08:00) Talpei 💛		
	Off.		
	Formats		
	Formats First day of week: Sunday		
	First day of week: Sunday		
	First day of wretic Sunday Short date: 6/22/2016		
	First day of week: Sunday Short dake: 6(22/2016 Long date: Wednesday, June 22, 2016		

2. You may change the device's date and time, time zone

and time format here.

# Configuring Accessibility

#### 1. Go to Settings>Ease of Access.

4	Settings			-	٥	×
٢	EASE OF ACCESS		Find a setting			P
Narra	tor	Hear text and controls on the screen				
Close Keybi Mous	contrast d captions vard	Narrator a source randor that made all the elements on sources. Narrator Tom Tom Tom Tom Tom Tom Tom Tom Tom Tom				
-	e 🛛	Sounds you hear		- III - III	124	7 PM
1.1				U	6(22)	2016

2. You may setup system accessibility, including narrator,

magnifier, high contrast, closed captions, keyboard, mouse and other options.

## 3.1.8 Privacy Settings

# Changing Privacy Options


## 1. Go to Settings>Privacy.

← Settings				a	×
← Settings			-		~
PRIVACY		Find a setting			P
General	Change privacy options				
Location Camera	Let apps use my advertising ID for experiences across apps (turning this off will reset your ID)				
Microphone	Turn on SmartScreen Filter to check web content (URLs) that Windows Store apps use				
Speech, inking, & typing	On On				
Account info	Send Microsoft info about how I write to help us improve typing and writing in the future				
Contacts	On On				
Calendar	Let websites provide locally relevant content by accessing my language list				
Messaging	On On				
Radios	Manage my Microsoft advertising and other personalization info				
Other devices	Privacy Statement				
Feedback & diagnostics					
Background apps					
# P 🗈 🔽		^ <b>D</b> %		9:20 # 6/22/2	64 016

2. You may change the privacy settings here.

## Windows Updates

1. Go to Settings>Update & Security.

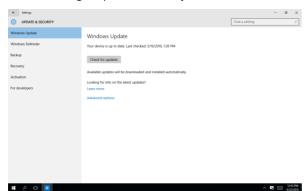

2. You may manage windows update, windows defender,

backup, recovery and activation here.

# Chapter 4

Optional Accessories

## 4.1 Barcode Scanner

As the name implies, the barcode scanner grants users of the RTC the ability to scan barcodes for a wide variety of purposes. Please note that the scanner does not ship with any software or SDKs.

You can perform the following test to check if the scanner is working:

- 1. Open notepad
- 2. Scan any barcodes
- 3. If the scanner is working, the code will be scanned and reflected on the notepad.

For detailed specifications and operating instructions, please refer to the bar code scanner manual in the driver disk provided.

You can scan the barcode below to change the USB interface type.






@MENU\_OPTO@ZZ@X.Z @C01@ZZ@OTPO\_UNEM@

Description	Code
Change to Maintenance mode	X.Z
Defaults USB VCP	C01

# 4.2 Docking Station

The docking station provides users with a stable and convenient platform when using their RTC. With more expansion ports, the RTC can be doubled as desktop computer when keyboard and mouse attached.



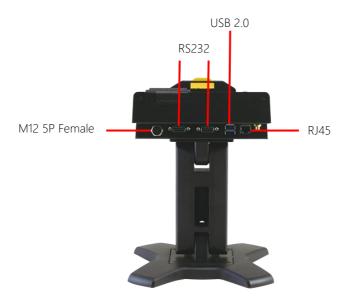

# 4.2.1 Specifications

Connectors & LED indicators		
• I/O	USB 2.0 x 2	
	USB 3.0 Dual Port x 1	
	RJ45 jack for 10/100 Base-TX	
	Ethernet x 1	
	RS-232 x 2	
	External antenna for GPS and WWN x 2 $$	
DC Input	M12 5P Female (DC 9V to 36V)	
LED Indicator	Orange: DC in w/o Tablet	
	Blue: DC in w/ Tablet	

Mechanical			
<ul> <li>Color</li> </ul>	Black		
Construction	PC		
<ul> <li>Dimensions(W x H</li> </ul>	<b>xD)</b> 261 x 165 x 75 mm (10.28 x 6.5 x 2.96")		
<ul> <li>Gross Weight</li> </ul>	2.92 kg (6.44 lb)		

# Environmental

•	Operating Temperature	0°C ~ 40°C (32 ~ 104°F)
•	Storage Temperature	-10°C ~ 50°C (14 ~122°F)
•	ESD	Air +/- 8KV, Contact +/- 4KV
•	EMI/ Safety	CE/ FCC Class B/ UL


# Power Supply

AC/DC Adapter

AC Power Input: 100 ~ 240 V, 47 ~ 63 Hz, 90 W output: 19 V, 4.74 A


# 4.3 Install Camera Metro UI


1. Change system time to 2016/05/01 as the pictures shown below:

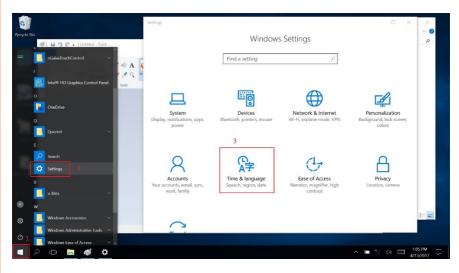

	← Settings	-	
	Home	Date and time	-
	Find a setting 🔎	1:07 PM, Thursday, April 13, 2017	
Intel® HD Graphics C	Time & language	Set time automatically	
	👼 Date & time 1	Set time zone automatically	
FouchControl	₄≇ Region & language	• Off	
27	요 Speech	Change date and time	
Change date and time		Change Z	
Change date and time		Time zone UTC-08:00) Pacific Time (US & Canada)	
Ca May V 1 V 2016 V	3	Adjust for daylight saving time automatically On	
Time           1         06         PM		Formats	
		First day of week: Sunday	
	Change Cancel		
= 🔎 🗆 📄 🏈 🗳		へ 😁 🎲 内市 1:07 PM 4/13/2017	$\Box$

2. Enable Developer mode as the pictures shown below:

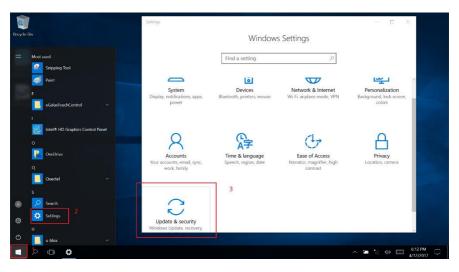

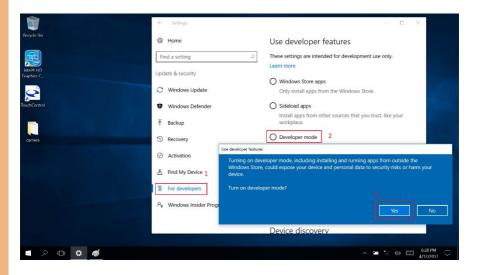

3. Right-click **Add-AppDevPackage** file and select Run with PowerShell as the pictures shown below:

Paste Copy Soler A Roster Clipboard Intege	← → ← ↑ > CameraManua(Controls_1.0.1.0_lost ∨ € → Cuick access Date modified	5 Search CameraManualControls P Type Size
	Control and a sector of the sector of	PM File folder PM File folder PM Windows PowerShell PM APPXGUNDLE Hile PM APPXSVM File 1.0
	¢ 6 ilems 1 ilem selected 60.4 K3	2

4. Press A , then press Enter to excute.

23 Windows PowerShell	- 🗆 ×
Execution Policy Change The execution policy helps protect you from scripts that you do not trust. Chan you to the security risks described in the about_Execution_Policies help topic http://go.microsoft.com/fulink/7LinkTD=135120, Do you want to change the (Y) yes [A] yes to A] [k] ko [L] No to Ail [s] Suspend [7] Help (default	nging the execution policy might expose at ion policy? is "N"):
Answer A then press enter	
	∧ 🛥 🐂 du 📖 1:07 PM
	5/1/2016

5. Success install and restart OS as below picture:



# Appendix A

Statements

#### A.1 Statements

#### Declarations and Safety Statements

#### Federal Communications Commission Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference (2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

The highest SAR value for the device as reported to the FCC is 1.01 W/kg when placed next to the body.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <a href="http://www.fcc.gov/oet/ea/fccid">www.fcc.gov/oet/ea/fccid</a> on the FCC ID: OHBRTC1200WBGH

Federal Communication Commission (FCC) Radiation Exposure Statement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance.

## A.2 Canadian Notice

#### IC Regulations

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This Category II radio communication device complies with Industry Canada Standard RSS-310.

Ce dispositif de radio communication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

#### IC Radiation Exposure Statement

This EUT is compliant with SAR for general population/uncontrolled exposure limits in IC RSS-102 and has been tested in accordance with the measurement methods and procedures specified in IEEE 1528. This equipment should be installed and operated with minimum distance 0 cm between the radiator and your body.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

The County Code Selection feature is disabled for product marketed in the U.S. and Canada.

For products available in the U.S./Canada markets, only channels 1-11 can be operated. The selection of other channels is not possible.

## A.3 Safety Caution

#### Important Safety Instructions

#### Power Safety Requirement

Products with electrical current ratings up to 3A and weighs more than 1 Kg must use approved power cords greater than or equal to: VCTF, 3G or 0.75mm<sup>2</sup>. Basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose
  of batteries in a fire. They may explode. Check with local codes for possible
  special disposal instructions.

#### Instructions importantes de sécurité.

## Exigences de sécurité concernant l'alimentation.

Les produits dont le courant électrique monte jusqu'à 3A et pesant plus de 1Kgs doivent utiliser un cordon d'alimentation approuvé égal ou supérieur à VCTF, 3G ou 0.75mm<sup>2</sup> Des mesures de précaution de base doivent toujours être suivies afin de réduire les risques d'incendie, de choc électrique et de blessures aux personnes, incluant :

- Ne pas utiliser ce produit près de l'eau, par exemple dans une baignoire, une cuvette, un évier, une machine à laver, un sous-sol humide ou une piscine.
- Eviter d'utiliser un téléphone (autre que sans fil) pendant un orage électrique ? il y a un risque de choc électrique à distance lié à la foudre.
- Ne pas utiliser le téléphone pour alerter lors d'une fuite de gaz si vous êtes dans le

voisinage de la fuite

Utiliser seulement le cordon d'alimentation et la batterie indiqués dans le manuel.
 Ne pas jeter les batteries dans le feu. Elles pourraient exploser. Vérifier les dispositions locales de recyclage.

## A.4 Battery Disposal

	-
A	There is a risk of explosion if the battery is replaced by an
0	incorrect type. Dispose of used batteries according to the
	instructions.
	Il y a un risque d'explosion si la batterie est remplacée par un
	autre type incorrect.
	Disposer de la batterie en accord avec les instructions.
	This symbol indicateds that the battery should NOT be placed
X	in municipal waste.
450	DO NOT throw the tablet with municipal waste. This product is
X	
1-a	designed for proper reuse of parts and recycling. This symbol
	indicates that the products (electrical, electronic equipment
	and mercury-containing button cell battery) should not be
	placed in municipal waste. Check local regulations for disposal
	of electronic products.
THE REAL PROPERTY AND A DECIMAL OF A DECIMAL	SAFE TEMP : The RTC-1200SK should only be used in
1	environments between -20°C (-4°F) and 50°C (122°F).

### Regulatory information / Disclaimers

Installation and use of this Wireless LAN device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution of the connecting cables and equipment other than manufacturer specified. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. Manufacturer and its

authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.

## A.5 Battery Caution

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

*Il y a un risque d'explosion si la batterie est remplacée par un autre type incorrect. Disposer de la batterie en accord avec les instructions.* 

#### Regulatory information / Disclaimers

Installation and use of this Wireless LAN device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution of the connecting cables and equipment other than manufacturer specified. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. Manufacturer and its authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.

# A.6 Adapter Caution

This RTC is for use with model NO. FSP065-REBN2 (AAEON Part number: 1255300658) Ce modèle RTC est à utilizer avec le modèle n° FSP065-REBN2. (AAEON Référence: 1255300658)

## A.7 FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

#### IMPORTANT NOTE:

## Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.