

3I370DW

**Intel® Coffee Lake-S Core™ I processor + Intel Q370,
DDR4 LAN / DP / HDMI / USB / PCIe / M.2**

All in One

**9 / 8th gen. Intel Coffee Lake-S Core™ I CPU
HDMI, DP, eDP, PCIe, PCIe mini card, M.2,
Multi-LAN, COM, Audio, SATA, USB
Wide Range DC-input**

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS**

NO. 3I370DW

Release date: May 26th. 2020

Contents

3I370DW	
Warning!.....	1
Hardware Notice Guide	2
CHAPTER 1 GENERAL INFORMATION	4
1-1 MAJOR FEATURE.....	5
1-2 SPECIFICATION	6
1-3 INSTALLING THE CPU / NORTH BRIDGE CHIP HEATSINK. (SOCKET VERSION)	7
1-4 INSTALLING THE SO-DIMM	8
1-4-1 REMOVING THE SO-DIMM	10
1-5 INSTALLING THE MINI PCI-e CARD (FULL SIZE)	11
1-6 DIRECTIONS FOR INSTALLING THE M.2B KEY MINI CARD	12
CHAPTER 2 HARDWARE INSTALLATION	13
2-1 DIMENSION-3I370DW	13
2-2 LAYOUT-3I370DW-FUNCTION MAP-TOP	14
2-2-1 LAYOUT-3I370DW-FUNCTION MAP-BOT	15
2-3 FUNCTION MAP-3I370DW	16
2-4 CONNECTOR MAP-3I370DW-TOP	17
2-4-1 CONNECTOR MAP-3I370DW-BOT	18
2-5 DIAGRAM-3I370DW-TOP	19
2-5-1 DIAGRAM-3I370DW-BOT	20
2-6 LIST OF JUMPERS	21
2-7 JUMPER SETTING DESCRIPTION	21
2-8 JSB1: CMOS DATA CLEAR	22
2-9 JSB2: ME DATA CLEAR	23
2-10 JVL1: eDP PANEL POWER SELECT	23
CHAPTER 3 CONNECTION	24
3-1 LIST OF CONNECTORS.....	24
3-2 CBT1: CMOS BATTERY 1x2 PIN (1.25MM) WAFER	25
3-3 CA1: LINE-OUT / LINE-IN / MIC-IN 2x5 PIN (2.0MM) WAFER	26
3-4 CC1 / CC2 COM PORT1 / 2 2x5 PIN (2.0MM) WAFER	27
3-5 CCIO1 / CCIO2 / CCIO3 / CCIO4 COM PORT3 / PORT4 / PORT5 / PORT6 AND DI/DO 2x5 PIN (2.0MM) WAFER	28
3-5-1 FOR COM 3 / 4 / 5 / 6	28
3-5-2 FOR DI/DO	29
3-5-2-1 IO DEVICE: F81966 LPC DIO UNDER WINDOWS	30
3-6 CDH1 DISPLAY PORT AND HDMI CONNECTOR	32
3-7 CFP1 FRONT PANEL CONNECTOR 2x5 PIN (2.0MM) WAFER	33
3-8 LAN	34
3-9 CLPC1: FOR LPC SIGNAL 2x5 PIN WAFER (2.0MM)	35

3-10 CO1: I2C BUS 4 PIN (1.25MM) WAFER	35
3-11 CPI1: MOTHERBOARD DC POWER INPUT (ATX 2x3 PIN 2.54MM WAFER)	36
3-12 CPO1: +12V / +5V DC VOLTAGE OUTPUT WAFER CONNECTOR (BLACK)	36
3-13 CPS1: EXTERNAL POWER-ON SYNC CONTROL	37
3-14 USB 3.0 AND USB 2.0	38
3-15 EDP1: eDP INTERFACE (2x10 pin 1.25MM WAFER)	39
3-16 SATA2 / 3: SATA PORT 1x7 PIN CONNECTOR	40
3-17 SIM1: NANO PUSH-PUSH SIM SOCKET	40
3-18 SODIMM1 / 2 SOCKET	41
3-19 MPCE1 PCI EXPRESS MINI CARD	42
3-20 NGFF1: B KEY SIZE	43
3-21 CONNECTOR WAFER OF COMPATIBLE BRAND AND PART NUMBER LIST	44
CHAPTER 4 INTRODUCTION OF BIOS	45
4-1 ENTER SETUP	45
4-2 BIOS MENU SCREEN & FUNCTION KEYS	46
4-3 GENERAL HELP	47
4-4 MENU BARS	47
4-5 MAIN	48
4-6 ADVANCED	49
4-6-1 PCH-FW CONFIGURATION	50
4-6-2 TRUSTED COMPUTING	50
4-6-3 F81966 SUPER IO CONFIGURATION	51
4-6-3-1 SERIAL PORT 1 CONFIGURATION	52
4-6-3-2 SERIAL PORT 2 CONFIGURATION	54
4-6-3-3 SERIAL PORT 3 CONFIGURATION	56
4-6-3-4 SERIAL PORT 4 CONFIGURATION	58
4-6-3-5 POWER FAILURE	60
4-6-4 HARDWARE MONITOR	61
4-6-5 INTEL TXT INFORMATION	62
4-6-6 USB CONFIGURATION	63
4-6-7 NETWORK STACK CONFIGURATION	64
4-6-8 NVMe CONFIGURATION	64
4-7 CHIPSET	65
4-7-1 SYSTEM AGENT (SA) CONFIGURATION	66
4-7-1-1 GRAPHICS CONFIGURATION	67
4-7-1-2 PEG PORT CONFIGURATION	68
4-7-2 PCH-IO CONFIGURATION	69
4-7-2-1 PCI EXPRESS CONFIGURATION	70
4-7-2-2 SATA AND RST CONFIGURATION	71
4-8 SECURITY	72
4-9 BOOT	73

4-10 SAVE & EXIT	74
4-11 HOW TO UPDATE INSYDE BIOS	75
APPENDIX B: RESOLUTION LIST	76

Copyright

This manual is copyrighted and all rights are reserved. It does not allow any non authorization in copied, photocopied, translated or reproduced to any electronic or machine readable form in whole or in part without prior written consent from the manufacturer.

In general, the manufacturer will not be liable for any direct, indirect, special, incidental or consequential damages arising from the use of inability to use the product or documentation, even if advised of the possibility of such damages.

The manufacturer keeps the rights in the subject to change the contents of this manual without prior notices in order to improve the function design, performance, quality, and reliability. The author assumes no responsibility for any errors or omissions, which may appear in this manual, nor does it make a commitment to update the information contained herein.

Trademarks

Intel is a registered trademark of Intel Corporation.

AMI is a registered trademark of AMI

All other trademarks, products and or product's name mentioned here are for identification purposes only, and may be trademarks and/or registered trademarks of their respective companies or owners.

© Copyright 2020

All Rights Reserved.

User Manual edition 0.1, May 26th. 2020

Warning !

1. Battery
Batteries on board are consumables.
The life time of them are not guaranteed.
2. Fanless solution with HDD
The specification & limitation of HDD should be considered carefully when the fanless solution is implemented.
3. We will not give further notification in case of changes of product information and manual.
4. SATA interface does not support Hot SWAP function.
5. There might be a 20% inaccuracy of WDT at room temperature.
6. Please make sure the voltage specification meets the requirement of equipment before plugging in.
7. There are two types of SSD, commercial grade and industrial grade, which provide different read / write speed performance, operation temperature and life cycle. Please contact sales for further information before making orders.
8. Caution! Please notice that the heat dissipation problem could cause the MB system unstable. Please deal with heat dissipation properly when buying single MB set.
9. Please avoid approaching the heat sink area to prevent users from being scalded with fanless products.
10. If users repair, modify or destroy any component of product unauthorizedly, We will not take responsibility or provide warranty anymore.
11. DO NOT apply any other material which may reduce cooling performance onto the thermal pad.
12. It is important to install a system fan toward the CPU to decrease the possibility of overheating / system hanging up issues, or customer is suggested to have a fine cooling system to dissipate heat from CPU.

* Hardware Notice Guide


1. Before linking power supply with the motherboard, please attach DC-in adapter to the motherboard first. Then plug the adapter power to AC outlet.
Always shut down the computer normally before you move the system unit or remove the power supply from the motherboard. Please unplug the DC-in adapter first and then unplug the adapter from the AC outlet.
Please refer photo 1 as standard procedures.
2. In case of using DIRECT DC-in (without adapter), please check the allowed range for voltage & current of cables. And make sure you have the safety protection for outer issues such as short / broken circuit, overvoltage, surge, lightning strike.
3. In case of using DC-out to an external device, please make sure its voltage and current comply with the motherboard specification.
4. The total power consumption is determined by various conditions (CPU / motherboard type, device, application, etc.). Be cautious to the power cable you use for the system, one with UL standard will be highly recommended.
5. It's highly possible to burn out the CPU if you change/ modify any parts of the CPU cooler.
6. Please wear wrist strap and attach it to a metal part of the system unit before handling a component. You can also touch an object which is ground connected or attached with metal surface if you don't have wrist strap.
7. Please be careful to handle & don't touch the sharp-pointed components on the bottom of PCBA.
8. Remove or change any components from the motherboard will VOID the warranty of the motherboard.
9. Before you install / remove any components or even make any jumper setting on the motherboard, please make sure to disconnect the power supply first.
(follow the aforementioned instruction guide)
10. "POWERON after PWR-Fail" function must be used carefully as below:
When the DC power adaptor runs out of power, unplug it from the DC current;
Once power returns, plug it back after 5 seconds.
If there is a power outage, unplug it from the AC current, once power returns, plug it back after 30 seconds. Otherwise it will cause system locked or made a severe damage.

Remark 1:


Always insert / unplug the DC-in horizontally & directly to / from the motherboard. DO NOT twist, it is designed to fit snugly. Moreover, erratic pull / push action might cause an unpredictable damage to the component & system unit.

Photo 1

Insert

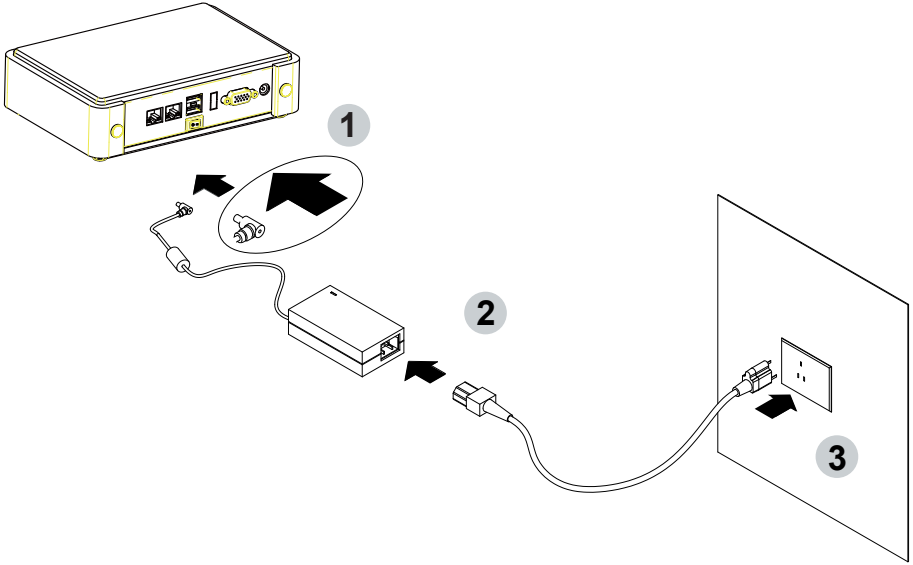

Unplug

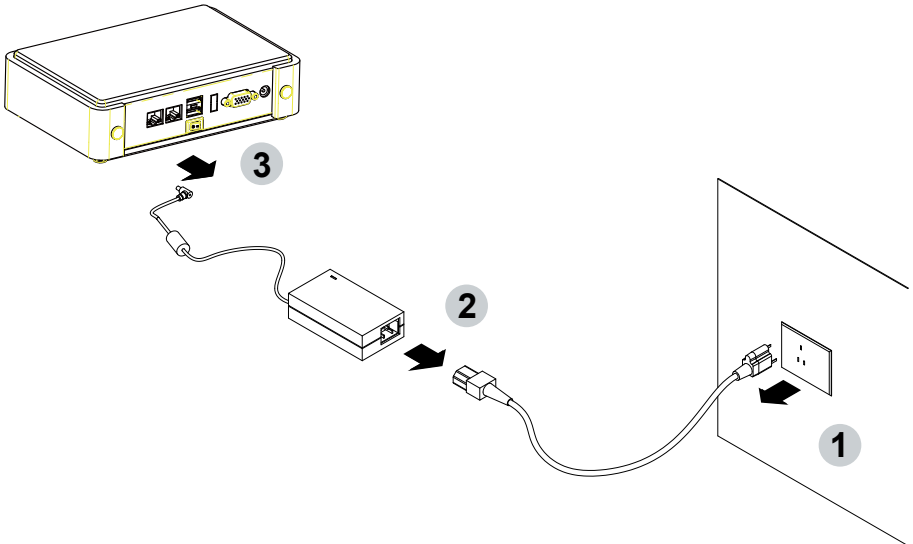

Chapter-1

General Information

The 3I370DW with latest Intel 8th Gen Coffee Lake-S Core i CPU and Pentium® / Celeron® Processor All-In-One board in the LGA1151 package with Intel® Q370 Express chipset. The 3I370DW supports high-speed data transfer interfaces such as PCIe3.0, USB 3.1, and SATA 6 Gb/s (SATA III), with dual-channel DDR4 memory up to 32GB in two SO-DIMM slots, as well as graphics interface for HDMI and DisplayPort displays.

High-performance and power-efficient communication platform, the embedded motherboard of 3I370DW is specially designed for IoT, industrial, digital signage, medial, POS, retail and factory automation applications. 3I370DW with a wide variety of expansion options including PCIe(x16), PCIe(x8), PCIe(x4), PCIe(x1), or 2 PCIe(x8), 2 PCIe(x4), 2 PCIe(x1), selectable by raiser cards. The platform comes with Intel Gigabit Ethernet controllers and supports Wake-On LAN, vPro with TPM 2.0 and the PXE function in BIOS for Intel LAN chipset, it is perfect control board for networking devices.

The 3I370DW SBC equipped with a variety of interfaces: 5 x LAN, 4 x RS232 / RS422 / 485 serial ports, 4 x USB3.1, 4 x USB2.0, DP, HDMI & eDP) and expansion slots such as PCIe / mPCIe / M.2 slots for I/O modules (Digital I/O, WiFi, 3G / 4G, LoRA, Bluetooth) Connection options, is ideal solution to integrate with diagnostic test tools and control equipment, with excellent flexibility to meet any needs.

In addition to industrial grade components, TWISTER 3I370DW & TINO 3I370DW are with excellent thermal dispatched design, enable to operate smoothly with automation, machine vision, industrial communication, military and intelligent transportation applications in various harsh environments such as mountains, cold polar climate, mines, oil fields and deserts.

1-1 Major Feature

1. The Desktop Coffee Lake-Platform processor includes Integrated Display Engine, GPU and Integrated Memory Controller. The processor is designed be offered in a LGA1151 package.
2. Intel Q370 Chipset Family Platform Controller Hub (PCH)
3. Supports Two Channels of DDR4 SO-DIMM SDRAM, Max. 32GB, data transfer rates of 2400MT/s and 2666 MT/s
4. Intel Desktop Coffee Lake-Platform Processor Integrated Graphics.
GEN 9 architecture supports up to 72 Execution Units (EUs), depending on the processor SKU.
5. Integrated Gigabit LAN Controller with Intel I219LM Gigabit Ethernet PHY supports vPro. total support 5 x 10 / 100 / 1000 Mbps Intel LAN ports
6. Support DP, HDMI, eDP1.4 2 lanes on Board.
7. Support 4 x RS232 auto switch to RS485 / RS422 by BIOS,
(up to 6 series ports for option)
8. 4 x type A USB3.1 external and 4 x USB 2.0 internal
9. ALC886 HD Audio Specification 1.0 Two channels sound.
10. Two SATA ports 3.0 Data transfer rates up to 6.0 Gb/s (600 MB/s)
11. Support extended 1 x Mini PCIe card for PCIe x 1, mSATA and USB3.0 interface
12. One M.2 B-Key 3042 for PCIe x 2, mSATA & USB3.0 device. Support PCIe NVMe storage. There are 1 x SIM Card Socket for 3G / 4G LTE module.
13. Hardware digital Input & Output, 8 x DI / 8 x DO, (up to 16DI / 16DO for option),
Hardware Watch Dog Timer, 0~255 sec programmable
14. 1 PCIe x 16 Golden Finger supports 1 PCIe x 1, 4, 8, 16 with Riser Cards
15. Support TPM 2.0

1-2 Specification

1. **CPU:** Desktop Coffee Lake Platform processor. The processor is designed be offered in a LGA1151 package.
2. **Memory:** Two SO-DIMM slots for DDR4 SDRAM, Max. 32GB, data transfer rates of 2400MT/s and 2666 MT/s
3. **Graphics:** Intel 9th generation (Gen 9) LP graphics and media encode / decode engine supports OpenGL x 4.5, OpenCL x 2.1, Direct3D x 2015, Direct3D 11.2, Direct2D eDP 1.4 2 Lanes up to 1920 x 1080, DP 1.2 4096 x 2160, HDMI 1.4 up to 3840 x 2160
4. **SATA:** Integrated Serial ATA Host Controller Up to 2 SATA port, SATA Gen3 Data transfer rates up to 6.0 Gb/s (600 MB/s).
5. **LAN:** LAN1 Intel I219LM Gigabit Ethernet PHY. LAN2~5 Intel I210-IT LAN chipset or Intel I211-AT LAN chipset (Option) with 10 / 100 / 1000 Mbps.
6. **I/O Chip:** Chipsets for 4 ports RS232 / 422 / 485 (6 ports for option)
7. **USB:** 4 type A USB 3.1 connector onboard and 4 USB 2.0 (internal)
8. **Sound:** Support line in, line out and MIC in
9. **eDP:** Support eDP 1.4 2 Lanes up to 1920 x 1080
10. **WDT/DIO:** Hardware digital Input & Output, 8 x DI / 8 x DO (16DI / 16DO for option) / Hardware Watch Dog Timer, 0~255 sec programmable
11. **Expansion interface:** one full-size PCIe Mini card for PCIe x 1, mSATA and USB3.0 interface, 1 M.2 B-key for PCIe x 2, mSATA & USB 3.0 devices with 1 SIM socket.
12. **Golden Finger:** PCIe x 16 Golden Finger supports 1 PCIe x 1, 4, 8,16 with Riser Cards
13. **TPM:** Infineon SLB 9665 TT 2.0 Trusted Platform Module
14. **BIOS:** AMI UEFI BIOS
15. **Dimension:** 130 x 155 mm
16. **Power:** DC IN +12V~36V

1-3 Installing the CPU / North Bridge Chip Heatsink. (Socket Version)

1. Put the "CPU Under Bracket" with the CPU location at the back side of motherboard



2. Open of CPU pin anti-crash cover



3. Install the CPU




4. Screw the CPU mounting bracket via four M2.5*4 screws



5. Apply thermal grease to the top of the CPU



6. Insert the CPU Heat Sink above the CPU and tighten it with the diagonal screws.

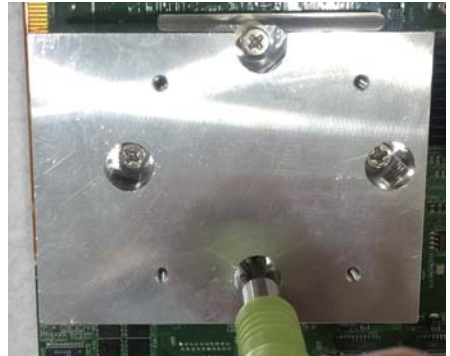


1-4 Installing the SO-DIMM

1. Align the SO-DIMM with the connector at a 45 degree angle.




2. Press the SO-DIMM into the connector until you hear a click.

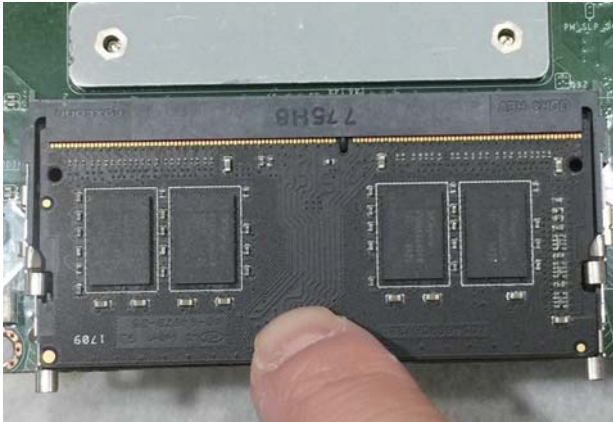


Notices:

1. The connectors are designed to ensure the correct insertion. If you feel resistance, check the connectors & golden finger direction, and realign the card.

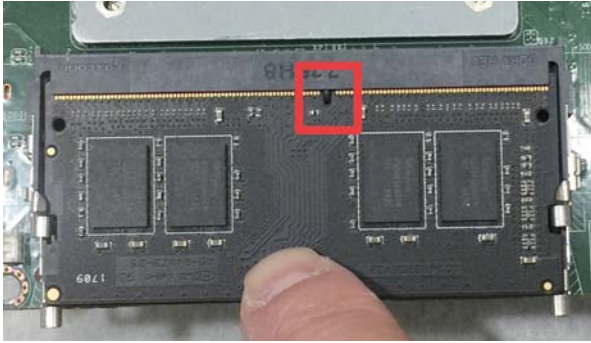


2. Make sure the retaining clips (on two sides of the slot) lock onto the notches of the card firmly.

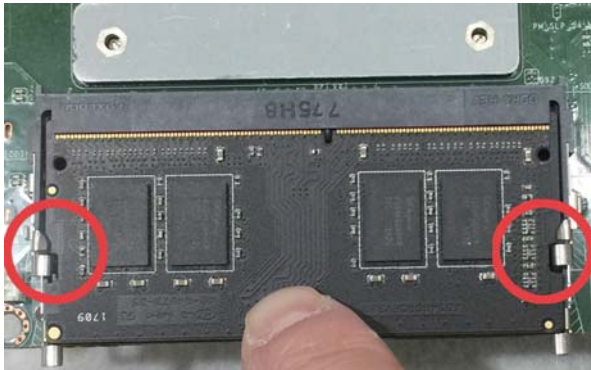

1-4-1 Removing the SO-DIMM

1. Release the SO-DIMM by pulling outward the two retaining clips and the SO-DIMM pops up slightly.

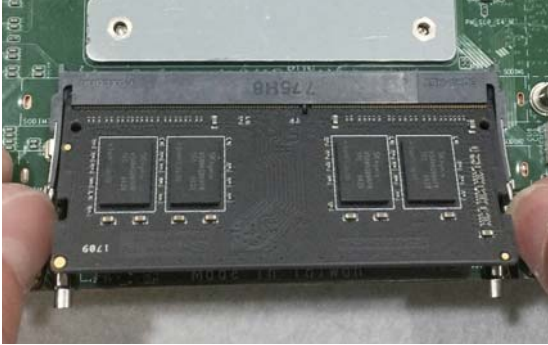

2. Lift the SO-DIMM out of its connector carefully.




1-5 Installing the Mini PCI-e Card (Full Size)

1. Unscrew the screw on the board



2. Plug in the Mini Card in a 45 angle

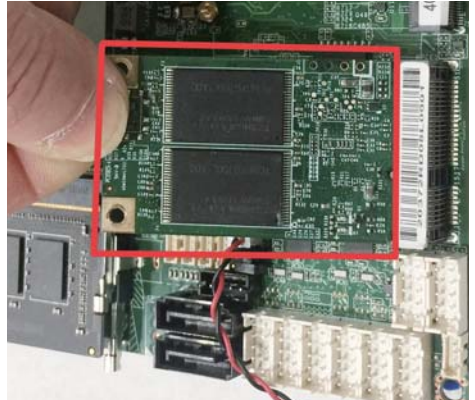


3. Gently push down the Mini Card and screw the screw back.



1-6 Directions for installing the M.2B Key Mini Card

1. Unscrew the screw on the board

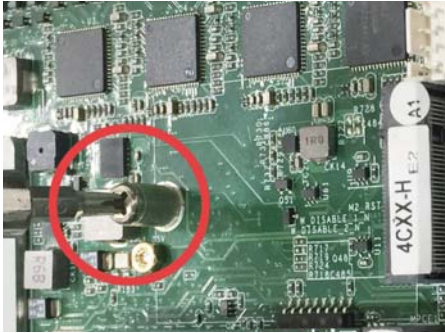

2. Plug in the Mini Card in a 45 angle




3. Gently push down the Mini Card and screw the screw back.




Chapter-2

2-1 Dimension-3I370DW

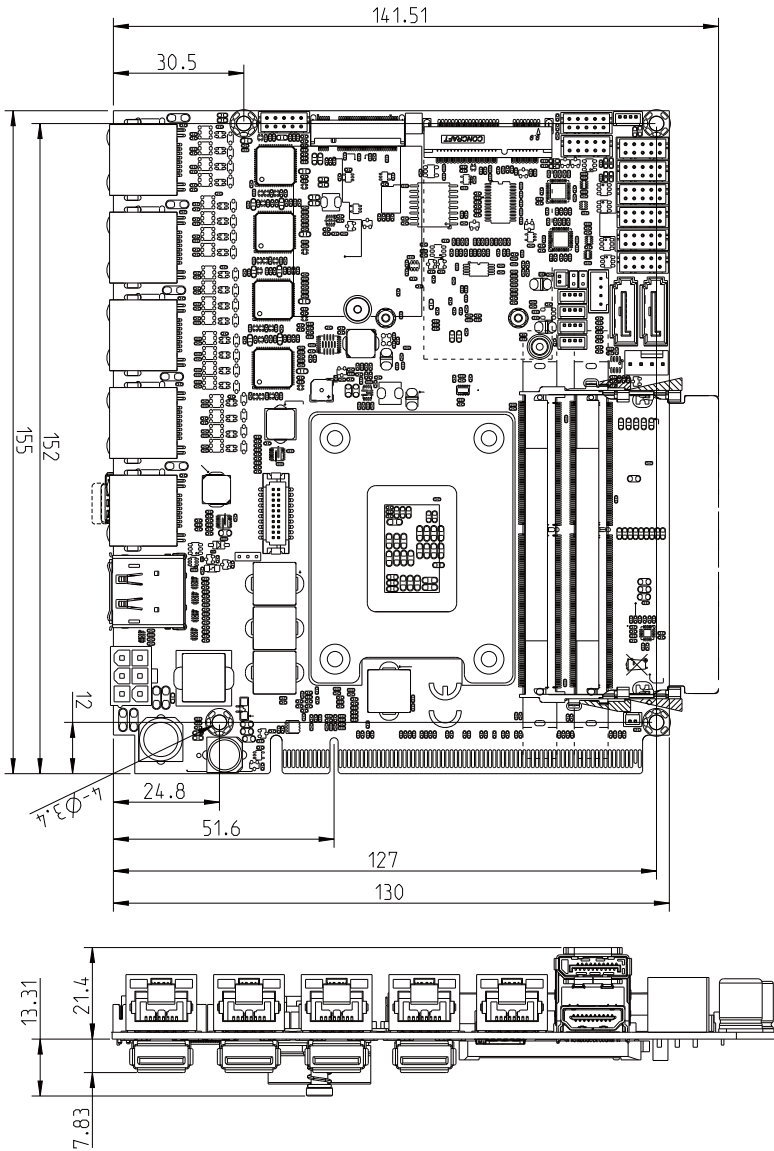


2-2 Layout-3I170DW-Function Map

TOP

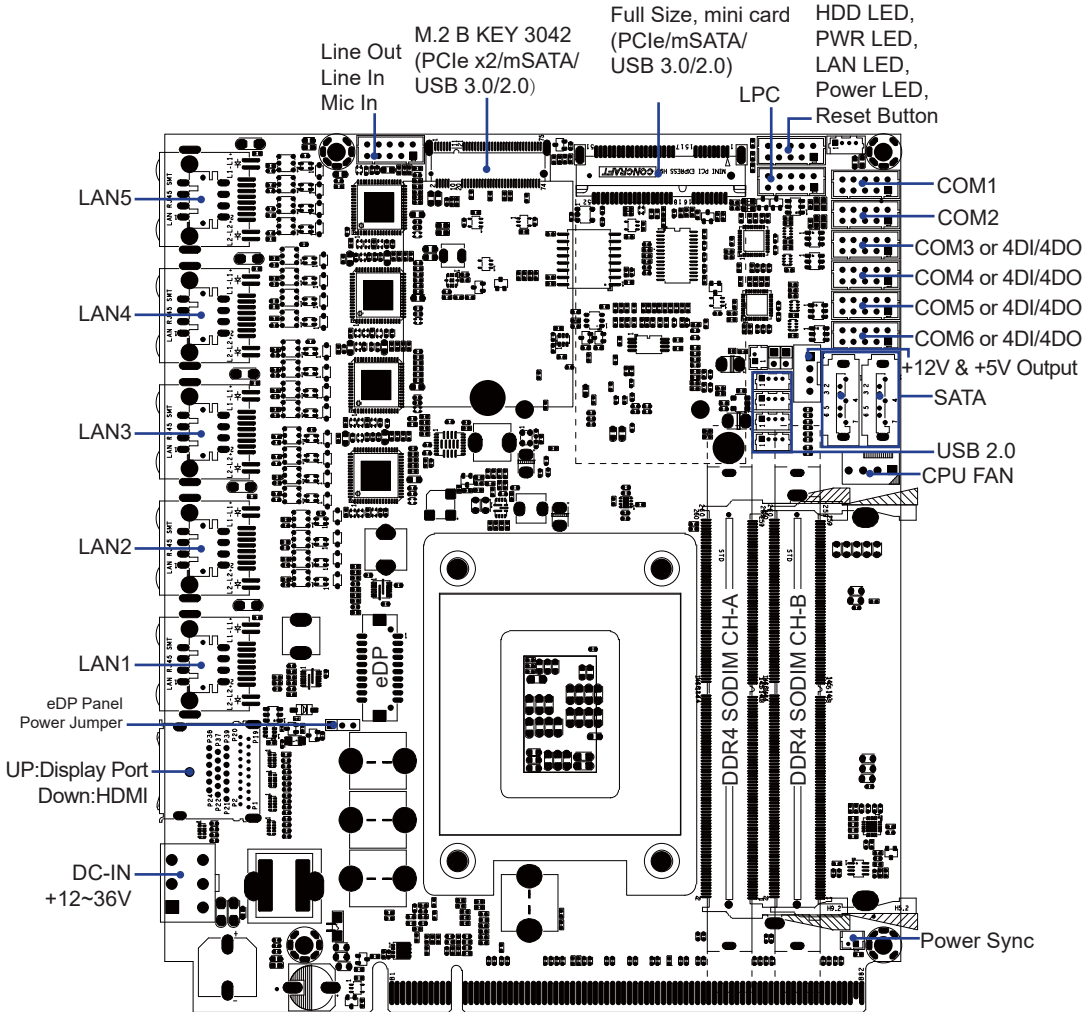


2-2-1 Layout-3I170DW-Function Map

BOT

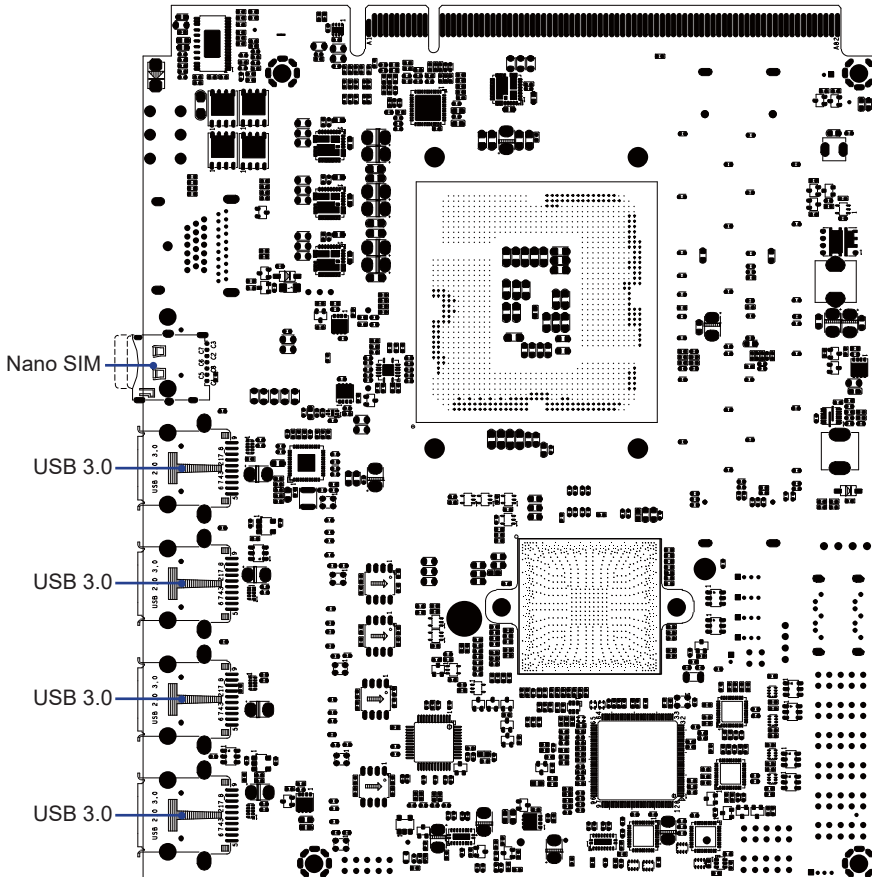


2-3 Function Map-3I370DW

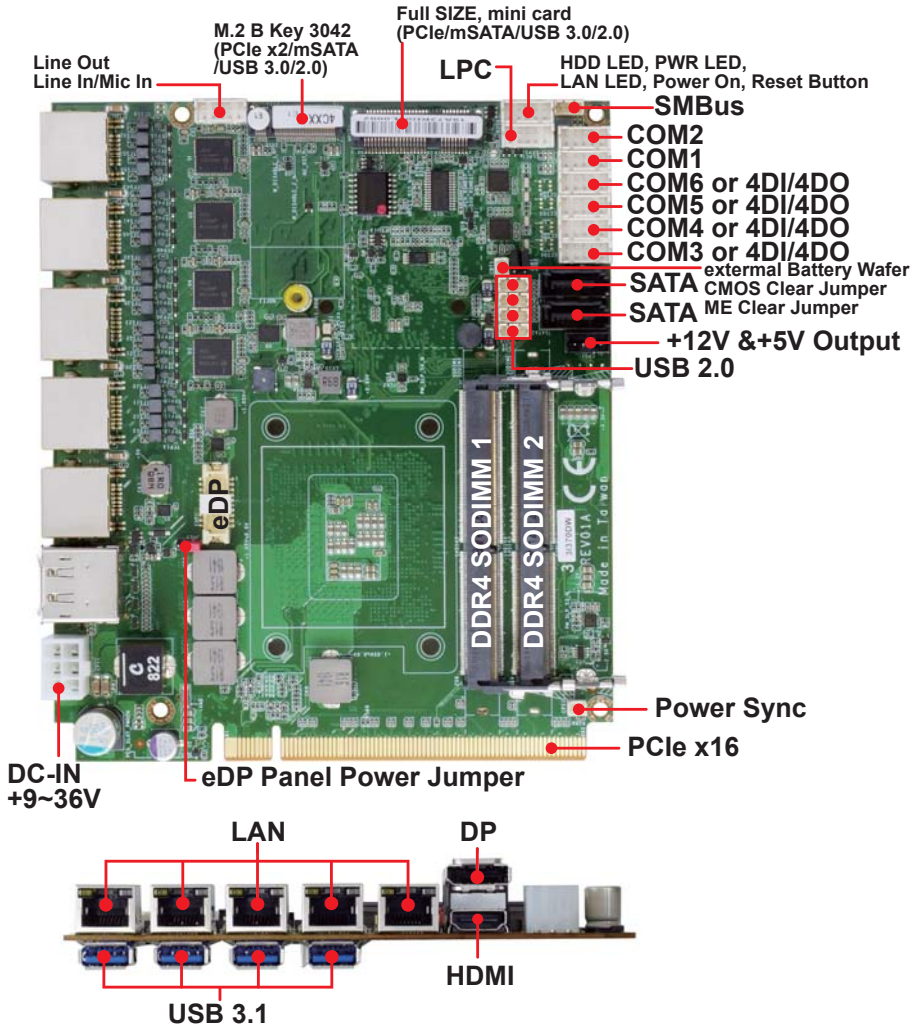


2-4 Connector MAP-3I370DW

TOP

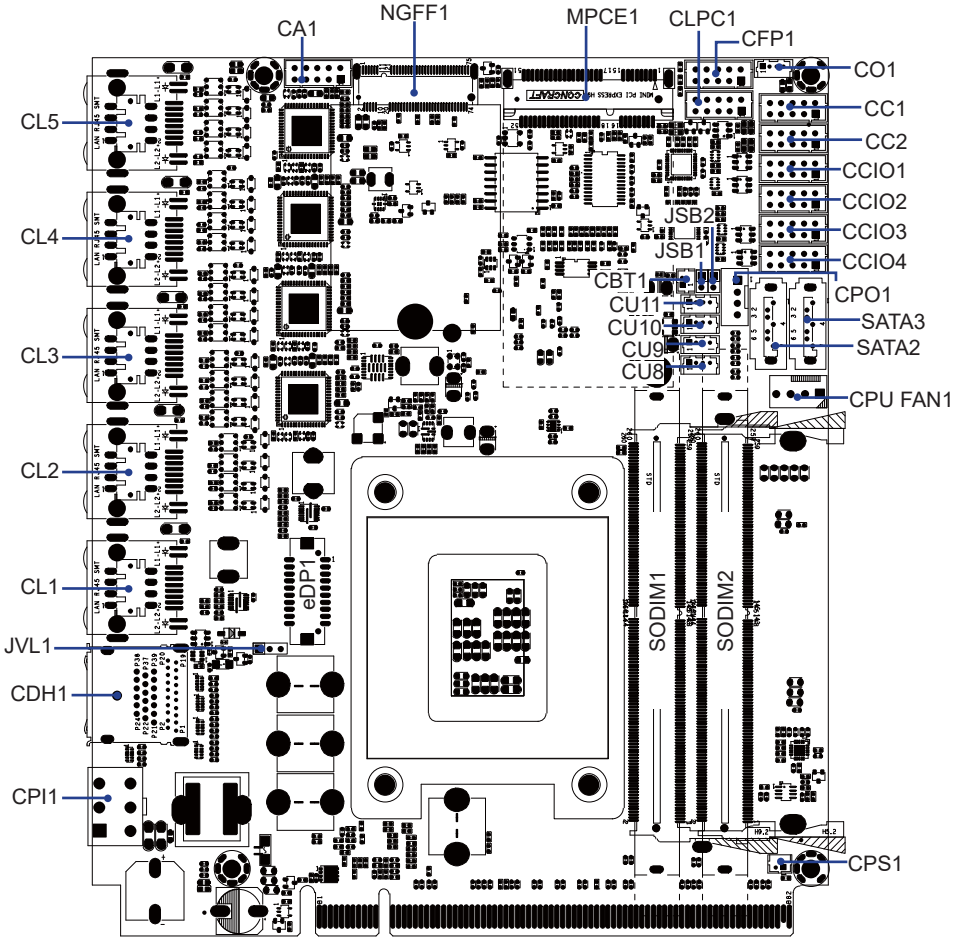


2-4-1 Connector MAP-3I370DW

BOT

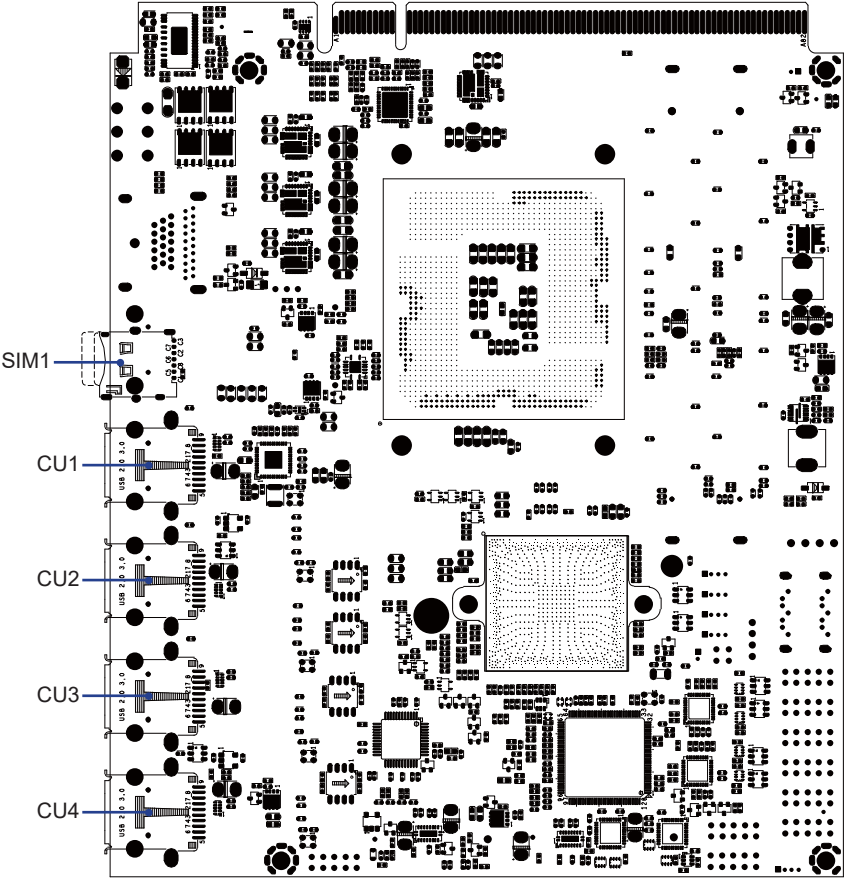


2-5 Diagram- 3I370DW

TOP

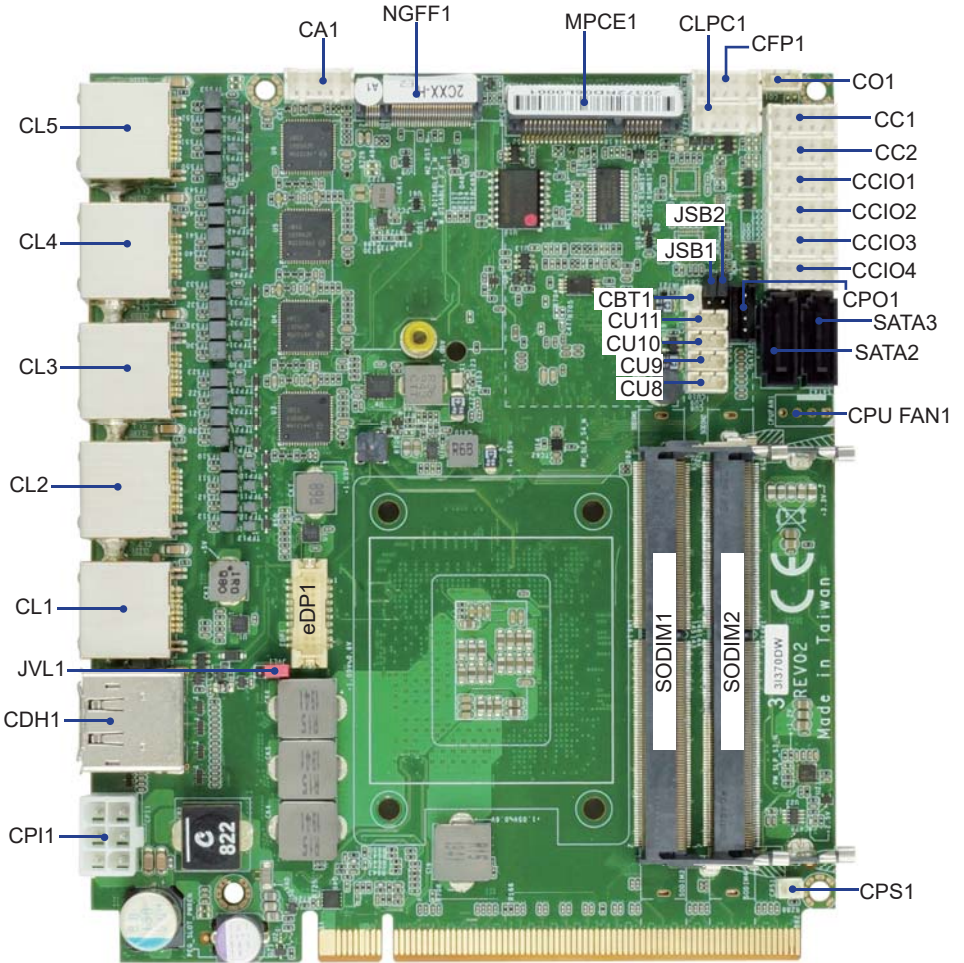

2-5-1 Diagram- 3I370DW

BOT

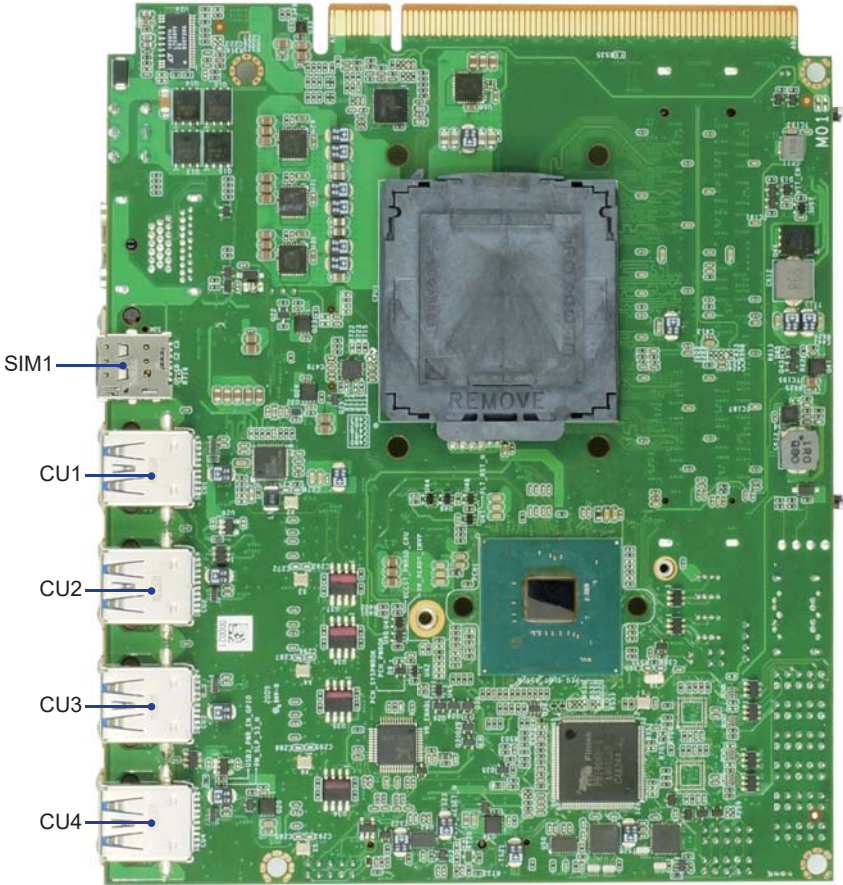

2-6 List of Jumpers

JSB1: CMOS DATA Clear

JSB2: ME DATA Clear

JVL1: eDP panel power select

2-7 Jumper Setting Description

A jumper is ON as a closed circuit with a plastic cap covering two pins. A jumper is OFF as an open circuit without the plastic cap. Some jumpers have three pins, labeled 1, 2, and 3. You could connect either pin 1 and 2 or 2 and 3. The below figure 2.2 shows the examples of different jumper settings in this manual.

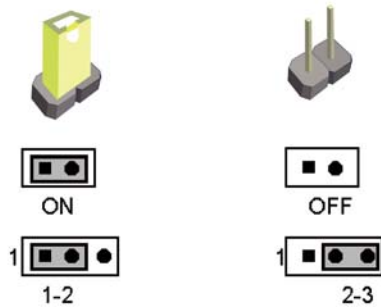


Figure 2.2

All jumpers already have its default setting with the plastic cap inserted as ON, or without the plastic cap as OFF. The default setting may be referred in this manual with a " * " symbol .

2-8 JSB1: CMOS DATA Clear

A battery must be used to retain the motherboard configuration in CMOS RAM. Close Pin1 and pin 2 of JSB2 to store the CMOS data.

To clear the CMOS, follow the procedures below:


1. Turn off the system and unplug the AC power
2. Remove DC IN power cable from DC IN power connector
3. Locate JSB2 and close pin 1-2 for few seconds
4. Return to default setting by Close pin 1-2
5. Connect DC IN power cable back to DC IN Power connector

JSB1	DESCRIPTION
*1-x	Normal set
1-2	CMOS data clear

Note: Normal work is open jumper

Note: Do not clear CMOS unless

1. **Troubleshooting**
2. **Forget password**
3. **You fail over-clocking system**

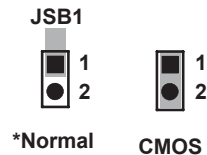



2-9 JSB2: ME DATA Clear

JSB2	DESCRIPTION
*1-x	Normal Set
1-2	ME data clear



2-10 JVL1: eDP panel power select

JVL1	DESCRIPTION
1-2	+5V
*2-3	+3.3V

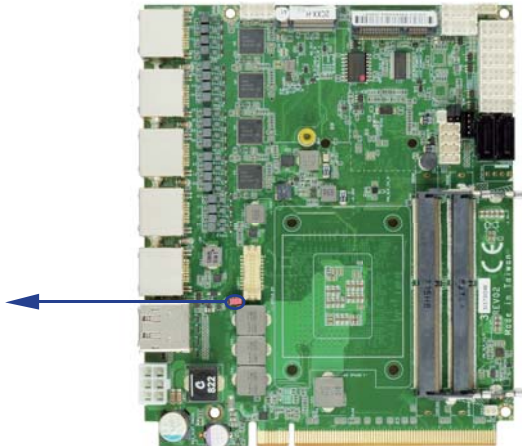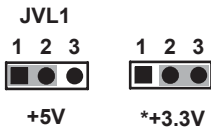

Chapter-3

Connection

This chapter provides all necessary information of the peripheral's connections, switches and indicators. Always power off the board before you install the peripherals.

3-1 List of Connectors

CBT1:	CMOS battery 1x2 pin (1.25mm) wafer
CA1:	Line-out / Line-in / Mic-in / SPDIF-out 2x5 pin (2.0mm) Wafer
CC1:	COM port1 2x5 pin (2.0mm) wafer.
CC2:	COM port2 2x5 pin (2.0mm) wafer.
CCIO1:	4DI / 4DO or COM port 3 2x5 pin (2.0mm) Wafer
CCIO2:	4DI / 4DO or COM port 4 2x5 pin (2.0mm) Wafer
CCIO3:	4DI / 4DO or COM port 5 2x5 pin (2.0mm) Wafer
CCIO4:	4DI / 4DO or COM port 6 2x5 pin (2.0mm) Wafer
CDH1:	Display Port and HDMI connector.
CFP1:	Front Panel connector 2x5 pin (2.0mm) wafer
CL1:	LAN1 RJ45 connector.
CL2:	LAN2 RJ45 connector.
CL3:	LAN3 RJ45 connector.
CL4:	LAN4 RJ45 connector.
CL5:	LAN5 RJ45 connector.
CL11:	LAN1 2x4 (2.0mm) wafer (OEM).
CL21:	LAN2 2x4 (2.0mm) wafer (OEM).
CL31:	LAN3 2x4 (2.0mm) wafer (OEM).
CL41:	LAN4 2x4 (2.0mm) wafer (OEM).
CL51:	LAN5 2x4 (2.0mm) wafer (OEM).
CLPC1:	LPC 2x5 pin (2.00mm) Wafer
CO1:	I2C Bus 4 pin (1.25mm) Wafer
CPI1:	Motherboard DC-IN 2x3 pin (2.54mm) ATX wafer
CPO1:	+12V / +5V power output 4 pin (2.0mm) Black wafer
CPS1:	External Power-On sync 2 pin (1.25mm) wafer.
CU1:	USB 3.0 Port 1 Type A connector.
CU2:	USB 3.0 Port 2 Type A connector.
CU3:	USB 3.0 Port 3 Type A connector.
CU4:	USB 3.0 Port 4 Type A connector.
CU8:	USB 2.0 port 4 pin (1.25mm) Wafer
CU9:	USB 2.0 port 4 pin (1.25mm) Wafer


CU10: USB 2.0 port 4 pin (1.25mm) Wafer
 CU11: USB 2.0 port 4 pin (1.25mm) Wafer
 EDP1: eDP 2x10 pin (1.25mm) connector
 SATA2: SATA port 2 connector 7pin
 SATA3: SATA port 3 connector 7pin
 SIM1: Nano push-push SIM socket.
 SODIMM1: DDR4 Channel 0 SODIMM
 SODIMM2: DDR4 Channel 1 SODIMM
 MPCE1 : Full size mini card port 1 sockets 52 pin
 M.2 : M.2 B Key 2242 sockets.

3-2 CBT1: CMOS Battery 1x2 pin (1.25mm) Wafer.

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	+3V

Note:



1. When the board without Adaptor plug in, this board power RTC consumption about 2.7uA
2. If adaptor always plug in RTC power consumption about 0.1uA

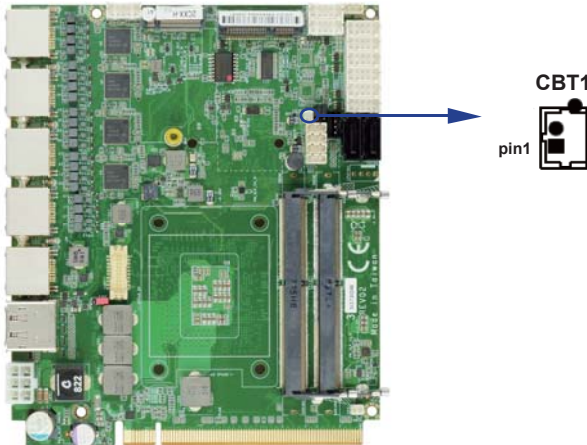

3-3 CA1: Line-out / Line-in / Mic-in 2x5 pin (2.0mm) Wafer

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Line-out-R	2	MIC-IN
3	Line-in-R	4	GND
5	GND	6	GND
7	Line-in-L	8	+5V
9	Line-out-L	10	MIC-IN

CA1

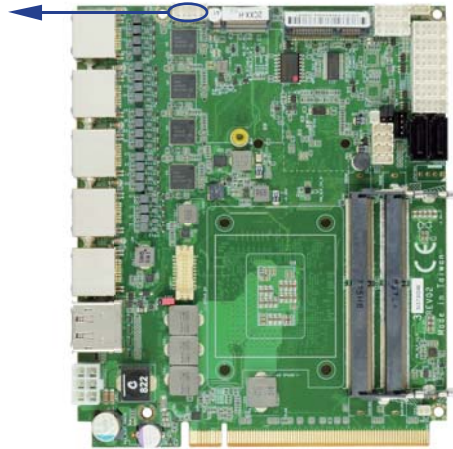

3-4 CC1 / CC2 COM port1 / 2 2x5 pin (2.0mm) wafer.

• RS232 Mode

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND	10	+5V

• RS485 Mode


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Data-	6	NC
2	Data+	7	NC
3	NC	8	NC
4	NC	9	NC
5	GND	10	+5V

• RS422 Mode

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TX-	6	NC
2	TX+	7	NC
3	RX+	8	NC
4	RX-	9	NC
5	GND	10	+5V

Note:

1. Pin 9 RI has +12V or +5V voltage, but default is RI, voltage for OEM.
2. UART default supports RS232 and RS422 / RS485 by BIOS selected

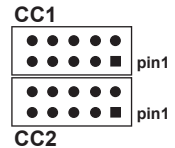

3-5 CCIO1 / CCIO2 / CCIO3 / CCIO4 COM port3 / port4 / port5 / port6 and DI/DO 2x5 pin (2.0mm) wafer.

3-5-1 For COM 3 / 4 / 5 / 6:

- RS232 Mode

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND	10	+5V

- RS485 Mode

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Data-	6	NC
2	Data+	7	NC
3	NC	8	NC
4	NC	9	NC
5	GND	10	+5V

- RS422 Mode

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TX-	6	NC
2	TX+	7	NC
3	RX+	8	NC
4	RX-	9	NC
5	GND	10	+5V

3-5-2 For DI/DO:

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DI-0,4,8,12	2	DO-3,7,11,15
3	DI-1,5,9,13	4	DO-2,6,10,14
5	DI-2,6,10,14	6	DO-1,5,9,13
7	DI-3,7,11,15	8	DO-0,4,8,12
9	GND	10	+5V

Note:

1. COM or DI/DO decided by OEM order and BOM controlled
2. UART default is RS232 and RS422 / RS485 by BIOS selected
3. DI pin default pull up 10KΩ to +5V
4. DI/DO should connect to isolated card to control external device if need.

● For F81966 I²C watch dog timer device:

DC spec:

Input low Voltage (VIL): +0.8 Max

Input High Voltage (VIH): +2V Min


Output low Current (IOL): 10mA (Min) VOL=0.4V

Output High Current (IOH): -10mA (Min) VOH=2.4V

Watch Dog Time value 0~255 sec

The system will be issued reset. When WDT is enable the hardware start down counter to zero. The reset timer have 10~20% tolerance upon the Temperature.

Note: If want to SDK support. Please contact to sales window.

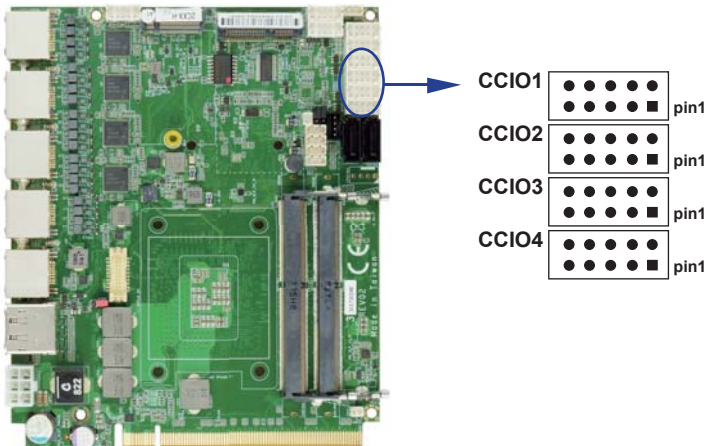

3-5-2-1 IO Device: F81966 LPC DIO under Windows

The Sample code source you can download from


Source file: F81966_LPC_GPIO_UTILITY_Src_v1.5.zip

Binary file: F81966_LPC_GPIO_UTILITY_Bin_x86_v1.5.zip F81966_LPC_GPIO_UTILITY_Bin_x64_v1.5.zip

F81966 DLL : F81966_DLL_x32_v1.0.zip F81966_DLL_x64_v1.0.zip

http://tprd.info/lexwiki/index.php/IO_Device:F81966_LPC_DIO_under_Windows

Introduction F81966 DIO

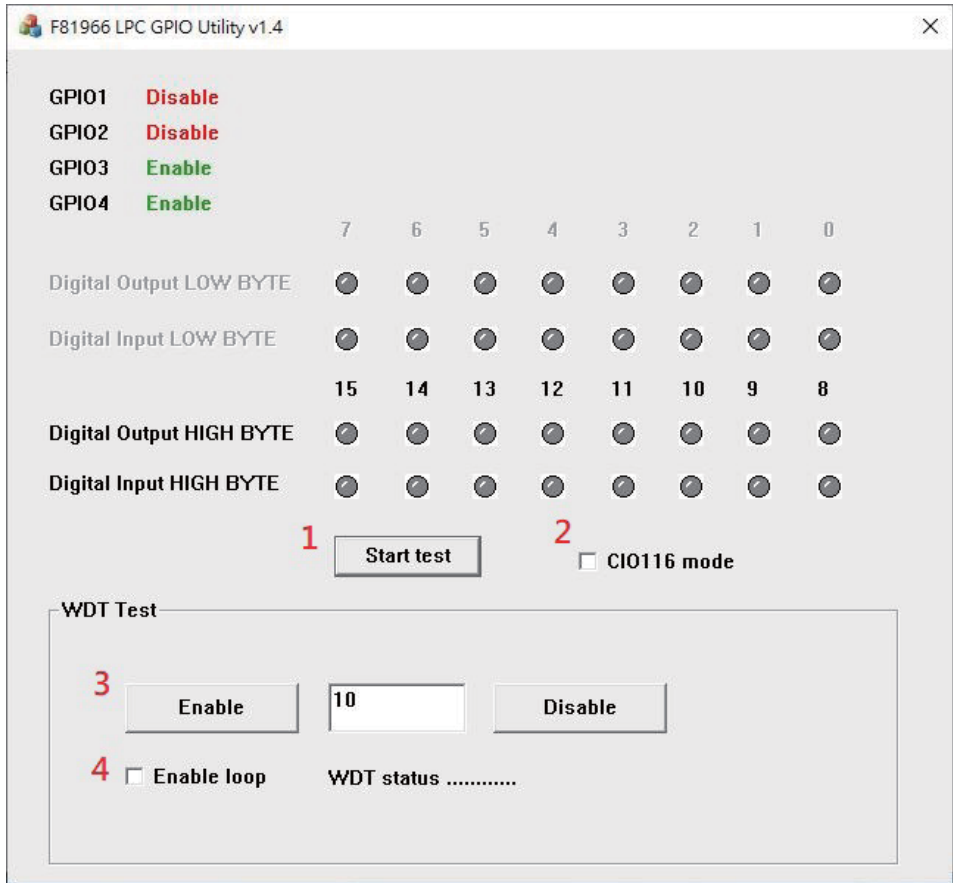

Start test Button, Send bits one by one and one by one receive

CIO116 mode for CIO116 module use

Set time countdown, If the end of the countdown, the trigger signal to reboot

Enable loop, Continuously reset the WDT to ensure that when the system is normal, the restart signal will not be triggered

F81966_DLL Function

```
F81966_DLL_API bool F81966_LPC_Init(pF81966_status status);

F81966_DLL_API BYTE F81966_LPC_Digital_Read_LOW();
F81966_DLL_API void F81966_LPC_Digital_Write_LOW(BYTE byteValue);
F81966_DLL_API BYTE F81966_LPC_Digital_Read_HIGH();
F81966_DLL_API void F81966_LPC_Digital_Write_HIGH(BYTE byteValue);

F81966_DLL_API void F81966_LPC_Set_WDT_Enable(BYTE byteValue);
F81966_DLL_API void F81966_LPC_Set_WDT_Disable();
```

Digital Input / Ooutput test

sample code

```
Set Dout all high
F81966_LPC_Digital_Write_LOW(256);
set Dout all low
F81966_LPC_Digital_Write_LOW(0);
```

```
Read Din
value = F81966_LPC_Digital_Read_LOW();
```

Watch Dog test

sample code

```
Set WDT 10 sec
F81966_LPC_Set_WDT_Enable(10);
```

```
Disable WDT
F81966_LPC_Set_WDT_Disable();
```


3-6 CDH1 Display Port and HDMI Connector

• Display Port:

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DATA0+	2	GND
3	DATA0-	4	DATA1+
5	GND	6	DATA1-
7	DATA2+	8	GND
9	DATA2-	10	DATA3+
11	GND	12	DATA3-
13	GND	14	GND
15	AUX+	16	GND
17	AUX-	18	H.P. Detect
19	GND	20	+3.3V

• HDMI:


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TMDS DATA2+	2	GND
3	TMDS DATA2-	4	TMDS DATA1+
5	GND	6	TMDS DATA1-
7	TMDS DATA0+	8	GND
9	TMDS DATA0-	10	TMDS CLK+
11	GND	12	TMDS CLK-
13	NC	14	NC
15	DDC CLOCK	16	DDC DATA
17	GND	18	+5V
19	H.P. Detect		

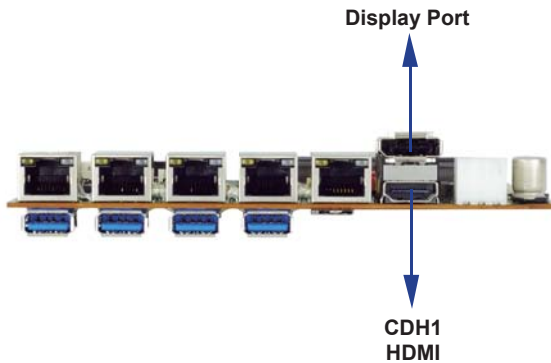

3-7 CFP1 Front Panel connector 2x5 pin (2.0mm) wafer

• Display Port:

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Power button pin	2	Power button GND
3	Reset pin	4	Reset GND
5	Power LED-	6	Power LED+
7	HDD LED-	8	HDD LED+
9	LAN LED-	10	LAN LED+

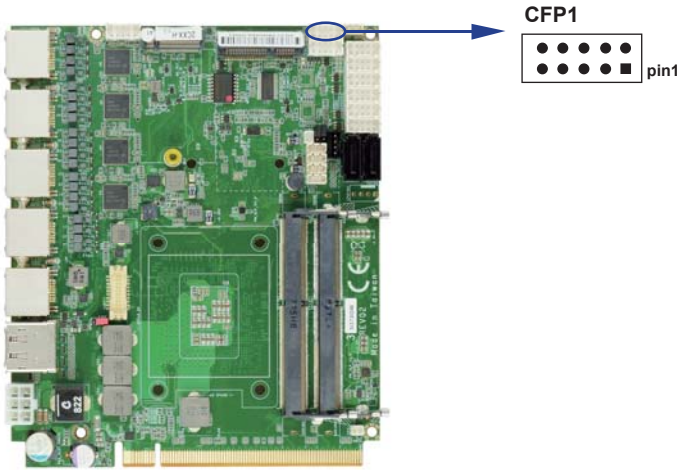

3-8 LAN


• **CL1 / CL2 / CL3 / CL4 / CL5:**
RJ45 LAN1 / LAN2 / LAN3 / LAN4 / LAN5 Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	MDI0+	5	MDI2-
2	MDI0-	6	MDI1-
3	MDI1+	7	MDI3+
4	MID2+	8	MDI3-

• **CL11 / CL21 / CL31 / CL41 / CL51:**
LAN1 / 2 / 3 / 4 / 5 2x4 pin (2.0mm) wafer (OEM)


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	MDI0-	2	MDI0+
3	MDI2+	4	MID1+
5	MDI1-	6	MDI2-
7	MDI3-	8	MDI3+

Note: These CL11 / 21 / 31 / 41 / 51 wafer default hasn't been existed.

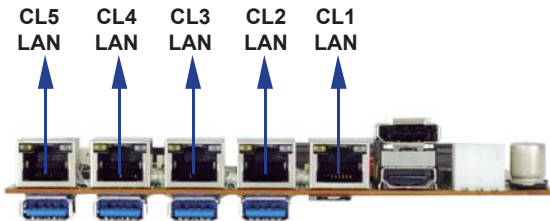


3-9 CLPC1: for LPC signal 2x5 pin wafer (2.0mm).

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	AD3	2	CLK
3	AD2	4	FRAME
5	AD1	6	RESET
7	AD0	8	SERIAL IRQ
9	GND	10	+3.3V

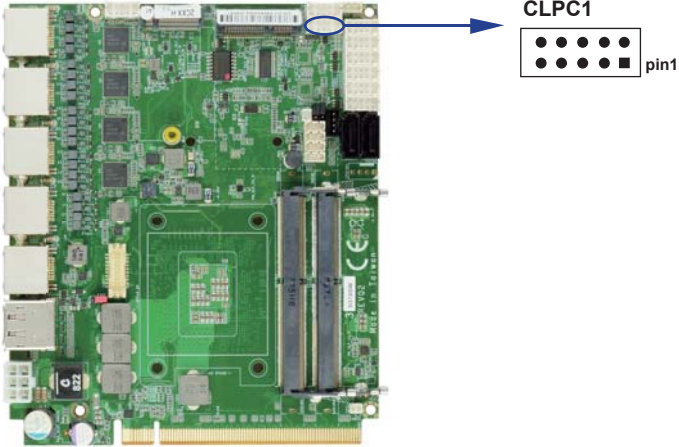


3-10 CO1: I2C Bus 4 pin (1.25mm) Wafer

PIN NO.	DESCRIPTION
1	+3.3V
2	GND
3	I2C Clock
4	I2C DATA

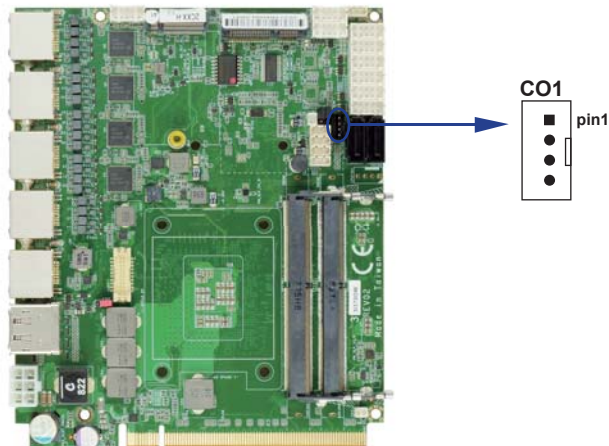

3-11 CPI1: Motherboard DC Power input (ATX 2x3 pin 2.54mm Wafer)


PIN NO	DESCRIPTION
1,3,5	DC-IN
2,4,6	GND

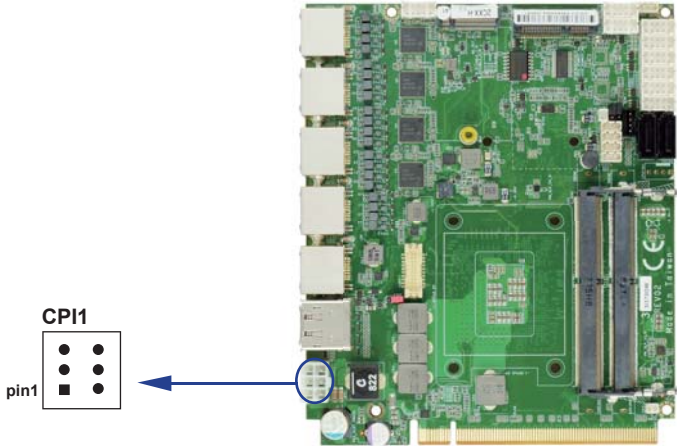

3-12 CPO1: +12V / +5V DC voltage output wafer connector (Black) (1x4 pin 2.0mm)

PIN NO.	DESCRIPTION
1	+5V
2	GND
3	GND
4	+12V*

* Note: Attention! Check Device Power in spec

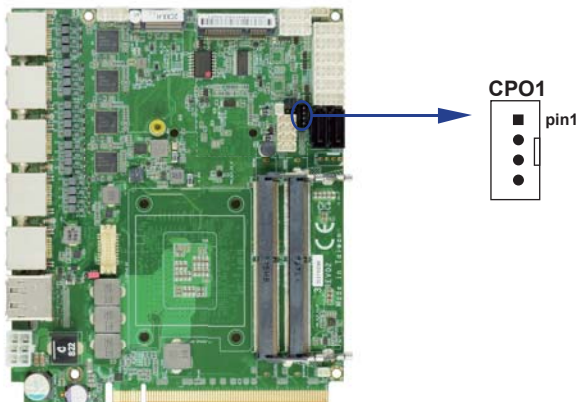


3-13 CPS1: External Power-On Sync control.

PIN NO.	DESCRIPTION
1	GND
2	PS_ON_N

*Note:

The sync signal is Low active. When Motherboard powered on that is Low, Power-off is high. The signal is +3.3V tolerance.

It can be used for gold finger power to sync motherboard power sequence.

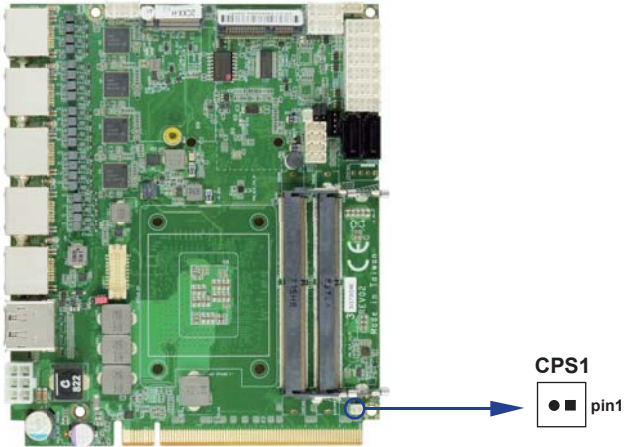


3-14 USB 3.0 and USB 2.0

• **CU1 / CU2 / CU3 / CU4: USB 3.0 Port 1 / 2 / 3 / 4 Type A Connector**


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VBUS	5	SS_RX-
2	D-	6	SS_RX+
3	D+	7	GND
4	GND	8	SS_TX-
		9	SS_TX+

Note: the power supply 0.9A for each USB 3.0 respect specification.

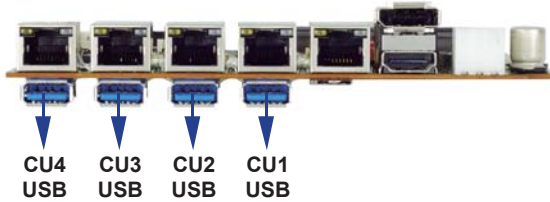

• **CU8 / CU9 / CU10 / CU11 USB 2.0 port (1x4 pin 1.25mm Wafer)**

PIN NO.	DESCRIPTION
1	+5V
2	DATA-
3	DATA+
4	GND


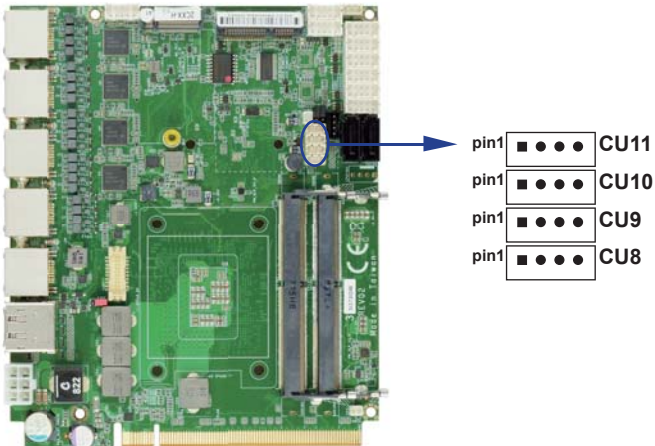


3-15 EDP1: eDP interface (2x10 pin 1.25mm wafer)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Lane-0-DATA-	2	+12V
3	Lane-0-DATA+	4	+12V
5	Lane-1-DATA-	6	GND
7	Lane-1-DATA+	8	GND
9	Backlight Enable	10	GND
11	PWM dimming	12	GND
13	I2C Clock	14	+LCD (5V or 3.3V)
15	I2C Data	16	+LCD (5V or 3.3V)
17	eDP Aux+	18	+LCD (5V or 3.3V)
19	eDP Aux-	20	EDP_HPD

Note:


1. eDP interface support 2 lanes.
2. JVL1: eDP panel +5V / +3.3V (default) Voltage select.
3. eDP1 PIN 9 for panel backlight enable. +3.3V Level
4. eDP1 PIN 11 for panel backlight dimming control

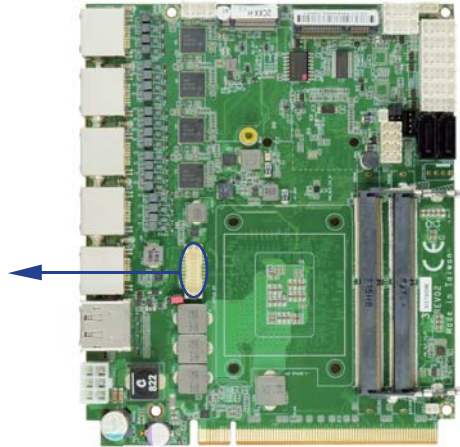

3-16 SATA2 / 3: SATA port 1x7 pin Connector

PIN NO.	DESCRIPTION
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND


Note: 1. CPO1 provide SATA HDD power +12V, GND, +5V

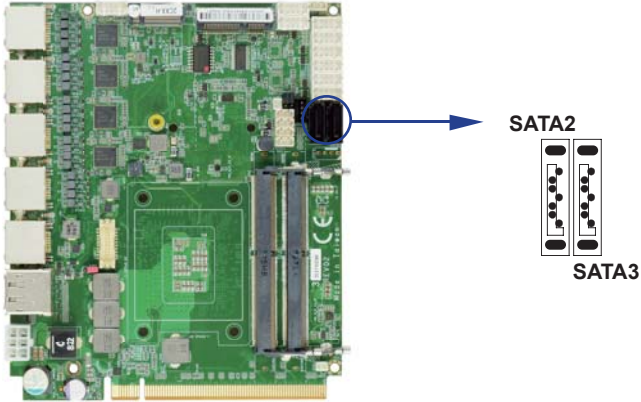

3-17 SIM1: Nano Push-Push SIM socket.


PIN NO.	DESCRIPTION
C1	Power
C2	Reset
C3	Clock
C5	GND
C6	NC.
C7	Data
C8	SIM detect

Note: 1. The SIM signal comes from M.2 module.

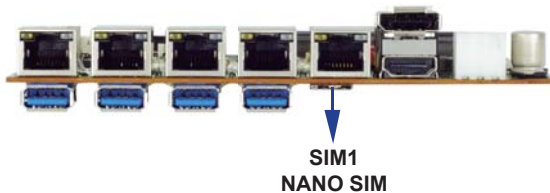



3-18 SODIMM1 / 2 socket

Note:
SODIM1 / SODIM2: SO-DIMM DDR4 1.2V DRAM Socket
Only Support un-buffer type module
Only support Raw card type A.C.E.

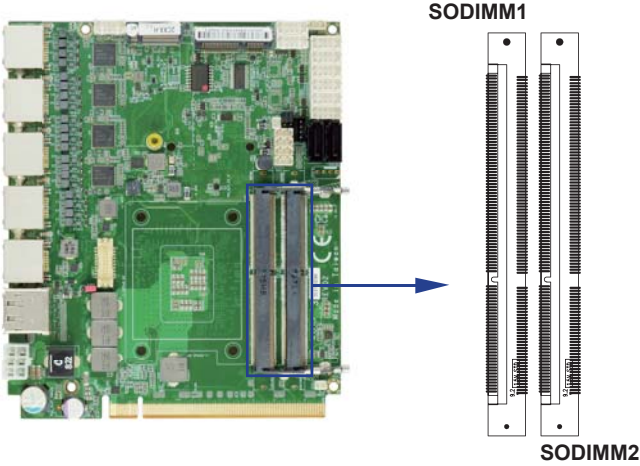

3-19 MPCE1 PCI Express Mini card

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	NC	2	+3.3V
3	NC	4	GND
5	NC	6	+1.5V
7	NC	8	NC
9	GND	10	NC
11	PCIe-CLK-	12	NC
13	PCIe-CLK+	14	NC
15	GND	16	NC
KEY			
17	NC	18	GND
19	WAKEUP_LTE	20	W_DISABLE_N
21	GND	22	Reset
23	PCIe-RX- / mSATA-RX+	24	+3.3V
25	PCIe-RX+ / mSATA-RX-	26	GND
27	GND	28	+1.5V
29	GND	30	SMB-CLK
31	PCIe-TX- / mSATA-TX-	32	SMB-DATA
33	PCIe-TX+ / mSATA-TX+	34	GND
35	GND	36	USB-DATA-
37	GND	38	USB-DATA+
39	+3.3V	40	GND
41	+3.3V	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	+1.5V
49	NC	50	GND
51	mSATA / PCIe detect	52	+3.3V

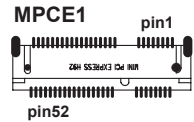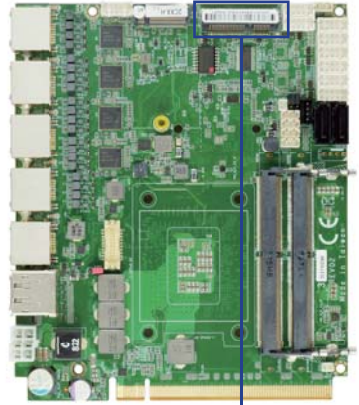


Note:


1. Pin51 mSATA / PCIe auto detect function.
2. USB 3.0 need selected by BIOS item.

3-20 NGFF1: B Key size

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	CONFIG_3	2	+3.3V or +3.7V
3	GND	4	+3.3V or +3.7V
5	GND	6	Full_Card_Power_OFF_N
7	USB-DATA-	8	W_DISABLE_1_N
9	USB-DATA+	10	LED#
11	GND		
KEY			
21	CONFIG_0	22	NC
23	NC	24	NC
25	NC	26	W_DISABLE_2_N
27	GND	28	NC
29	NC	30	NC
31	NC	32	NC
33	GND	34	NC
35	NC	36	NC
37	NC	38	NC
39	GND	40	NC
41	PCIe-RX-	42	NC
43	PCIe-RX+	44	NC
45	GND	46	NC
47	PCIe-TX-	48	NC
49	PCIe-TX+	50	RESET#
51	GND	52	NC
53	PCIe-CLK-	54	NC
55	PCIe-CLK+	56	NC
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	NC
67	LTE_RESET_N	68	NC
69	CONFIG_1	70	+3.3V or +3.7V
71	GND	72	+3.3V or +3.7V
73	GND	74	+3.3V or +3.7V
75	CONFIG_2		

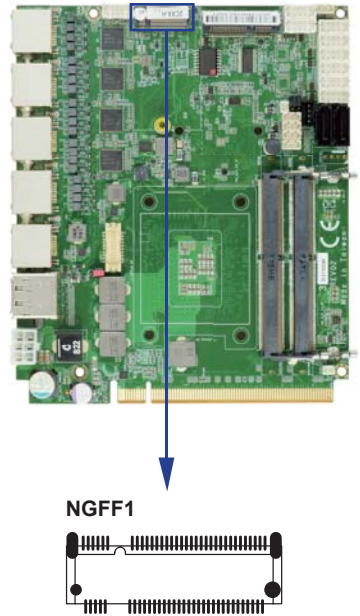

NGFF1



Note:

1. Auto-detect PCIe, mSATA and USB3.0 interface.
2. Supported PCIe NVMe storage.
3. The power voltage +3.3V or +3.7V are decided by CONFIG_x pin of M.2 device.

3-21 Connector wafer of Compatible Brand and part number list

Location	CKTS	PITCH	Brand Name	Mating connector	Cable housing
CBT1	1x2 2 Pin	1.25mm	MOLEX	53047-0210	51021-0200
CA1	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CC1	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CC2	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CCIO1	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CCIO2	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CCIO3	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CCIO4	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CFP1	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CLPC1	2x5 10 Pin	2.00mm	JST	B10B-PHDSS	PHDR-10VS
CO1	1x4 4 Pin	1.25mm	MOLEX	53047-0410	51021-0400
CPO1	1x4 4 Pin	2.00mm	JST	B4B-PH-KL	PHR-4
CPS1	1x2 2 Pin	1.25mm	MOLEX	53047-0210	51021-0200
CU8	1x4 4 Pin	1.25mm	MOLEX	53047-0410	51021-0400
CU9	1x4 4 Pin	1.25mm	MOLEX	53047-0410	51021-0400
CU10	1x4 4 Pin	1.25mm	MOLEX	53047-0410	51021-0400
CU11	1x4 4 Pin	1.25mm	MOLEX	53047-0410	51021-0400
eDP1	2x10 20 Pin	1.25mm	HIROSE	DF13-20DS-1.25C	DF13-20DP-1.25V

Chapter-4

Introduction of BIOS

The BIOS is a program located in the Flash Memory on the motherboard.

This program is a bridge between motherboard and operating system.

When you start the computer, the BIOS program gains control.

The BIOS first operates an auto-diagnostic test called POST (Power on Self Test) for all the necessary hardware, it detects the entire hardware devices and configures the parameters of the hardware synchronization. After these tasks are completed, BIOS will give control of the computer back to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate with, it is the key factor of system stability and of ensuring your system performance at best.

In the BIOS Setup main menu, you can see several options. We will explain these options in the following pages. First, let us see the function keys you may use here:

Press <Esc> to quit the BIOS Setup.

Press ↑↓←→(up, down, left, right) to choose the option you want to confirm or modify.

Press <F10> to save these parameters and to exit the BIOS Setup menu after you complete the setup of BIOS parameters.

Press Page Up/Page Down or +/- keys to modify the BIOS parameters for the active option.

4-1 Enter Setup

Power on the computer and press key immediately to enter Setup.

If the message disappears before your respond but you still wish to enter Setup, restart the system by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart the system by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys.

4-2 BIOS Menu Screen & Function Keys

```
Apdio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
| BIOS Information                                     ^|Set the Date. Use Tab
| BIOS Vendor           American Megatrends          *|to switch between Date
| BIOS Version          3I370DW A1                  *|elements.
| Build Date and Time   01/08/2020 10:23:28         *|Default Ranges:
|                                     *|Year: 2005-2099
| Processor Information *|Months: 1-12
| Name                  CoffeeLake DT              *|Days: dependent on month
| Type                  Intel(R) Celeron(R)         *|
|                       G4900 CPU @ 3.10GHz        *|
| Speed                 3100 MHz                    *|-----
| ID                    0x906EB                     *|><: Select Screen
| Stepping              B0                           *|^v: Select Item
| Number of Processors  2Core(s) / 2Thread(s)      *|Enter: Select
| GT Info               GT1 (0x3E93)                +|+/-: Change Opt.
| Total Memory          16384 MB                    +|F1: General Help
| Memory Frequency      2400 MHz                    +|F2: Previous Values
|                                     +|F3: Optimized Defaults
| PCH Information     *|F4: Save & Reset
| Name                  CNL PCH-H                     *|ESC: Exit
| PCH SKU               Q370                          *|
| Stepping              B0                            *|
|                                     *|
| System Date           [Fri 05/15/2020]            *|
| System Time           [10:59:30]                  v|
|
|-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

In the above BIOS Setup main menu of, you can see several options.

We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press >< (right, left) to select screen;
- Press ↑↓ (up, down) to choose, in the main menu, the option you want to confirm or to modify.
- Press <Enter> to select.
- Press <+>/<-> or <F5>/<F6> keys when you want to modify the BIOS parameters for the active option.
- [F1]: General help.
- [F2]: Previous values.
- [F3]: Optimized defaults.
- [F4]: Save & Exit.
- Press <Esc> to quit the BIOS Setup.

4-3 General Help



Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

4-4 Menu Bars

There are six menu bars on top of BIOS screen:

Main To change system basic configuration

Advanced To change system advanced configuration

Chipset To change PCH IO configuration

Security Password settings

Boot Quiet boot or boot from USB selected.

Save & Exit Save setting, loading and exit options.

User can press the right or left arrow key on the keyboard to switch from menu bar.

The selected one is highlighted.

4-5 Main

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
| BIOS Information                                     ^|Set the Date. Use Tab
| BIOS Vendor           American Megatrends          *|to switch between Date
| BIOS Version          3I370DW A1                 *|elements.
| Build Date and Time   01/08/2020 10:23:28        *|Default Ranges:
|                                     *|Year: 2005-2099
|                                     *|Months: 1-12
| Processor Information                                *|Days: dependent on month
| Name                  CoffeeLake DT              *|
| Type                  Intel(R) Celeron(R)         *|
|                       G4900 CPU @ 3.10GHz        *|
| Speed                 3100 MHz                    *|-----
| ID                    0x906EB                    *|>: Select Screen
| Stepping              B0                          *|^v: Select Item
| Number of Processors  2Core(s) / 2Thread(s)      *|Enter: Select
| GT Info               GT1 (0x3E93)                +|+/-: Change Opt.
| Total Memory          16384 MB                    +|F1: General Help
| Memory Frequency      2400 MHz                    +|F2: Previous Values
|                                     +|F3: Optimized Defaults
| PCH Information                                         *|F4: Save & Reset
| Name                  CNL PCH-H                   *|ESC: Exit
| PCH SKU               Q370                         *|
| Stepping              B0                          *|
|                                     *|
| System Date           [Fri 05/15/2020]           *|
| System Time           [10:59:30]                 v|
|                                     |
|-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Main menu screen includes some basic system information. Highlight the item and then use the <+> or <-> and numerical keyboard keys to select the value you want in each item.

System Date

Set the Date. Please use [Tab] to switch between data elements.

System Time

Set the Time. Please use [Tab] to switch between data elements.

4-6-1 PCH-FW Configuration

```

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
ME Firmware Version      12.0.41.1435
ME Firmware Mode         Normal Mode
ME Firmware SKU          Corporate SKU
ME Firmware Status 1     0x90000255
ME Firmware Status 2     0x80108106

ME State                  [Enabled]
Manageability             [Disabled]
Features State

-----
|>: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Reset
|ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.

```

4-6-2 Trusted Computing

```

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
TPM20 Device Found      ^|Enables or Disables
Firmware Version:      5.63      *|BIOS support for
Vendor:                 IFX      *|security device. O.S.
                        *|will not show Security
Security Device         [Enable] *|Device. TCG EFI
Support                *|protocol and INT1A
Active PCR banks        SHA-1,SHA256 *|interface will not be
Available PCR banks     SHA-1,SHA256 *|available.
                        *
SHA-1 PCR Bank          [Enabled] *
SHA256 PCR Bank         [Enabled] *|>: Select Screen
                        *|^v: Select Item
Pending operation       [None]   *|Enter: Select
Platform Hierarchy      [Enabled] *|+/-: Change Opt.
Storage Hierarchy       [Enabled] +|F1: General Help
Endorsement             [Enabled] +|F2: Previous Values
Hierarchy               *|F3: Optimized Defaults
TPM2.0 UEFI Spec        [TCG_2]  *|F4: Save & Reset
Version                 *
Physical Presence       [1.3]    *
Spec Version            *
TPM 20 InterfaceType    [TIS]    v
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.

```

This page for TPM Device only. (For Option Model)

4-6-3 F81966 Super IO Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
F81966 Super IO Configuration                               |Set Parameters of
                                                           |Serial Port 1 (COMA)
Super IO Chip              F81966
> Serial Port 1 Configuration
> Serial Port 2 Configuration
> Serial Port 3 Configuration
> Serial Port 4 Configuration
Power Failure              [Keep last state]
                                                           |-----
                                                           |><: Select Screen
                                                           |^v: Select Item
                                                           |Enter: Select
                                                           |+/-: Change Opt.
                                                           |F1: General Help
                                                           |F2: Previous Values
                                                           |F3: Optimized Defaults
                                                           |F4: Save & Reset
                                                           |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Serial Port 1 Configuration

Please refer section 4-6-3-1

Serial Port 2 Configuration

Please refer section 4-6-3-2

Serial Port 3 Configuration

Please refer section 4-6-3-3

Serial Port 4 Configuration

Please refer section 4-6-3-4

Power Failure

Please refer section 4-6-3-5

4-6-3-1 ► Serial Port 1 Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 1 Configuration                               |Enable or Disable
                                                         |Serial Port (COM)
Serial Port                                             | [Enabled]
Device Settings                                         | IO=3F8h; IRQ=4;
Change Settings                                         | [Auto]
Serial Mode                                             | [RS232]
                                                         | /--- Serial Port ---\
                                                         | | Disabled           |
                                                         | | Enabled            |
                                                         | \-----/
                                                         |>X: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

To Enable Serial port or not, default is Enabled.

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 1 Configuration                               |Select an optimal
                                                         |settings for Super IO
                                                         |Device
Serial Port                                             | [Enabled]
Device Settings                                         | IO=3F8h; IRQ=4;
Change Settings                                         | /----- Change Settings -----\
Serial Mode                                             | | Auto
                                                         | | IO=3F8h; IRQ=4;
                                                         | | IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         | | IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         | | IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         | | IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         | \-----/
                                                         |>X: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Change Settings, default is Auto.

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 1 Configuration |Set COM Port as RS232,
                            |RS422 or RS485 mode.
Serial Port                 [Enabled]
Device Settings            IO=3F8h; IRQ=4;
Change Settings            [Auto]
Serial Mode                 [/-- Serial Mode ---]
                            | RS232
                            | RS422
                            | RS485
                            |-----|
                            |>: Select Screen
                            |^v: Select Item
                            |Enter: Select
                            |+/-: Change Opt.
                            |F1: General Help
                            |F2: Previous Values
                            |F3: Optimized Defaults
                            |F4: Save & Reset
                            |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

To select the Serial port to RS232 / RS422 / RS485, default is RS232.

4-6-3-2 ► Serial Port 2 Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 2 Configuration                               |Enable or Disable
                                                         |Serial Port (COM)
Serial Port                                             [Enabled]
Device Settings                                       IO=2F8h; IRQ=3;
Change Settings                                       [Auto]
Serial Mode                                           [RS232]
                                                         |
                                                         |/--- Serial Port ---\
                                                         | Disabled
                                                         | Enabled
                                                         |-----|
                                                         |X: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

To Enable Serial port or not, default is Enabled.

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 2 Configuration                               |Select an optimal
                                                         |settings for Super IO
                                                         |Device
Serial Port                                             [Enabled]
Device Settings                                       IO=2F8h; IRQ=3;
Change Settings                                       [Auto]
Serial Mode                                           [Auto]
                                                         |
                                                         |IO=2F8h; IRQ=3;
                                                         |IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         |IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         |IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         |IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         |-----|
                                                         |X: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Change Settings, default is Auto.

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 2 Configuration                               |Set COM Port as RS232,
                                                         |RS422 or RS485 mode.
Serial Port                                             [Enabled]
Device Settings                                         IO=2F8h; IRQ=3;
Change Settings                                         [Auto]
Serial Mode                                              [/-- Serial Mode ---\
| RS232
| RS422
| RS485
\-----/
                                                         |>: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

To select the Serial port to RS232 / RS422 / RS485, default is RS232.

4-6-3-3 ► Serial Port 3 Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 3 Configuration                               |Enable or Disable
                                                         |Serial Port (COM)
Serial Port                                             [Enabled]
Device Settings                                         IO=3E8h; IRQ=7;
Change Settings                                         [Auto]
Serial Mode                                             [RS232]
                                                         |
                                                         |/--- Serial Port ---\
                                                         | Disabled
                                                         | Enabled
                                                         |-----|
                                                         |>: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

To Enable Serial port or not, default is Enabled.

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 3 Configuration                               |Select an optimal
                                                         |settings for Super IO
                                                         |Device
Serial Port                                             [Enabled]
Device Settings                                         IO=3E8h; IRQ=7;
Change Settings                                         [Auto]
Serial Mode                                             [Auto]
                                                         |
                                                         |IO=3E8h; IRQ=7;
                                                         |IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         |IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         |IO=2F0h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         |IO=2E0h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         |-----|
                                                         |>: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Change Settings, default is Auto.

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 3 Configuration                               |Set COM Port as RS232,
                                                         |RS422 or RS485 mode.
Serial Port                                             [Enabled]
Device Settings                                         IO=3E8h; IRQ=7;
Change Settings                                         [Auto]
Serial Mode                                              [/-- Serial Mode ---]
                                                         | RS232
                                                         | RS422
                                                         | RS485
                                                         |-----|
                                                         |><: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

To select the Serial port to RS232 / RS422 / RS485, default is RS232.

4-6-3-4 ► Serial Port 4 Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 4 Configuration                               |Enable or Disable
                                                         |Serial Port (COM)
Serial Port                                             |[Enabled]
Device Settings                                         |IO=2E8h; IRQ=7;
Change Settings                                         |[Auto]
Serial Mode                                             |[RS232]
                                                         |
                                                         |/--- Serial Port ---\
                                                         | Disabled
                                                         | Enabled
                                                         | \-----/
                                                         |
                                                         |>X: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

To Enable Serial port or not, default is Enabled.

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 4 Configuration                               |Select an optimal
                                                         |settings for Super IO
                                                         |Device
Serial Port                                             |[Enabled]
Device Settings                                         |IO=2E8h; IRQ=7;
Change Settings                                         |
Serial Mode                                             |
                                                         |/----- Change Settings -----\
                                                         | Auto
                                                         | IO=2E8h; IRQ=7;
                                                         | IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         | IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         | IO=2F0h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         | IO=2E0h; IRQ=3,4,5,6,7,9,10,11,12;
                                                         | \-----/
                                                         |
                                                         |>X: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Change Settings, default is Auto.

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Serial Port 4 Configuration                               |Set COM Port as RS232,
                                                         |RS422 or RS485 mode.
Serial Port                                             [Enabled]
Device Settings                                         IO=2E8h; IRQ=7;
Change Settings                                         [Auto]
Serial Mode                                             [--- Serial Mode ---]
                                                         |RS232
                                                         |RS422
                                                         |RS485
                                                         |-----|
                                                         |>: Select Screen
                                                         |^v: Select Item
                                                         |Enter: Select
                                                         |+/-: Change Opt.
                                                         |F1: General Help
                                                         |F2: Previous Values
                                                         |F3: Optimized Defaults
                                                         |F4: Save & Reset
                                                         |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

To select the Serial port to RS232 / RS422 / RS485, default is RS232.

4-6-4 Hardware Monitor

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----
Pc Health Status
-----
CPU Temperature      : +40 C
SYSTEM Temperature  : +33 C
CPU Fan              : N/A
VCORE                : +0.928 V
VDDQ                 : +1.184 V
+1.05V               : +1.056 V
VCCIO                : +0.960 V
VSB3V                : +3.168 V
+5V                  : +5.068 V
-----
|>: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Reset
|ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Press [Enter] to view PC health status.

This section shows the status of your CPU, Fan, and overall system.

This is only available when there is Hardware Monitor function onboard.

4-6-5 Intel TXT Information

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----|-----
 Intel TXT Information
-----|-----
Chipset           Production Fused
BiosAcm           Production Fused
Cpu Txt           Not Supported
Error Code        None
  Class Code      None
  Major Code      None
  Minor Code      None
-----|-----
                                     |>: Select Screen
                                     |^v: Select Item
                                     |Enter: Select
                                     |+/-: Change Opt.
                                     |F1: General Help
                                     |F2: Previous Values
                                     |F3: Optimized Defaults
                                     |F4: Save & Reset
                                     |ESC: Exit
-----|-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Press [Enter] to view Intel TXT Information.

4-6-6 USB Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
  Advanced
-----|-----
| USB Configuration | Enables Legacy USB |
|                   | support. AUTO option |
| USB Module Version 21 | disables legacy support |
|                   | if no USB devices are |
| USB Controllers:    | connected. DISABLE   |
|   1 XHCI           | option will keep USB  |
| USB Devices:       | devices available only |
|   1 Keyboard, 1 Mouse | for EFI applications. |
|                   |                       |
| Legacy USB Support  [Enabled] |-----|
| XHCI Hand-off      [Enabled] |><: Select Screen
| USB Mass Storage   [Enabled] |^v: Select Item
| Driver Support     |Enter: Select
|                   |+/-: Change Opt.
|                   |F1: General Help
|                   |F2: Previous Values
|                   |F3: Optimized Defaults
|                   |F4: Save & Reset
|                   |ESC: Exit
-----|-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Legacy USB Support

Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. Disable option will keep USB devices available only for EFI applications. The optional settings are: Enabled (default), Disabled, Auto.

XHCI Hand-off

This is a workaround for OS without XHCI handoff support. The XHCI ownership change should be claimed by XHCI driver. The optional settings are: Enabled, Disabled.

USB Mass Storage Driver Support

To enable USB mass storage support or not, default is Enabled.

4-7 Chipset

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
|> System Agent (SA) Configuration.          |System Agent (SA)
|> PCH-IO Configuration                     |Parameters
|
|
|
|
|
|
|-----
|>: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Reset
|ESC: Exit
|
|-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

System Agent (SA) Configuration.

Please refer section 4-7-1

PCH-IO Configuration.

Please refer section 4-7-2

4-7-1 System Agent (SA) Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Chipset
-----
System Agent (SA) Configuration | Graphics Configuration
SA PCIe Code Version:          | 7.0.78.32
VT-d:                          | Supported
> Graphics Configuration
> PEG Port Configuration
-----
|><: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Reset
|ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Graphics Configuration.

Please refer section 4-7-1-1

PEG Port Configuration.

Please refer section 4-7-1-2

4-7-1-1 ► Graphics Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Chipset
-----
Graphics Configuration
Primary Display          [IGFX]
Internal Graphics       [Enabled]
GTT Size                [8MB]
Aperture Size          [256MB]
DVMT Pre-Allocated     [64M]
DVMT Total Gfx Mem     [256M]
-----
|><: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Reset
|ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Primary Display

To select which of IGFX / PEG Graphics device should be Primary Display Or select SG for Switchable Gfx. The optional settings are: Auto, IGFX (default), PEG, PCI.

Internal Graphics

Keep IGFX enabled based on the setup options. The optional settings are: Auto, Enabled (default), Disabled.

GTT Size

Graphics Translation Table Size. The optional settings are: 2MB, 4MB, 8MB (default)

Aperture Size

The optional settings are: 128MB, 256MB (default), 512MB, 1024MB, 2048MB

DVMT Pre-Allocated

Use this item to select DVMT 5.0 pre-allocated (fixed) graphics memory size used by the internal graphics device. The optional settings are: 16MB, 32MB, 64MB (default)

DVMT Total Gfx Mem

Use this item to select DVMT 5.0 total graphics memory size used by the internal graphics device. The optional settings are: 128MB, 256MB (default), MAX.

4-7-1-2 ► PEG Port Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Chipset
-----
PEG Port Configuration
PEG 0:1:0          Not Present
  Enable Root Port [Auto]
  Max Link Speed   [Auto]
-----
|><: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Reset
|ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Enable Root Port

To enable the Root Port or not. The optional settings are: Auto (default), Enabled, Disabled.

Max Link Speed

Configure PEG Port Max Speed. The optional settings are: Auto (default), Gen1, Gen2, Gne3.

4-7-2 PCH-IO Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Chipset
-----
| PCH-IO Configuration | PCI Express |
|                       | Configuration settings |
|> PCI Express Configuration |
|> SATA And RST Configuration |
| MPCE1 Switch To [PCIe/SATA] |
|                               |
|                               |
|                               |
|                               |
|                               |
|>: Select Screen |
|^v: Select Item |
|Enter: Select |
|+/-: Change Opt. |
|F1: General Help |
|F2: Previous Values |
|F3: Optimized Defaults |
|F4: Save & Reset |
|ESC: Exit |
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

PCI Express Configuration.

Please refer section 4-7-2-1

SATA And RST Configuration.

Please refer section 4-7-2-2

4-7-2-2 ► SATA And RST Configuration

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Chipset
-----|-----+-----|-----|
SATA And RST Configuration                ^|Enable/Disable SATA
                                           *|Device.
SATA Controller(s)                        [Enabled]
SATA Mode Selection                        [AHCI]
                                           *|
                                           *|
Serial ATA Port 0                          Empty
  Software Preserve                        Unknown
  Port 0                                   [Enabled]
  SATA Device Type                         [Hard Disk Drive]
Serial ATA Port 1                          Empty
  Software Preserve                        Unknown
  Port 1                                   [Enabled]
  SATA Device Type                         [Hard Disk Drive]
Serial ATA Port 2                          Empty
  Software Preserve                        Unknown
  Port 2                                   [Enabled]
  SATA Device Type                         [Hard Disk Drive]
Serial ATA Port 3                          Empty
  Software Preserve                        Unknown
  Port 3                                   [Enabled]
  SATA Device Type                         [Hard Disk Drive]
Serial ATA Port 4                          Empty
  Software Preserve                        Unknown
                                           *|
                                           *|
-----|-----+-----|-----|
                                           *|>: Select Screen
                                           +|^v: Select Item
                                           +|Enter: Select
                                           +|+/-: Change Opt.
                                           +|F1: General Help
                                           +|F2: Previous Values
                                           +|F3: Optimized Defaults
                                           v|F4: Save & Reset
                                           *|ESC: Exit
                                           *|
                                           |
-----|-----+-----|-----|
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

SATA Controller

Use this item to Enable or Disable SATA Device.

SATA Mode Selection

Determines how SATA controller(s) operate. The optional settings are: AHCI, Intel RST Premium.

4-8 Security

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
Password Description                                |Set Administrator
                                                    |Password
If ONLY the Administrator's password is set,       |
then this only limits access to Setup and is      |
only asked for when entering Setup.              |
If ONLY the User's password is set, then this     |
is a power on password and must be entered to    |
boot or enter Setup. In /--Create New Password---\
have Administrator right |
The password length must |-----|
in the following range: |
Minimum length          3 |<: Select Screen
Maximum length          20 |^v: Select Item
                                                    |Enter: Select
                                                    |+/-: Change Opt.
Administrator Password |F1: General Help
User Password           |F2: Previous Values
                                                    |F3: Optimized Defaults
                                                    |F4: Save & Reset
                                                    |ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Administrator Password

User Password

To set up an Administrator or an User password.

4-9 Boot

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
| Boot Configuration                               |Select the keyboard
| Bootup NumLock State      [Off]                 |NumLock state
| Quiet Boot                 [Enabled]            |
|
| Boot Option Priorities                          |
|
| Driver Option Priorities                        |
| Wake-Up From USB         [Disabled]            |
|
|-----|
|><: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Reset
|ESC: Exit
|-----|
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Bootup NumLock State

To select Power-on state for NumLock, default is <On>

Quiet Boot

The optional settings are: Enabled (default), Disabled.

Wake-Up From USB

The optional settings are: Enabled, Disabled (default).

4-10 Save & Exit

```
Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit

-----
| Save Options                                     | Reset the system after |
| Save Changes and Reset                         | saving the changes.  |
| Discard Changes and Reset                     |                       |
|                                               |                       |
| Default Options                               |                       |
| Restore Defaults                             |                       |
|                                               |                       |
| Boot Override                               |                       |
|                                               |                       |
|-----|-----|
|>X: Select Screen                             |
|^v: Select Item                               |
|Enter: Select                                 |
|+/-: Change Opt.                             |
|F1: General Help                             |
|F2: Previous Values                          |
|F3: Optimized Defaults                       |
|F4: Save & Reset                             |
|ESC: Exit                                    |
|-----|-----|
Version 2.20.1271. Copyright (C) 2020 American Megatrends, Inc.
```

Save Change and Reset

Save configuration and reset

Discard Changes and Reset

Reset without saving the changes

Restore Defaults

To restore the optimal default for all the setup options

4-11 How to update AMI BIOS

STEP 1. Prepare a bootable disc.

(Storage device could be USB pen drive.)

STEP 2. Copy utility program and latest BIOS to your bootable disc.

You may download it from our website.

STEP 3. Here take 3I370DW as an example, insert your bootable disc into X: (X could be C:, A: or others.

It depends on which type of storage device you use.)

Start the computer and type

For legacy mode,

```
X:\>afudos.exe 3I370DWA1.bin /p /b /n /x
```

For UEFI mode,

```
X:\>AfuEfix64.efi 3I370DWA1.bin /p /b /n /x
```

Appendix B: Resolution list

640 x 480 x (256 / 16bit / 32bit)
800 x 600 x (256 / 16bit / 32bit)
1024 x 768 x (256 / 16bit / 32bit)
1152 x 864 x (256 / 16bit / 32bit)
1280 x 600 x (256 / 16bit / 32bit)
1280 x 720 x (256 / 16bit / 32bit)
1280 x 768 x (256 / 16bit / 32bit)
1280 x 800 x (256 / 16bit / 32bit)
1280 x 960 x (256 / 16bit / 32bit)
1280 x 1024 x (256 / 16bit / 32bit)
1400 x 1050 x (256 / 16bit / 32bit)
1440 x 900 x (256 / 16bit / 32bit)
1600 x 900 x (256 / 16bit / 32bit)
1600 x 1200 x (256 / 16bit / 32bit)
1680 x 1050 x (256 / 16bit / 32bit)
1920 x 1080 x (256 / 16bit / 32bit)
1920 x 1200 x (256 / 16bit / 32bit)