

MC60-TE-A Kit

User Guide

GSM/GPRS/GNSS Module Series

Rev. MC60-TE-A_Kit_User_Guide_V1.0

Date: 2016-07-22



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

Office 501, Building 13, No.99, Tianzhou Road, Shanghai, China, 200233

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local office. For more information, please visit:

<http://www.quectel.com/support/salesupport.aspx>

For technical support, or to report documentation errors, please visit:

<http://www.quectel.com/support/techsupport.aspx>

Or email to: Support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2016. All rights reserved.

About the Document

History

Revision	Date	Author	Description
1.0	2016-07-22	Tiger CHENG	Initial

Contents

About the Document	2
Contents	3
Table Index	4
Figure Index	5
1 Introduction	6
1.1. Safety Information	6
2 Product Concept	8
2.1. MC60-TE-A Top and Bottom View	8
3 Interface Application of MC60-TE-A	10
3.1. SIM2 Card Interface	10
3.2. Test Points	11
4 MC60-TE-A Accessories Assembly	13
5 Illustration	14
5.1. Power on	14
5.2. Communicate with GSM Part of Module	15
5.3. Communicate with GNSS Part of Module	16
5.3.1. Use Main UART	16
5.3.2. Use UART3	16
5.4. Firmware Upgrade through the Main UART Port	17
5.5. Compatible Design and Applications	18
6 60-pin Assignment	20
7 Appendix A References	23

Table Index

TABLE 1: PINS OF SIM2 CARD INTERFACE.....	10
TABLE 2: PINS OF TEST-POINT	11
TABLE 3: PIN DEFINITION OF THE 60-PIN DIP CONNECTOR.....	21
TABLE 4: RELATED DOCUMENTS	23

Quectel
Confidential

Figure Index

FIGURE 1: MC60-TE-A TOP VIEW	8
FIGURE 2: MC60-TE-A BOTTOM VIEW	9
FIGURE 3: SIM2 CARD INTERFACE	10
FIGURE 4: TEST POINTS	11
FIGURE 5: MC60-TE-A TOOLKIT ACCESSORIES	13
FIGURE 6: CONNECTION BETWEEN MC60-TE-A AND GNSS/GSM ANTENNA	14
FIGURE 7: S101/S102 SWITCH STATUS	15
FIGURE 8: J107 SHORT CIRCUIT CONNECTION	16
FIGURE 9: POWERGPS TOOL	17
FIGURE 10: USING A PASSIVE ANTENNA	18
FIGURE 11: USING THE BUILT-IN BLUETOOTH ANTENNA	19
FIGURE 12: USING AN EXTERNAL BLUETOOTH ANTENNA	19
FIGURE 13: DIP CONNECTOR OF MC60-TE-A	20

1 Introduction

In order to help you to develop applications with Quectel MC60 module, Quectel supplies corresponding evaluation board (EVB) kit and TE-A kit for you to test the module. This document can help you quickly understand MC60-TE-A interface specifications, electrical and mechanical details and know how to use it.

MC60-TE-A kit is intended to be used in combination with GSM EVB kit for MC60 module testing and evaluation. For detailed description of GSM EVB, please refer to **document [6]**.

1.1. Safety Information

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating Quectel module. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel, and incorporate these guidelines into all manuals supplied with the product. If not so, Quectel assumes no liability for customer's failure to comply with these precautions.



Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. You must comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it is switched off. The operation of wireless appliances in an aircraft is forbidden, so as to prevent interference with communication systems. Consult the airline staff about the use of wireless devices on boarding the aircraft, if your device offers a Airplane Mode which must be enabled prior to boarding an aircraft.



Switch off your wireless device when in hospitals, clinics or other health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.



Cellular terminals or mobiles operating over radio frequency signal and cellular network cannot be guaranteed to connect in all conditions, for example no mobile fee or with an invalid SIM card. While you are in this condition and need emergent help, please remember using emergency call. In order to make or receive a call, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.



Your cellular terminal or mobile contains a transmitter and receiver. When it is ON , it receives and transmits radio frequency energy. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders, etc.

Quectel
Confidential



Figure 2: MC60-TE-A Bottom View

- A: Serial selector switch
- B: GSM antenna interface
- C: GNSS antenna interface
- D: BT antenna interface
- E: LED indicator
- F: SIM2 card interface
- G: Test points

NOTES

1. Some interfaces and test pins are reserved only for engineers to debug some functions which are not used for customer.
2. Some functions are only supported in certain software versions.

3 Interface Application of MC60-TE-A

3.1. SIM2 Card Interface



Figure 3: SIM2 Card Interface

Table 1: Pins of SIM2 Card Interface

Pin	Signal	I/O	Description
1	CD1		Connect to Ground
2	CD2		Not connected
3	SIM_DATA	I/O	SIM card data I/O
4	SIM_CLK	O	SIM card clock
5	VPP		Not connected

6	SIM_RST	O	SIM card reset
7	GND		Ground
8	SIM_VDD		Power supply for SIM card
9	GND		Ground
10	GND		Ground

3.2. Test Points

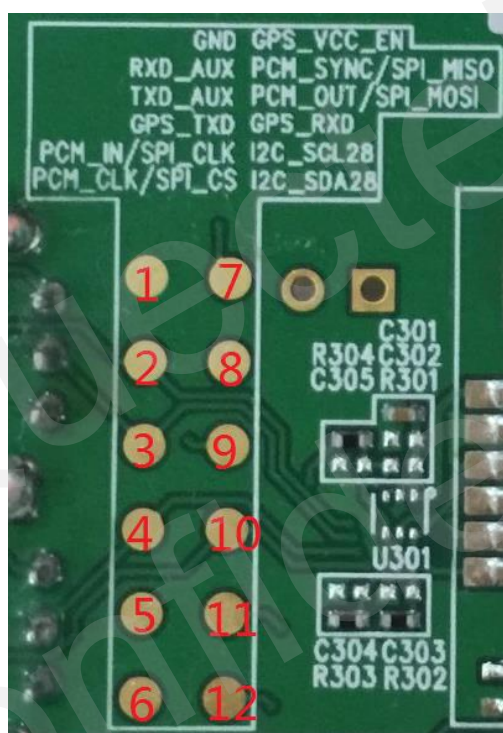


Figure 4: Test Points

Table 2: Pins of Test-point

Pin	Signal	I/O	Description
1	GND		Ground
2	RXD_AUX	I	Receive data
3	TXD_AUX	O	Transmit data

4	GNSS_TXD	O	Transmit data
5	PCM_IN/SPI_CLK		Reserved
6	PCM_CLK/SPI_CS		Reserved
7	GNSS_VCC_EN	O	GNSS power enabled
8	PCM_SYNC/SPI_MISO		Reserved
9	PCM_OUT/SPI_MOSI	I/O	General purpose input/output port
10	GNSS_RXD	I	Receive data
11	I2C_SCL28		Reserved
12	I2C_SDA28		Reserved

4 MC60-TE-A Kit Accessories Assembly



Figure 5: MC60-TE-A Toolkit Accessories

- A: GNSS Antenna
- B: CD
- C: GNSS Antenna Patch Lead

5 Illustration

MC60-TE-A kit is intended to be used in combination with GSM EVB kit for MC60 module testing and evaluation. The connection between MC60-TE-A and GNSS/GSM antenna can refer to the following figure.



Figure 6: Connection between MC60-TE-A and GNSS/GSM Antenna

5.1. Power on

Power on procedure of MC60-TE-A is controlled by GSM EVB. Please refer to **document [6]** for detailed power on procedures.

5.2. Communicate with GSM Part of Module

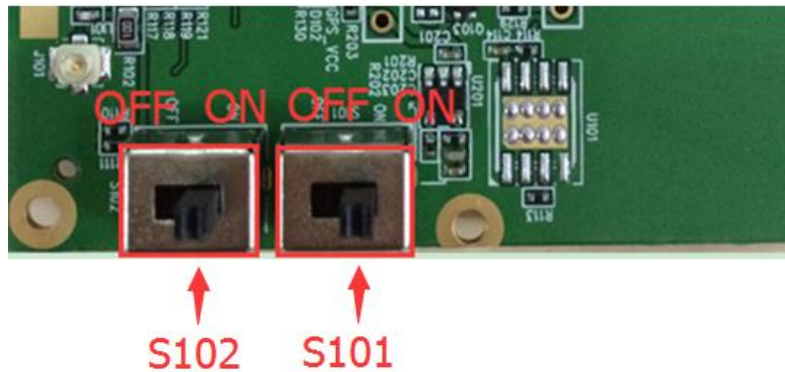


Figure 7: S101/S102 Switch Status

- (1) If the main UART is used for communication with MC60's GSM part, please turn the Switch S101 and S102 to **ON** state on MC60-TE-A, and then connect the main UART of EVB to PC's USB port with the USB to UART converter cable. This is the recommended method. Switch status description is available in the above figure.

If the UART3 is used for communication with the GSM part, please turn the Switch S101 to **OFF** and S102 to **ON** state on MC60-TE-A, and then connect the UART3 of EVB to PC's USB port with the USB to UART converter cable. Currently, the software does not support this method.

- (2) Open the HyperTerminal (AT command window) on PC. The location of the HyperTerminal in Windows XP is: START→Programs→Accessories→Communication→HyperTerminal. Set appropriate Baud Rate (such as 115200 bps) and COM number which can be checked by the Device Manager on PC.
- (3) Connect the antenna to the GSM_ANT on MC60-TE-A with an RF cable.
- (4) Insert SIM card into the SIM card socket.
- (5) Insert earphone or handset into audio interface.
- (6) For power on procedure, please refer to **document [6]**.
- (7) After waiting for 2~3 seconds, customer should first input "AT" or "at" string once or more until receiving "OK" from the module in the HyperTerminal.

The module is set to autobauding mode in default configuration. This operation is to synchronize the baud rate between the computer and the module.

- (8) Input AT command and the module will execute its corresponding function.

Customer can refer to **Chapter 7** in **document [5]** for the details of AT commands. For instance, when input **ATD112**, an emergency call will be established.

5.3. Communicate with GNSS Part of Module

5.3.1. Use Main UART

- (1) Turn the Switch S101 and S102 to **ON** state on MC60-TE-A, and then connect the main UART of EVB to PC's USB port with the USB to UART converter cable. This is the recommended method.
- (2) Open the HyperTerminal (AT command window) on PC. The location of the HyperTerminal in Windows XP is: START→Programs→Accessories→Communication→HyperTerminal. Set appropriate Baud Rate (such as 115200 bps) and COM number which can be checked by the Device Manager on PC.
- (3) Connect the antenna to the GNSS_ANT on MC60-TE-A with an RF cable.
- (4) For power on procedure, please refer to **document [6]**.
- (5) After waiting for 2~3 seconds, customer should first input "AT" or "at" string once or more until receiving "OK" from the module in the HyperTerminal.
- (6) Send corresponding AT commands to turn on/off the GNSS part. When GNSS is powered on, the LED D102 on MC60-TE-A will be lighted and NMEA data will be output. For details of the corresponding AT commands, please refer to **document [1]**.

5.3.2. Use UART3

- (1) Turn the Switch S101 to **ON** and S102 to **OFF** state on MC60-TE-A, and then connect the UART3 of EVB to PC's USB port with the USB to UART converter cable.
- (2) Using a short circuit cap to connect the J107.

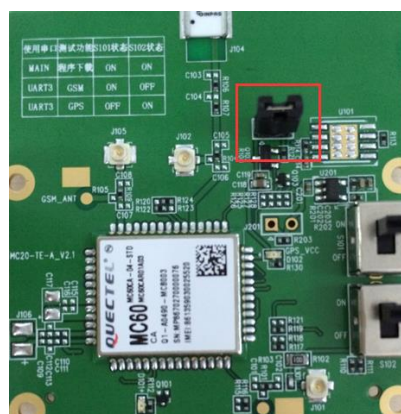


Figure 8: J107 Short Circuit Connection

- (3) Connect the antenna to the GNSS_ANT on MC60-TE-A with an RF cable.
- (4) Insert the plug of the 5V power adapter. Turn the Switch S202 to **ON** state on the EVB. The LED D503 on the EVB and the LED D102 on MC60-TE-A will be lighted, and NMEA data will be output.
- (5) The PowerGPS tool can be used to view the status of GPS & GLONASS receiver conveniently. When the tool is opened, the user interface as shown below will be displayed.



Figure 9: PowerGPS Tool

5.4. Firmware Upgrade through the Main UART Port

- (1) Switch the S101 and S102 on MC60-TE-A to **ON** state.
- (2) Start the Firmware Upgrade Tool in the PC.
- (3) Press the **START** button in the Firmware Upgrade Tool.
- (4) Switch the S201 and S202 on the EVB to **ON** state. For details, please refer to **document [6]**.

After these steps, the firmware upgrading process will be proceeding. For more details, please refer to **Chapter 7** in **document [4]**.

Built-in Bluetooth Antenna

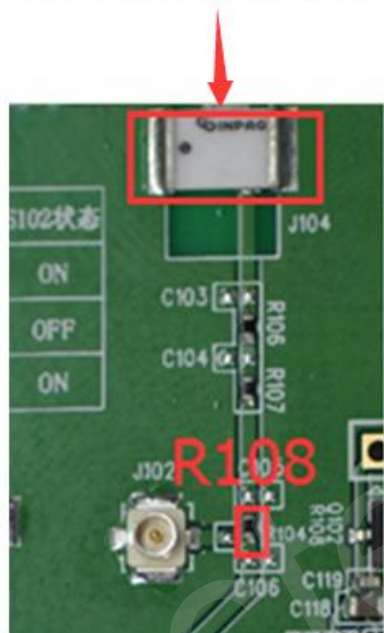


Figure 11: Using the Built-in Bluetooth Antenna

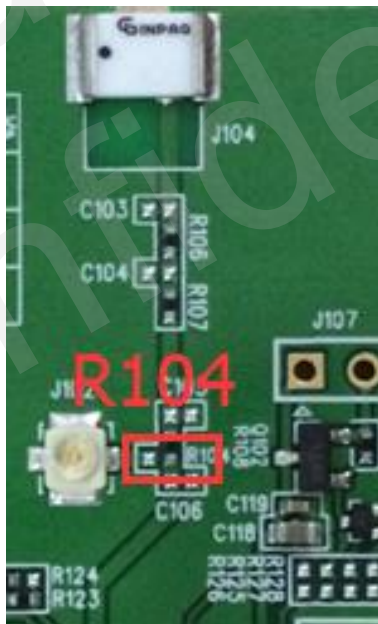


Figure 12: Using an External Bluetooth Antenna

6 60-pin Assignment

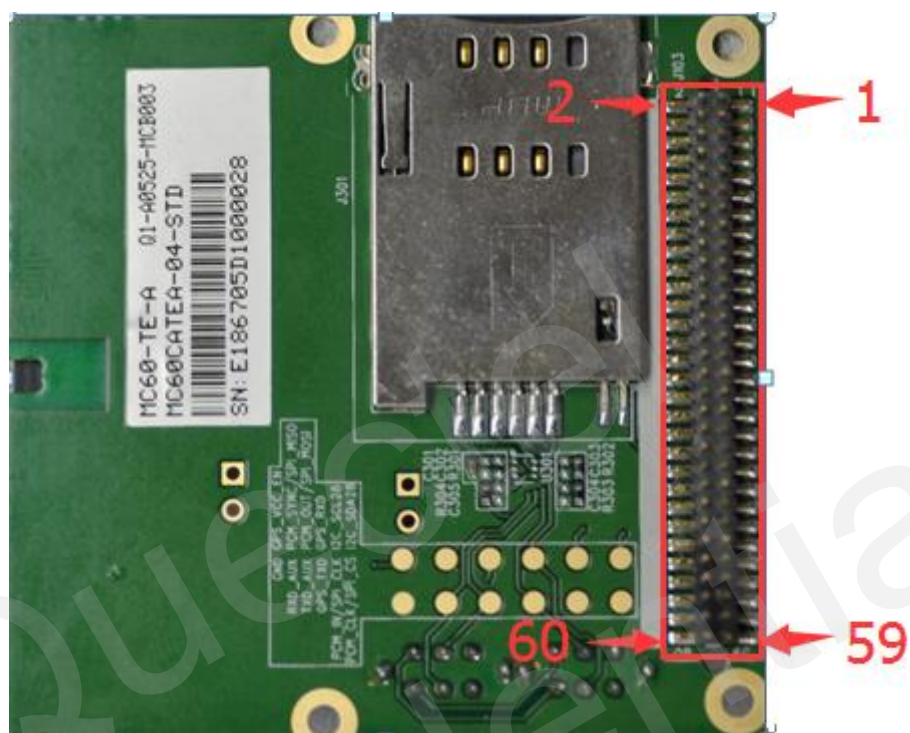


Figure 13: DIP Connector of MC60-TE-A

Table 3: Pin Definition of the 60-pin DIP Connector

Pin NO.	Pin Name	I/O	Pin NO.	Pin Name	I/O
1	VBAT	I	2	GND	
3	VBAT	I	4	GND	
5	VBAT	I	6	GND	
7	VBAT	I	8	GND	
9	VBAT	I	10	GND	
11	/	/	12	ADC0	I
13	/	/	14	VRTC	I/O
15	VDD_EXT	O	16	NETLIGHT	O
17	PWRKEY	I	18	KBR0	O
19	/	/	20	KBR1	O
21	GPIO0	I/O	22	KBR2	O
23	/	/	24	TXD3	O
25	SIM1_VDD	O	26	RXD3	I
27	SIM1_RST	O	28	KBC0	I
29	SIM1_DATA	I/O	30	KBC1	I
31	SIM1_CLK	O	32	/	/
33	SIM1_PRESENCE	I	34	/	/
35	/	/	36	/	/
37	DCD	O	38	SD_CMD	O
39	DTR	I	40	SD_CLK	O
41	RXD	I	42	SD_DATA	I/O
43	TXD	O	44	/	/
45	RTS	I	46	/	/
47	CTS	O	48	DBG_RXD	I
49	RI	O	50	DBG_TXD	O
51	/	/	52	/	/

53	SPK1P	O	54	MICP	I
55	SPK1N	O	56	MICN	I
57	SPK2P	O	58	MICP	I
59	/	/	60	MICN	I

Quectel
Confidential

7 Appendix A References

Table 4: Related Documents

SN	Document Name	Remark
[1]	Quectel_MC60_AT_Commands_Manual	AT commands manual
[2]	Quectel_GSM_UART_Application_Note	Serial port application note
[3]	Quectel_MC60_Hardware_Design	Hardware design
[4]	Quectel_GSM_FW_UPGRADE_AN01	Firmware upgrade application note
[5]	Quectel_GSM_DUAL_UART_Application_Note	GSM DUAL UART application note
[6]	Quectel_GSM_EVB_User_Guide	GSM EVB user guide